

Generic Hy-T26 X15 Pro

Hy-T26 X15 Pro Wireless Bluetooth Earphones User Manual

Model: Hy-T26 X15 Pro | Brand: Generic

INTRODUCTION

Thank you for choosing the Hy-T26 X15 Pro Wireless Bluetooth Earphones. These earphones are designed to provide a high-fidelity audio experience with advanced features such as Bluetooth 5.4 connectivity, intelligent noise reduction, and an IPX5 waterproof rating. This manual will guide you through the setup, operation, and maintenance of your new earphones to ensure optimal performance and longevity.

PRODUCT OVERVIEW AND PACKAGE CONTENTS

Before you begin, please ensure all items are present in the package:

- Hy-T26 X15 Pro Wireless Bluetooth Earphones (Left and Right)
- Charging Case with Digital Display
- USB Charging Cable (Type-C)
- User Manual



Image: The Hy-T26 X15 Pro earphones (white) and their charging case, with a model wearing one earphone.



Image: Both black and white versions of the Hy-T26 X15 Pro earphones and their charging cases, alongside a smartphone, illustrating their compact design.

SETUP

1. Charging the Earphones and Case

Before first use, fully charge the earphones and the charging case.

1. Place the earphones into the charging case. Ensure they are correctly seated; magnetic contacts will hold them in place.
2. Connect the USB charging cable to the charging port on the case and the other end to a USB power source (e.g., computer, wall adapter).
3. The digital display on the charging case will show the battery level. Allow sufficient time for a full charge.



Image: A close-up of the black charging case, highlighting the digital display that shows battery percentage and charging status, with a USB-C cable connected.



Image: The white Hy-T26 X15 Pro earbuds being placed into their charging case, demonstrating the magnetic connection points for charging.

2. Bluetooth Pairing

The earphones use Bluetooth 5.4 for stable and efficient wireless connection.

1. Open the charging case. The earphones will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Hy-T26 X15 Pro" from the list of found devices.
4. Once connected, a voice prompt will confirm successful pairing.

Note: The earphones will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

3. Wearing the Earphones

The Hy-T26 X15 Pro earphones feature an ear-hook design for a secure and comfortable fit, especially during physical activity.

- Identify the Left (L) and Right (R) earphones.
- Gently place the earbud into your ear canal and hook the ear-hook over the top of your ear.
- Adjust the earphone until it feels snug and comfortable.

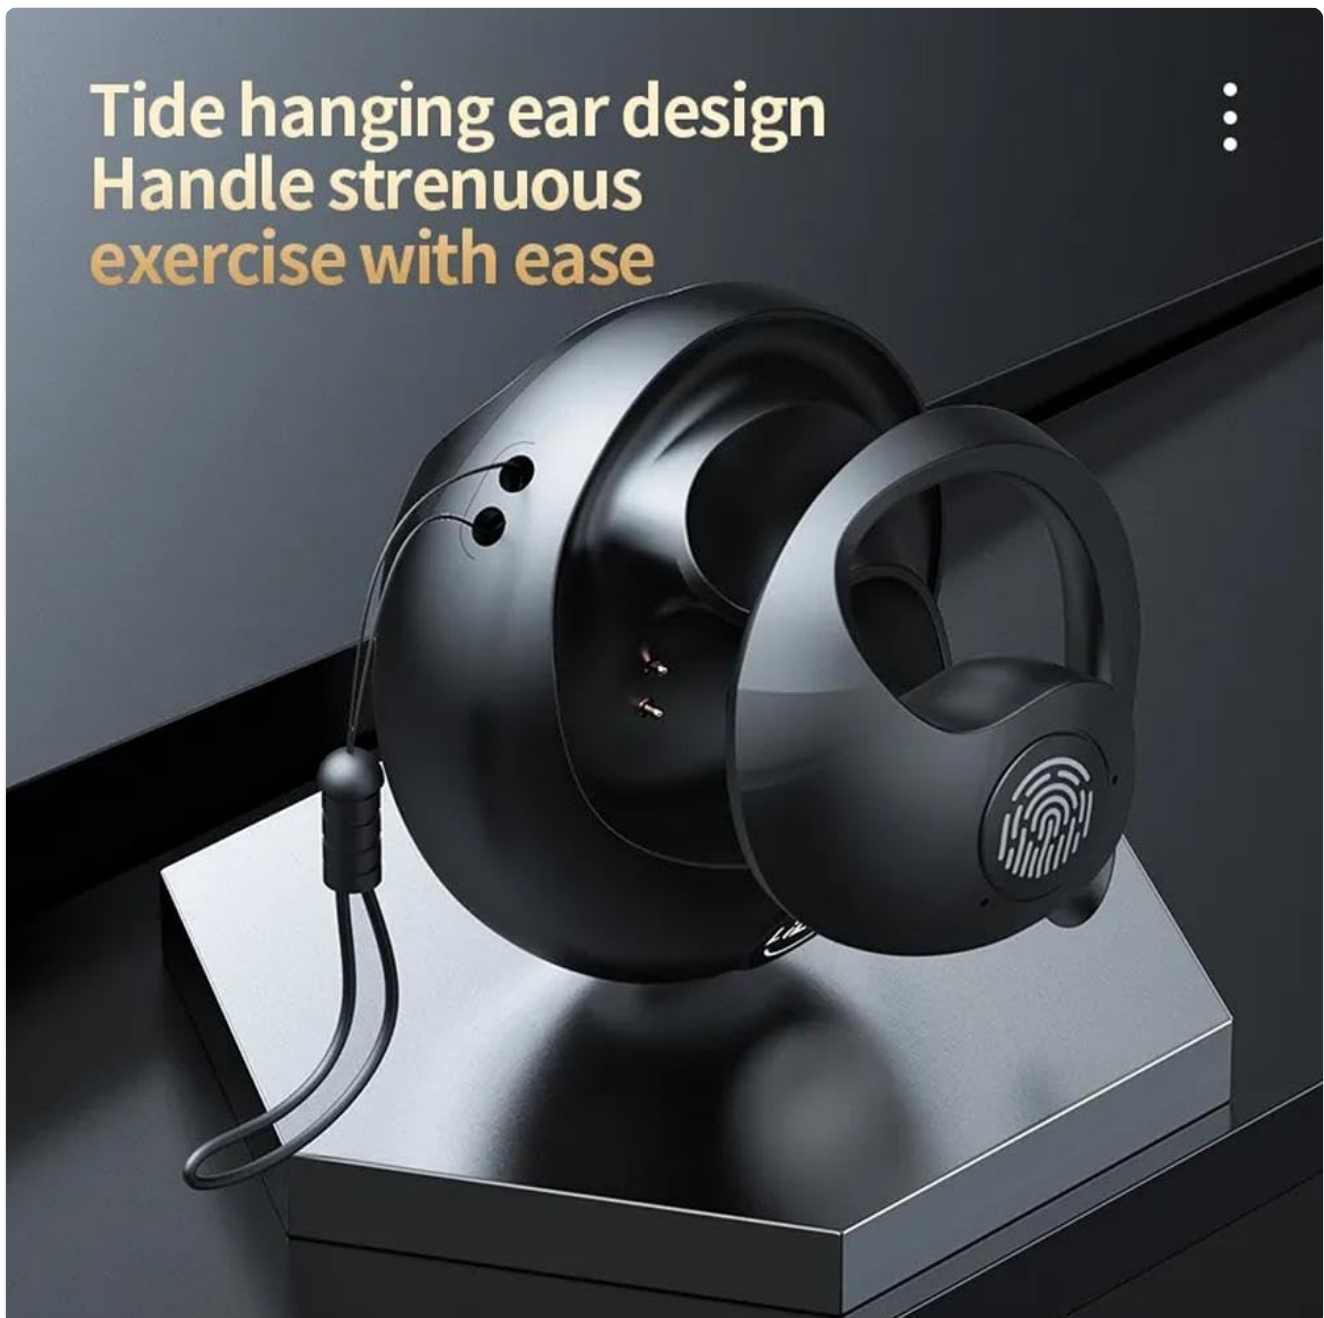


Image: A close-up of the black Hy-T26 X15 Pro earphone, emphasizing its ear-hook design for secure wear during strenuous exercise.

OPERATING INSTRUCTIONS

The earphones feature touch controls for easy management of audio and calls.

Power On/Off

- **Power On:** Open the charging case, and the earphones will automatically power on. Alternatively, long-press the touch area on both earphones for 3 seconds.
- **Power Off:** Place the earphones back into the charging case and close the lid. Alternatively, long-press the touch area on both earphones for 5 seconds.

Music Playback

- **Play/Pause:** Single tap the touch area on either earphone.
- **Next Track:** Double tap the touch area on the right earphone.
- **Previous Track:** Double tap the touch area on the left earphone.
- **Volume Up:** Triple tap the touch area on the right earphone.
- **Volume Down:** Triple tap the touch area on the left earphone.

Call Management

- **Answer/End Call:** Single tap the touch area on either earphone.
- **Reject Call:** Long-press the touch area on either earphone for 2 seconds.

Voice Assistant

- **Activate Voice Assistant:** Long-press the touch area on either earphone for 2 seconds (when not on a call).

Gaming Mode / Low Latency

The earphones support a low-latency mode for gaming, as indicated by product images.

- **Toggle Gaming Mode:** Specific gesture not provided, typically a quadruple tap or a long press on a specific earbud. Refer to the quick start guide included in your package for exact instructions if this feature is critical.



Image: The black Hy-T26 X15 Pro earphones and case, highlighting features like "Truly non-inductive zero latency" for gaming, and "Game/music/call three modes."

MAINTENANCE

Cleaning

- Regularly clean the earphones and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earphones and case are clean and free of debris to maintain proper charging.

Storage

- When not in use, store the earphones in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

Water Resistance (IPX5)

The Hy-T26 X15 Pro earphones are IPX5 water-resistant, meaning they can withstand sweat and light splashes of water. They are not designed for submersion in water.

- Do not expose the earphones to running water or submerge them.
- If they get wet, wipe them dry immediately with a soft cloth before placing them back in the charging case.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earphones do not power on.	Low battery.	Place earphones in the charging case and charge fully.
Cannot pair with device.	Bluetooth is off on device; earphones not in pairing mode; interference.	Ensure Bluetooth is enabled on your device. Take earphones out of case to enter pairing mode. Move closer to the device. Turn off and on Bluetooth on your device.
No sound or intermittent sound.	Earphones not connected; volume too low; out of range.	Check Bluetooth connection. Increase volume on both earphones and device. Move closer to the device.
Only one earphone working.	One earphone not charged; pairing issue.	Ensure both earphones are charged. Place both back in the case, close, then reopen to re-establish connection. Re-pair if necessary.
Charging case display not working.	Case battery depleted.	Connect the charging case to a power source using the USB cable.

SPECIFICATIONS

Feature	Detail
Model Name	Hy-T26 X15 Pro
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 5.4
Water Resistance Level	IPX5 (Water Resistant)
Frequency Range	20Hz - 20,000Hz
Audio Driver Type	Dynamic Driver
Ear Placement	In Ear / Over Ear (Ear-hook design)

Feature	Detail
Control Type	Media Control (Touch)
Compatible Devices	Phones, Laptops, Bluetooth-enabled Devices
Included Components	Bluetooth Wireless Earphone, Charging Case, USB Charging Cable

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.