

ECONTROLLY RCEC-EN22654HS

ECONTROLLY EN-22654HS Replacement Remote Control User Manual

Compatible with Hisense TV Models: 32K220W, 40K220PW, 50K220PW, 55K220PW

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY EN-22654HS replacement remote control. This remote is designed to be fully compatible with various Hisense TV models, offering a direct replacement without the need for complex programming.

Please read this manual carefully before using the remote control to ensure proper operation and to familiarize yourself with its features.

2. SETUP AND FIRST USE

2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align with the markings inside.
4. Slide the battery cover back into place until it clicks securely.





Image: Back view of the remote control with the battery compartment cover removed, showing the slots for two AAA batteries.

2.2. Initial Use (No Programming Required)

The ECONTROLLY EN-22654HS remote control is pre-programmed for compatible Hisense TV models. No additional programming or pairing steps are required. Simply install the batteries, point the remote at your TV, and begin using it.

3. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your Hisense TV. Below is a general overview of key buttons and their functions.





Image: Front view of the remote control, displaying all buttons and their labels.

3.1. Button Functions

Button	Function
Power (Red)	Turns the TV on or off.
MUTE	Mutes or unmutes the TV sound.
SOURCE	Selects input sources (HDMI, AV, etc.).
VOL +/-	Adjusts the volume level.
CH +/-	Changes TV channels.
Number Buttons (0-9)	Direct channel selection.
MENU	Accesses the TV's main menu.
Navigation (Up/Down/Left/Right/OK)	Navigates through menus and confirms selections.
RETURN / EXIT	Goes back to the previous menu or exits the current menu.
PVR / Playback Controls	Controls for PVR functions and media playback (Play, Pause, Stop, Rewind, Fast Forward).
Anyview Cast ON/OFF	Activates or deactivates Anyview Cast feature.
DMP	Accesses Digital Media Player functions.
FAV	Accesses favorite channels list.
HiSmart	Accesses Hisense Smart TV features.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.
INFO	Displays program information.

Button	Function
PRE CH	Returns to the previously viewed channel.
LANG.	Changes audio language.
SUBT.	Activates or deactivates subtitles.
TEXT	Accesses Teletext.
INDEX	Accesses Teletext index.
SUB PAGE	Navigates Teletext sub-pages.
PICTURE / SOUND / SIZE / ZOOM	Direct access to picture, sound, screen size, or zoom settings.

4. MAINTENANCE

4.1. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

4.2. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Make sure there are no obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range of the TV's IR receiver.
- **Some buttons not working:**
 - Check if the batteries are low and replace them.
 - Clean the remote control surface, especially around the unresponsive buttons, to remove any debris.
 - Verify that your TV model is listed as compatible.
- **TV not turning on/off:**
 - Confirm the TV is plugged into a working power outlet.
 - Try using the power button directly on the TV.

If issues persist after following these steps, please refer to the support section or your TV's original manual for further assistance.

6. SPECIFICATIONS

- **Model:** RCEC-EN22654HS
- **Compatible with:** Hisense TV models 32K220W, 40K220PW, 50K220PW, 55K220PW
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 2.3 ounces (without batteries)
- **Color:** Black
- **Special Feature:** No programming required

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the retailer. As this is a replacement remote, specific warranty terms may vary. For general inquiries or further assistance, please visit the ECONTROLLY official website or contact their customer service.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

