

CUSIMAX cmip-C303

Cusimax CMIP-C303 Triple Infrared Countertop Burner User Manual

Model: CMIP-C303 | Brand: CUSIMAX

1. INTRODUCTION

Thank you for choosing the Cusimax CMIP-C303 Triple Infrared Countertop Burner. This appliance is designed to provide efficient and versatile cooking capabilities for various culinary needs. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.

- During initial use, a protective coating on the heating elements may cause slight smoke or odor. This is normal and will disappear after several uses. Ensure adequate ventilation.


3. PRODUCT FEATURES

- **Triple Cooking Zones:** Three independent heating areas allow for simultaneous cooking of different dishes, enhancing efficiency.
- **Universal Cookware Compatibility:** Suitable for virtually all types of cookware, unlike induction cooktops.
- **High Power Output:** Total of 1,800 watts (650W left + 500W center + 650W right) for rapid heating and efficient cooking. Operates on 110-120 volts.
- **Adjustable Temperature Control:** 11-level temperature settings controlled by twist knobs for precise heat management.
- **Safety Features:** Indicator light illuminates when heating or warming, and automatically turns off upon overheating or reaching desired temperature. Automatic safety shutdown for overheating protection.
- **Durable and Easy to Clean:** Smooth heating panels made of high-quality crystalline ceramic and a stainless steel body ensure durability and easy cleaning with a damp cloth.



Figure 1: The Cusimax Triple Infrared Burner demonstrating its versatility for different cooking methods such as keeping food warm, stir-frying, and deep-frying.

1800W POWER HEATING

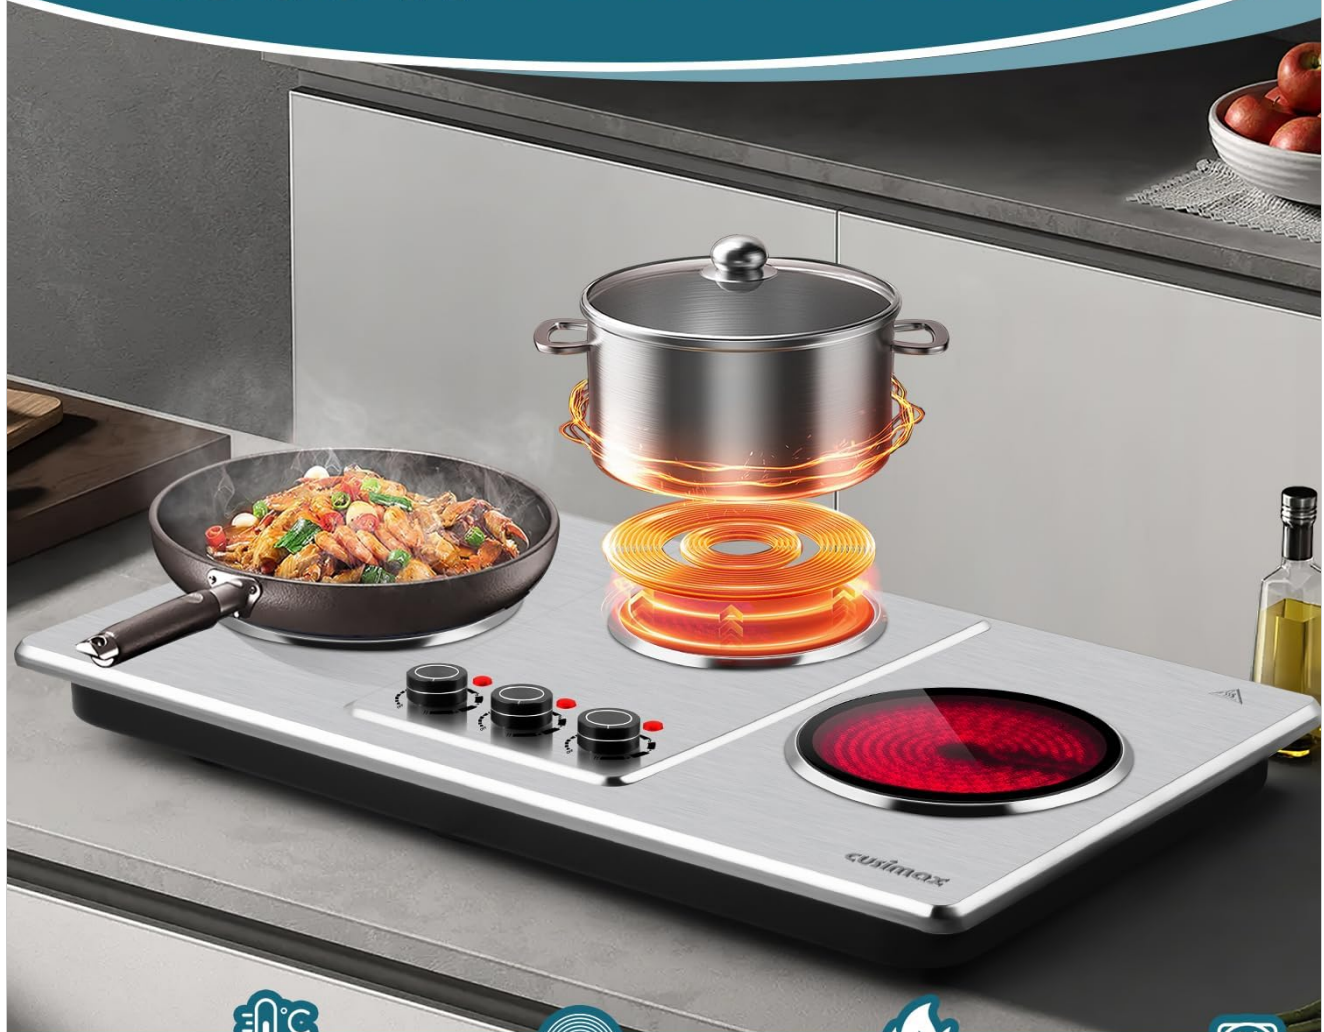

Temperature Control

Uniform Heating

650W+500W+650W High Power

Heat Dissipation Function

Figure 2: Key features of the Cusimax Triple Infrared Burner, including its 1800W power, precise temperature control, uniform heating capability, and efficient heat dissipation system.

4. SETUP

- Unpacking:** Carefully remove the hot plate from its packaging. Retain all packaging materials for future storage or transport.
- Placement:** Place the hot plate on a dry, stable, and heat-resistant surface. Ensure there is adequate ventilation around the appliance. Do not place it near flammable materials.
- Power Connection:** Plug the power cord into a standard 110-120V electrical outlet. Ensure the outlet is properly grounded.
- Initial Burn-in:** Before first use, it is recommended to turn on the appliance to its highest setting for 3-5 minutes in a well-ventilated area without any cookware. This will burn off any protective coating and eliminate initial odors or smoke. This is normal and no cause for concern.

5. OPERATING INSTRUCTIONS

1. **Placing Cookware:** Place your desired cookware (pot or pan) directly onto the heating element.
2. **Power On:** Turn the corresponding control knob for the desired cooking zone to your preferred temperature setting (from 1 to 11).
3. **Indicator Light:** The red indicator light will illuminate, signaling that the burner is heating up.
4. **Temperature Adjustment:** Adjust the knob to increase or decrease the heat as needed for your cooking task. The indicator light may cycle on and off during operation as the thermostat regulates the temperature.
5. **Power Off:** Once cooking is complete, turn the control knob back to the "OFF" position. The indicator light will turn off.
6. **Cool Down:** Allow the appliance to cool completely before cleaning or storing. The surface will remain hot for some time after use.



Figure 3: The Cusimax Triple Infrared Burner positioned on a countertop, illustrating its readiness for various cooking applications.

6. COMPATIBLE COOKWARE

The Cusimax CMIP-C303 is designed to be compatible with all types of flat-bottomed cookware, including:

- Stainless Steel Pots
- Glass Pots
- Aluminum Pans
- Cast Iron Skillets/Steak Plates
- Frying Pans
- Teapots
- Ceramic Pots

Ensure the base of your cookware is flat and makes full contact with the heating element for optimal heat transfer and efficiency.

Compatible With All Ware



Figure 4: An illustration of the wide range of cookware compatible with the Cusimax Triple Infrared Burner, including different materials and types of pots and pans.

7. CLEANING AND MAINTENANCE

1. **Always Unplug:** Before cleaning, ensure the hot plate is unplugged from the power outlet and has completely cooled down.
2. **Wipe Surfaces:** The smooth crystalline ceramic heating panels and stainless steel body can be easily cleaned by wiping with a clean, damp cloth. For stubborn stains, use a mild non-abrasive cleaner.
3. **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.
4. **Do Not Immerse:** Never immerse the hot plate in water or any other liquid.
5. **Storage:** Store the appliance in a dry place when not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; control knob not turned on.	Ensure the power cord is securely plugged into a working outlet. Turn the control knob to a desired heat setting. Check the circuit breaker.
Smoke or odor during first use.	Protective coating burning off.	This is normal. Operate the appliance at the highest setting for 3-5 minutes in a well-ventilated area without cookware. The smoke/odor will dissipate.
Heating element cycles on and off.	Normal thermostat operation.	This is normal temperature regulation by the built-in thermostat to maintain the set temperature.
Food cooks slowly or unevenly.	Incorrect temperature setting; unsuitable cookware; insufficient power.	Adjust temperature setting higher. Ensure cookware has a flat bottom and is compatible. Verify power supply is stable.

9. SPECIFICATIONS

- **Model Number:** CMIP-C303
- **Brand:** CUSIMAX
- **Color:** Silver
- **Material:** Stainless Steel
- **Heating Elements:** 3 (Infrared)
- **Product Dimensions:** 17.5"D x 28.5"W x 4.6"H
- **Wattage:** 1800.0 W (650W left + 500W center + 650W right)
- **Controls Type:** Rotary Knobs (11 Temperature Settings)
- **Item Weight:** 14.62 pounds
- **Power Source:** Electric (110-120V)
- **Certification:** ETL Certified

Product Details



Figure 5: Detailed view of the Cusimax Triple Infrared Burner, highlighting its dimensions and components such as the stainless steel body, crystallite glass plate, and user-friendly temperature control knobs.

10. WARRANTY AND SUPPORT

Cusimax offers a 30-day hassle-free return policy. All CUSIMAX products have passed ETL certification and comply with safety standards. If you encounter any issues with your product, please do not hesitate to contact Cusimax customer service for assistance, resolution, or product replacement.

For further support, please visit the official CUSIMAX Store: [CUSIMAX Store on Amazon](#).