

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RANRAO](#) /

› [RANRAO 16800W Portable 7-Core Windproof Outdoor Gas Stove Instruction Manual](#)

RANRAO ZOQGNFFA18G6HI0R14Y5NRQMPRR

RANRAO 16800W Portable 7-Core Windproof Outdoor Gas Stove Instruction Manual

Model: ZOQGNFFA18G6HI0R14Y5NRQMPRR

INTRODUCTION

Welcome to the instruction manual for your RANRAO Portable 7-Core Windproof Outdoor Gas Stove. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your gas stove. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Failure to follow these safety instructions may result in serious injury, fire, or property damage.

- Use this appliance outdoors only in a well-ventilated area. Never use indoors, in a tent, or in any enclosed space.
- Keep the stove away from flammable materials, including tents, clothing, and dry vegetation. Maintain a safe distance from any combustible surfaces.
- Ensure all gas connections are secure and leak-free before attempting to ignite the stove. Perform a leak test with soapy water.
- Do not leave the stove unattended while in operation. Always supervise cooking.
- Keep children and pets away from the stove during operation and while it is cooling down.
- Allow the stove to cool completely before handling, cleaning, or storing. Hot surfaces can cause severe burns.
- Use only with compatible gas canisters or tanks as specified by the manufacturer. This model (Type B) is designed for long gas tanks.
- Do not modify the stove or its components. Any alterations can be dangerous and will void the warranty.
- Always have a fire extinguisher or water readily available when operating the stove.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x RANRAO Portable 7-Core Windproof Outdoor Gas Stove
- 1 x Storage Bag

SETUP

Follow these steps to set up your gas stove:

1. Unpack the stove and its components from the storage bag.
2. Place the stove on a stable, level, non-flammable surface, ensuring adequate clearance from any combustible materials.
3. Connect the gas hose to the stove's inlet. Ensure a tight and secure connection by hand-tightening.
4. Connect the other end of the gas hose to your compatible gas canister or tank. This model (Type B) is designed for long gas tanks. Ensure the connection is secure.
5. **Perform a Leak Test:** Apply a soapy water solution to all gas connections (stove inlet, hose connections, and gas tank connection). If bubbles appear, there is a gas leak. Tighten connections or replace seals as necessary. **Do not proceed if a leak is detected.**



This image shows the RANRAO portable gas stove with its flexible gas hose and regulator attached, illustrating a proper connection setup.

OPERATING INSTRUCTIONS

Follow these steps for safe and efficient operation:

1. **Ignition:** Slowly open the gas valve on the gas canister/tank. Turn the control knob on the stove counter-clockwise to release a small amount of gas. Immediately use an external igniter (e.g., lighter or match) to light the gas at the burner head.

2. **Flame Adjustment:** Once lit, adjust the flame intensity using the control knob. Turn clockwise to decrease the flame and counter-clockwise to increase it. The stove features 7 burner cores for powerful and even heating, allowing for precise temperature control.
3. **Cooking:** Place your cookware securely on the serrated pot support. The stove's windproof design helps maintain a stable and concentrated flame, even in outdoor conditions. The 16800W power output allows for rapid heating, boiling 1 liter of water in approximately 2 minutes.



This image illustrates the RANRAO gas stove actively being used for cooking outdoors, demonstrating its stable flame and pot support with cookware.

4. **Shutting Down:** When finished cooking, turn the control knob fully clockwise to extinguish the flame. Immediately close the gas valve on the canister/tank completely.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your stove:

- **Cleaning:** Allow the stove to cool completely before cleaning. Wipe the stove body with a damp cloth. Do not use abrasive cleaners, harsh chemicals, or steel wool, as these can damage the finish.
- **Burner Care:** Ensure the burner cores are free from food debris or blockages. Use a soft brush or compressed air if necessary to clear any obstructions.
- **Gas System:** Disconnect the gas canister/tank after each use and store it separately according to its

manufacturer's instructions. Regularly inspect the gas hose and all connections for any signs of wear, cracks, or damage. Replace any damaged components immediately.

- **Storage:** Store the stove in its provided storage bag in a dry, cool, and well-ventilated place, away from direct sunlight, extreme temperatures, and corrosive materials.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Stove does not ignite	No gas flow or igniter issue	Check gas canister connection, ensure gas valve is fully open. Verify igniter is functioning.
Weak or inconsistent flame	Low gas pressure, partially blocked burner, or low fuel	Ensure gas canister is not empty. Clean burner cores. Check for kinks in the gas hose.
Gas leak detected (soapy water test)	Loose connection or damaged seal/hose	Immediately turn off gas. Tighten all connections. If leak persists, replace seals or the gas hose. Do not use until the leak is completely resolved.
Flame blows out easily	Strong wind or insufficient gas flow	Ensure stove is placed in a sheltered area. While the stove has a windproof design, extreme conditions may affect flame stability. Check gas flow.

SPECIFICATIONS

Detailed technical specifications for the RANRAO Portable 7-Core Windproof Outdoor Gas Stove:

Feature	Detail
Brand	RANRAO
Model Number	ZOQGNFFA18G6HI0R14Y5NRQMPRR
Power Output	Up to 16800 W
Material	Stainless Steel, Copper
Dimensions (L x W x H)	Approximately 22.6 cm x 22 cm x 13 cm
Weight	Approximately 1.4 kg
Burner Cores	7
Wind Protection	Level 6 Windproof Design
Gas Tank Compatibility	Designed for long gas tanks (Type B)



This image provides a visual representation of the stove's dimensions, indicating a width of 22.6 cm and a height of 22 cm.

WARRANTY AND CUSTOMER SUPPORT

Specific warranty details for this product are not provided in the available information. Please refer to your purchase documentation or contact the retailer directly for warranty terms and conditions.

For technical support, product inquiries, or assistance with any issues not covered in this manual, please contact RANRAO customer service through the vendor's official channels or the platform where the product was purchased.