

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [APPASO](#) /

› **APPASO Touchless Kitchen Faucet with Pull-Down Sprayer and Soap Dispenser, Model AP-APS123BTG, Brushed Gold - Instruction Manual**

APPASO AP-APS123BTG

APPASO Touchless Kitchen Faucet Instruction Manual

Model: AP-APS123BTG (Brushed Gold)

1. INTRODUCTION

Thank you for choosing the APPASO Touchless Kitchen Faucet. This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your new faucet. Please read this manual thoroughly before installation and retain it for future reference.

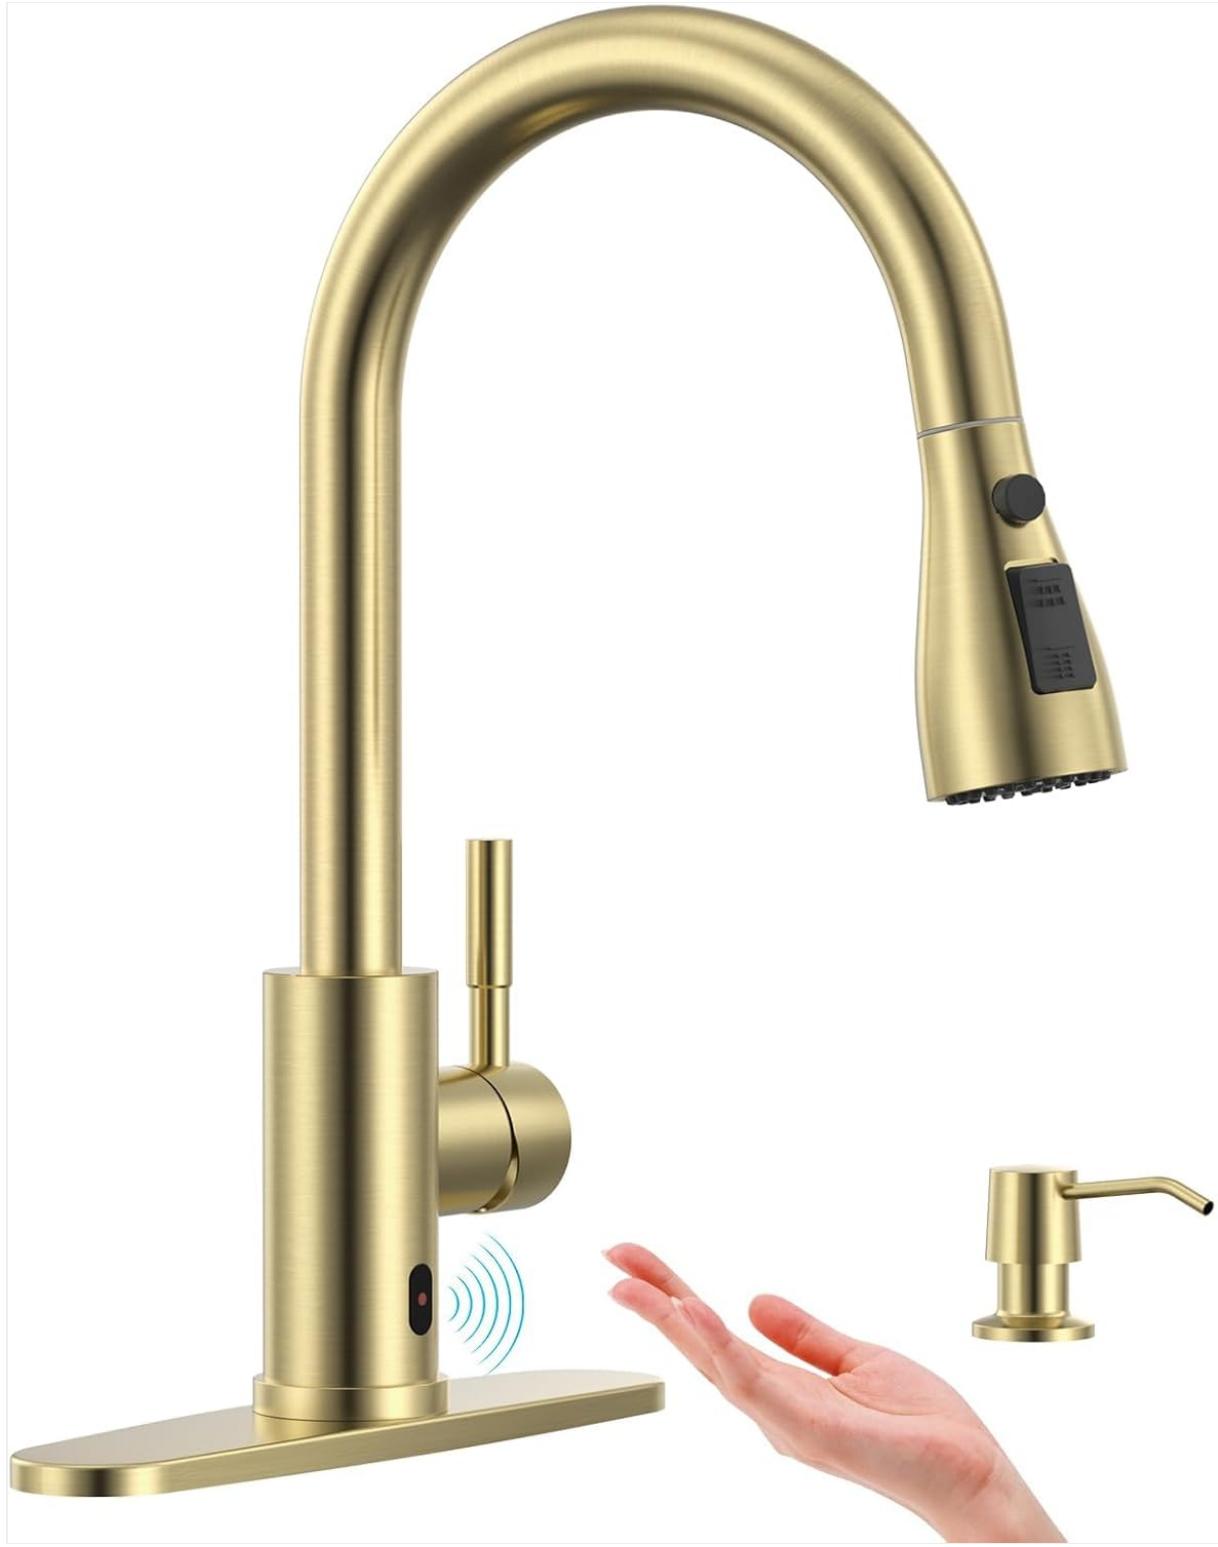


Image: APPASO Touchless Kitchen Faucet in Brushed Gold with included soap dispenser.

2. PRODUCT OVERVIEW AND FEATURES

The APPASO Touchless Kitchen Faucet is designed for convenience and durability, featuring a brushed gold finish and advanced functionality.

Key Features:

- **Touchless Operation:** Wave your hand to activate/deactivate water flow. Automatic shut-off after three minutes to conserve water.
- **Practical Sprayer:** Three water spouting settings (streaming, spraying, brooming) for diverse cleaning needs.


- **Pull-Down Hose:** A 20-inch pull-out hose allows the spray head to reach all sides of the sink.
- **360° Swivel Body:** Provides enhanced flexibility and convenience during use.
- **Durable Construction:** Made from stainless steel with an anti-corrosion, anti-rust, and fingerprint-proof brushed finish.
- **Premium Ceramic Cartridge:** Tested for over 500,000 cycles, ensuring quality and durability.
- **Included Soap Dispenser:** A matching soap dispenser is provided for a cohesive look.
- **Manual Override:** The touchless function can be switched to manual operation by detaching the sensor box.

Included Components:

- Touchless Kitchen Faucet (Brushed Gold)
- Mounting Accessories
- User Manual
- Weight Ball
- Soap Dispenser
- Sensor Box and Battery Box (requires 4 AA 1.5V alkaline batteries, not included)

Touchless Faucet

Use the handle when you want to touch the faucet, use the sensor when you don't.

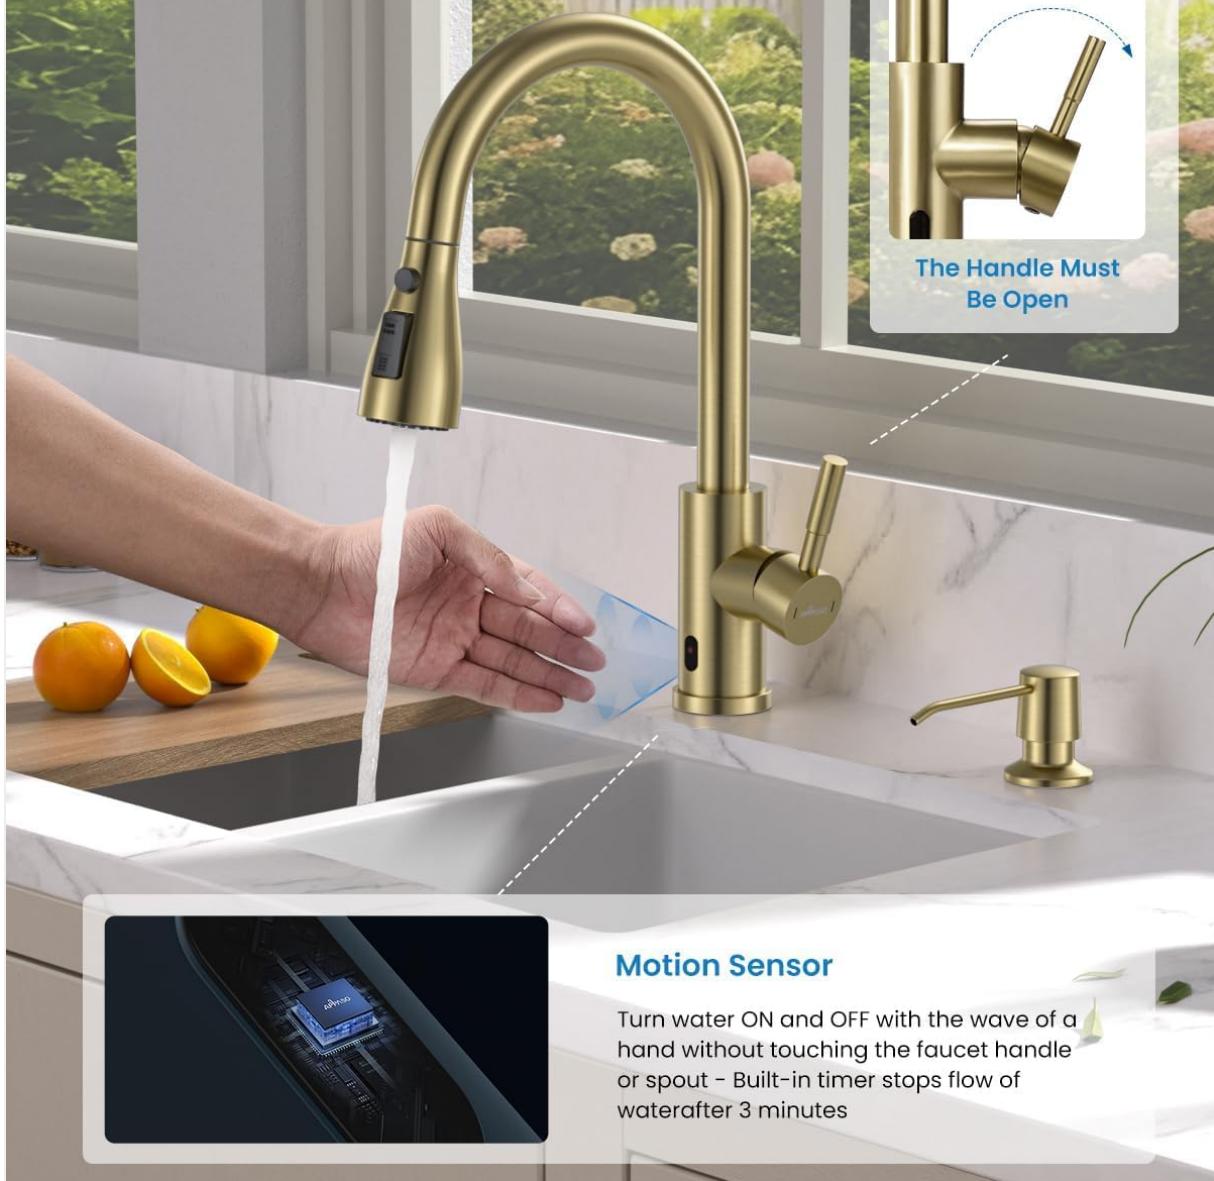

Motion Sensor

Turn water ON and OFF with the wave of a hand without touching the faucet handle or spout - Built-in timer stops flow of water after 3 minutes

Image: Demonstrating the touchless activation of the faucet.

Three Modes of Water Outlet

Stream or spray? No! Will be 3 for you to choose with a flick of a switch!

① Double Broom

② Spray

③ Stream



Image: Visual representation of the three water outlet modes: Double Broom, Spray, and Stream.

3. SAFETY INFORMATION

- Always turn off the main water supply before beginning any installation or maintenance.
- Ensure all connections are secure to prevent leaks.
- Use appropriate tools and follow all local plumbing and electrical codes.
- The sensor box requires 4 AA 1.5V alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- Ensure the countertop is no less than 18 inches high from your cabinets if the faucet is to be installed under a cabinet.

4. INSTALLATION

Pre-Installation:

1. Turn off the main water supply to your kitchen sink.
2. Remove your old faucet and clean the mounting area.
3. Ensure your sink has 2-4 holes for proper installation.

Mounting the Faucet:

1. Insert the faucet body through the main hole in your sink.
2. Secure the faucet from underneath the sink using the provided mounting accessories.

Connecting Water Lines and Sensor Box:

1. Connect the hot and cold water supply lines to the corresponding inlets on the faucet.
2. Install the gravity ball onto the pull-down hose at the marked position. This ensures the spray head retracts smoothly.
3. Connect the outlet pipe to the quick connector under the touch controller.
4. Connect the top of the sensor box to the outlet pipe and tighten it.
5. Finally, connect the battery box to the sensor box. Ensure 4 AA batteries are installed in the battery box.



Image: Step-by-step diagram for installing the sensor box and connecting the battery box.

5. OPERATION

Touchless Function:

- Ensure the faucet handle is in the 'on' position.
- Wave your hand gently in front of the sensor located at the base of the faucet to turn the water on or off.
- The faucet will automatically turn off after three minutes of continuous flow to prevent water waste.

Manual Operation:

- To use the faucet manually, simply use the single handle to control water flow and temperature.
- To permanently switch to manual operation, detach the sensor box and connect the hose directly.



Image: Diagram illustrating the process to switch the faucet to manual operation.

Sprayer Functions:

- The pull-down sprayer offers three modes: Stream, Spray, and Double Broom (a powerful blade-like spray). Switch between modes using the buttons on the spray head.
- The 20-inch pull-out hose and 360° swivel spout provide extensive reach and flexibility.

6. MAINTENANCE

Cleaning:

- Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners or harsh chemicals that can damage the finish.
- The brushed gold finish is designed to be fingerprint-proof, reducing the need for frequent cleaning.

Aerator Maintenance:

- If water flow becomes restricted, the aerator may need cleaning. Use the provided blue key tool to detach and clean the aerator.
- An extra aerator is included for replacement if necessary.

Battery Replacement:

- When the touchless function becomes inconsistent or stops working, it may be time to replace the 4 AA batteries in the battery box.
- Use a Phillips head screwdriver to open the battery box.




7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow or low pressure	Clogged aerator; Water supply off; Restrictor valve stuck.	Clean or replace aerator; Check water supply valves; Remove and reseat the restrictor valve in the spray head hose.
Touchless function not working	Faucet handle is off; Dead batteries in sensor box; Sensor malfunction.	Ensure faucet handle is in the 'on' position; Replace batteries; Detach sensor box for manual operation if issue persists.
Leaks from faucet base or connections	Loose connections; Damaged O-rings/washers; Internal component failure.	Tighten all connections; Inspect and replace O-rings/washers; Contact customer service if internal leak is suspected.


Problem	Possible Cause	Solution
Spray head does not retract fully	Improperly positioned weight ball; Obstruction.	Adjust the position of the weight ball on the hose; Clear any obstructions under the sink.

8. SPECIFICATIONS

Feature	Detail
Brand	APPASO
Model Name	AP-APS123BTG
Color	1-Brushed Gold
Material	Stainless Steel
Finish Type	Brushed
Mounting Type	Deck Mount
Number of Handles	1
Hole Count	3 (compatible with 1 to 4-Hole Sinks)
Special Features	3-Mode Pull Down Sprayer, 360 Swivel, Detachable Aerator, Touchless with Sensor
Maximum Flow Rate	1.8 Gallons Per Minute
Spout Reach	9 Inches
Hose Length	20 Inches
Item Weight	4.97 pounds (2.26 Kilograms)
Product Dimensions	17.44"D x 2.64"W x 13.07"H
Batteries Required	Yes (4 AA 1.5V alkaline batteries)

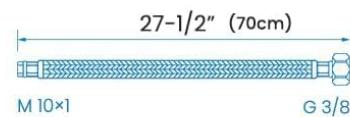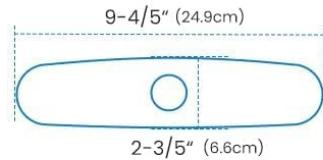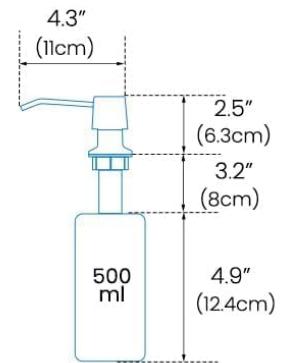

Fit for 2~4 holes

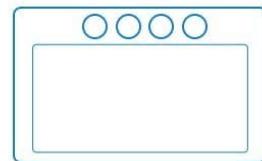


► The maximum thickness of counter-top: 1-3/5" (4cm)

► Mounting hole size: 1-1/5~1-1/2" (3.2~3.5cm)

Image: Detailed dimensions for the faucet and soap dispenser, including mounting hole size and maximum countertop thickness.

9. WARRANTY AND SUPPORT

APPASO is dedicated to providing exceptional customer service. If you have any questions, concerns, or require support regarding your faucet, please contact the APPASO customer service team. Refer to the product packaging or the APPASO official website for specific warranty details and contact information.

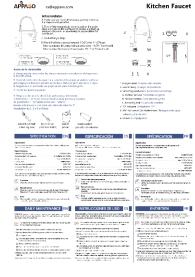	<p>APPASO Pull-Down Spring Kitchen Faucet: Installation and Care Guide</p> <p>Comprehensive installation and care guide for the APPASO Pull-Down Spring Kitchen Faucet. Includes pre-installation steps, detailed installation instructions, maintenance tips, troubleshooting solutions, warranty information, and contact details for APPASO.</p>
	<p>APPASO Kitchen Faucet Installation Guide</p> <p>Detailed instructions for installing your APPASO kitchen faucet, covering product components, dimensions, installation steps, and maintenance. Includes tips for a successful setup.</p>
	<p>APPASO Kitchen Faucet: Installation, Specs & Maintenance Guide</p> <p>Detailed installation, usage, and maintenance guide for the APPASO Commercial Pre-Rinse Kitchen Faucet. Covers specifications, parts, step-by-step installation, and cleaning instructions for optimal performance and longevity.</p>
	<p>APPASO Pull-Down Kitchen Faucet Installation and Care Guide</p> <p>Comprehensive installation and care guide for the APPASO pull-down kitchen faucet. Includes pre-installation checks, step-by-step installation instructions, maintenance tips, troubleshooting advice, and warranty information.</p>
	<p>APPASO Kitchen Sink Faucet Installation and Maintenance Guide</p> <p>Comprehensive instructions for installing and maintaining your APPASO kitchen sink faucet, including product components, installation steps, maintenance tips, and specifications.</p>
	<p>APPASO Pull-Down Kitchen Faucet: Installation and Care Guide</p> <p>A comprehensive guide for installing, maintaining, and troubleshooting the APPASO Pull-Down Kitchen Faucet. Includes a detailed parts list, warranty information, and step-by-step instructions.</p>