

SoBuy FSR177-L-W

SoBuy FSR177-L-W 4-Drawer Shoe Cabinet Instruction Manual

Model: FSR177-L-W | Brand: SoBuy

1. INTRODUCTION

This manual provides essential information for the assembly, safe operation, and maintenance of your SoBuy FSR177-L-W 4-Drawer Shoe Cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.



Figure 1: SoBuy FSR177-L-W 4-Drawer Shoe Cabinet (White)

2. SAFETY INFORMATION

- **Anti-Tipping Devices:** Toppling prevention devices are included and must be installed to ensure the stability and safety of the freestanding shoe cabinet. This prevents accidental tipping, especially in households with children or pets.
- **Assembly:** Follow all assembly instructions precisely. Incorrect assembly can lead to instability and potential hazards.
- **Placement:** Ensure the cabinet is placed on a flat, stable surface. Recommended room types for placement include the entryway, living room, bedroom, and hallway.
- **Weight Capacity:** Do not overload the drawers or the top surface. Refer to the specifications for maximum weight limits (if available, otherwise state general caution).
- **Children:** Keep small parts and packaging materials away from children during assembly.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the parts list provided in your physical instruction booklet. All components are typically numbered for easy identification.

- Cabinet panels (e.g., side panels, back panel, top panel, base)
- 4 Flip-Drawers

- Hardware pack (screws, dowels, cam locks, anti-tipping kit)
- Assembly tools (e.g., Allen key, though a Phillips screwdriver may be required and not included)

4. ASSEMBLY INSTRUCTIONS

The SoBuy FSR177-L-W shoe cabinet requires self-assembly. Detailed, step-by-step instructions with numbered components are included in the product packaging. It is recommended to have a Phillips screwdriver available, as it may not be included.

1. **Unpack:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Match each component to the corresponding number in the instruction booklet.
3. **Follow Steps:** Assemble the cabinet frame first, then attach the flip-drawers according to the provided diagrams.
4. **Install Anti-Tipping Kit:** Securely attach the anti-tipping device to the cabinet and the wall as instructed. This is a critical safety step.

For a visual guide, please refer to the official product video:

Your browser does not support the video tag.

Video 1: Overview of the SoBuy FSR177 shoe cabinet, demonstrating its features and functionality. This video is provided by the seller, HaotainGroup.

5. OPERATION AND USAGE

The SoBuy FSR177-L-W shoe cabinet is designed for efficient shoe storage in various home environments.

- **Flip-Drawers:** The cabinet features 4 flip-drawers. To open, gently pull the top edge of the drawer outwards. The drawer will tilt down, revealing the shoe compartments.
- **Shoe Capacity:** Each flip-drawer is designed to hold approximately two pairs of adult shoes or three to four pairs of children's shoes, depending on size and style.
- **Top Surface:** The spacious top surface and open top cubby (if applicable to this model, based on images it has a slight lip) can be used for accessories, keys, wallets, or decorative items.



Figure 2: Demonstrating the flip-drawer mechanism and shoe storage capacity.

6. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your shoe cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood material.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Hardware:** Periodically check and tighten all screws and fasteners to maintain stability.

7. TROUBLESHOOTING

If you encounter any issues with your shoe cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet feels wobbly	Loose fasteners; uneven floor; anti-tipping kit not installed.	Tighten all screws. Ensure cabinet is on a level surface. Install the anti-tipping kit as per instructions.
Drawers do not open/close smoothly	Incorrect assembly of drawer mechanism; obstruction.	Review assembly steps for drawers. Check for any objects obstructing the drawer's movement.
Missing parts during assembly	Packaging error.	Contact SoBuy customer support with your purchase details and the specific missing part number.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	SoBuy
Model	FSR177-L-W
Color	White
Product Dimensions (D x W x H)	7.5"D x 39.4"W x 35.8"H
Material	Engineered Wood
Number of Drawers	4 (Flip-Drawers)
Mounting Type	Freestanding
Assembly Required	Yes
Item Weight	63.9 pounds
Special Feature	Foldable (referring to the flip-drawer mechanism)



Figure 3: Dimensional diagram of the shoe cabinet.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, missing parts, or any product-related inquiries, please contact SoBuy customer support. Refer to your purchase documentation or the SoBuy official website for contact details.



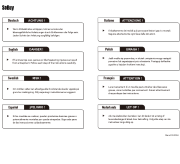 
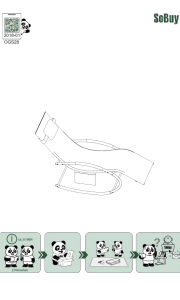 
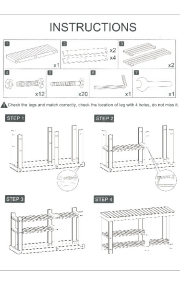 
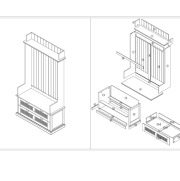 
Contact Information:

Brand: SoBuy

Website: www.sobuy.com

Seller: HaotainGroup (via Amazon)

Related Documents - FSR177-L-W

 <p>SoBuy</p>	<p>SoBuy FBT115-L Nightstand with 3 Drawers - Assembly Instructions</p> <p>Comprehensive assembly instructions for the SoBuy FBT115-L nightstand, a 3-drawer bedside cabinet. Includes a detailed parts list, hardware inventory, and step-by-step guidance for building the furniture.</p>
 <p>SoBuy</p>	<p>SoBuy BZR34-II Tall Cabinet Assembly Instructions</p> <p>Detailed step-by-step assembly instructions for the SoBuy BZR34-II tall cabinet, including a parts list, tools required, and visual guides for furniture assembly.</p>
 <p>SoBuy</p>	<p>SoBuy Furniture Safety Warnings and Anti-Tip Guide</p> <p>Essential safety instructions from SoBuy for preventing furniture tip-over accidents and entrapment injuries. This guide is available in multiple languages to ensure user safety.</p>
 <p>SoBuy</p>	<p>SoBuy OGS28 Rocking Chair Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions and safety information for the SoBuy OGS28 rocking chair. Learn how to assemble your chair safely and efficiently.</p>
 <p>INSTRUCTIONS</p>	<p>Assembly Instructions for ECOMEX Shoe Rack Bench</p> <p>Step-by-step assembly guide for the ECOMEX 3-Tier Bamboo Shoe Rack Bench, including a parts list and detailed visual instructions for assembly.</p>
 <p>ModernLuxe</p>	<p>Installation Manual for ModernLuxe Hall Tree with Storage Bench</p> <p>This document provides detailed installation instructions for the ModernLuxe Hall Tree, a vintage-style mudroom organizer featuring a storage bench, 5 metal hooks, and 2 large rattan element drawers. It includes a comprehensive parts list and step-by-step assembly guidance.</p>