

## Lefant M210 Pro

# Lefant Robot Vacuum Cleaner M210 Pro User Manual

Model: M210 Pro

## 1. INTRODUCTION

Thank you for choosing the Lefant Robot Vacuum Cleaner M210 Pro. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your robot vacuum. Please read it thoroughly before use and retain it for future reference.

The Lefant M210 Pro is designed to provide efficient and convenient cleaning for various floor types, including hardwood and low-pile carpets. It features powerful suction, intelligent navigation, and smart control options.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not operate the robot vacuum in wet environments or near water.
- Ensure the charging base is placed on a level surface against a wall.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Only use as described in this manual. Use only manufacturer's recommended attachments.
- Unplug the charging base from the outlet when not in use and before cleaning.

### 3. PACKAGE CONTENTS

Verify that all components are present and in good condition:

- Lefant Robot Vacuum Cleaner M210 Pro
- Charging Base
- Power Adapter
- Side Brushes (2 pairs)
- HEPA Filter (pre-installed)
- Cleaning Tool
- User Manual

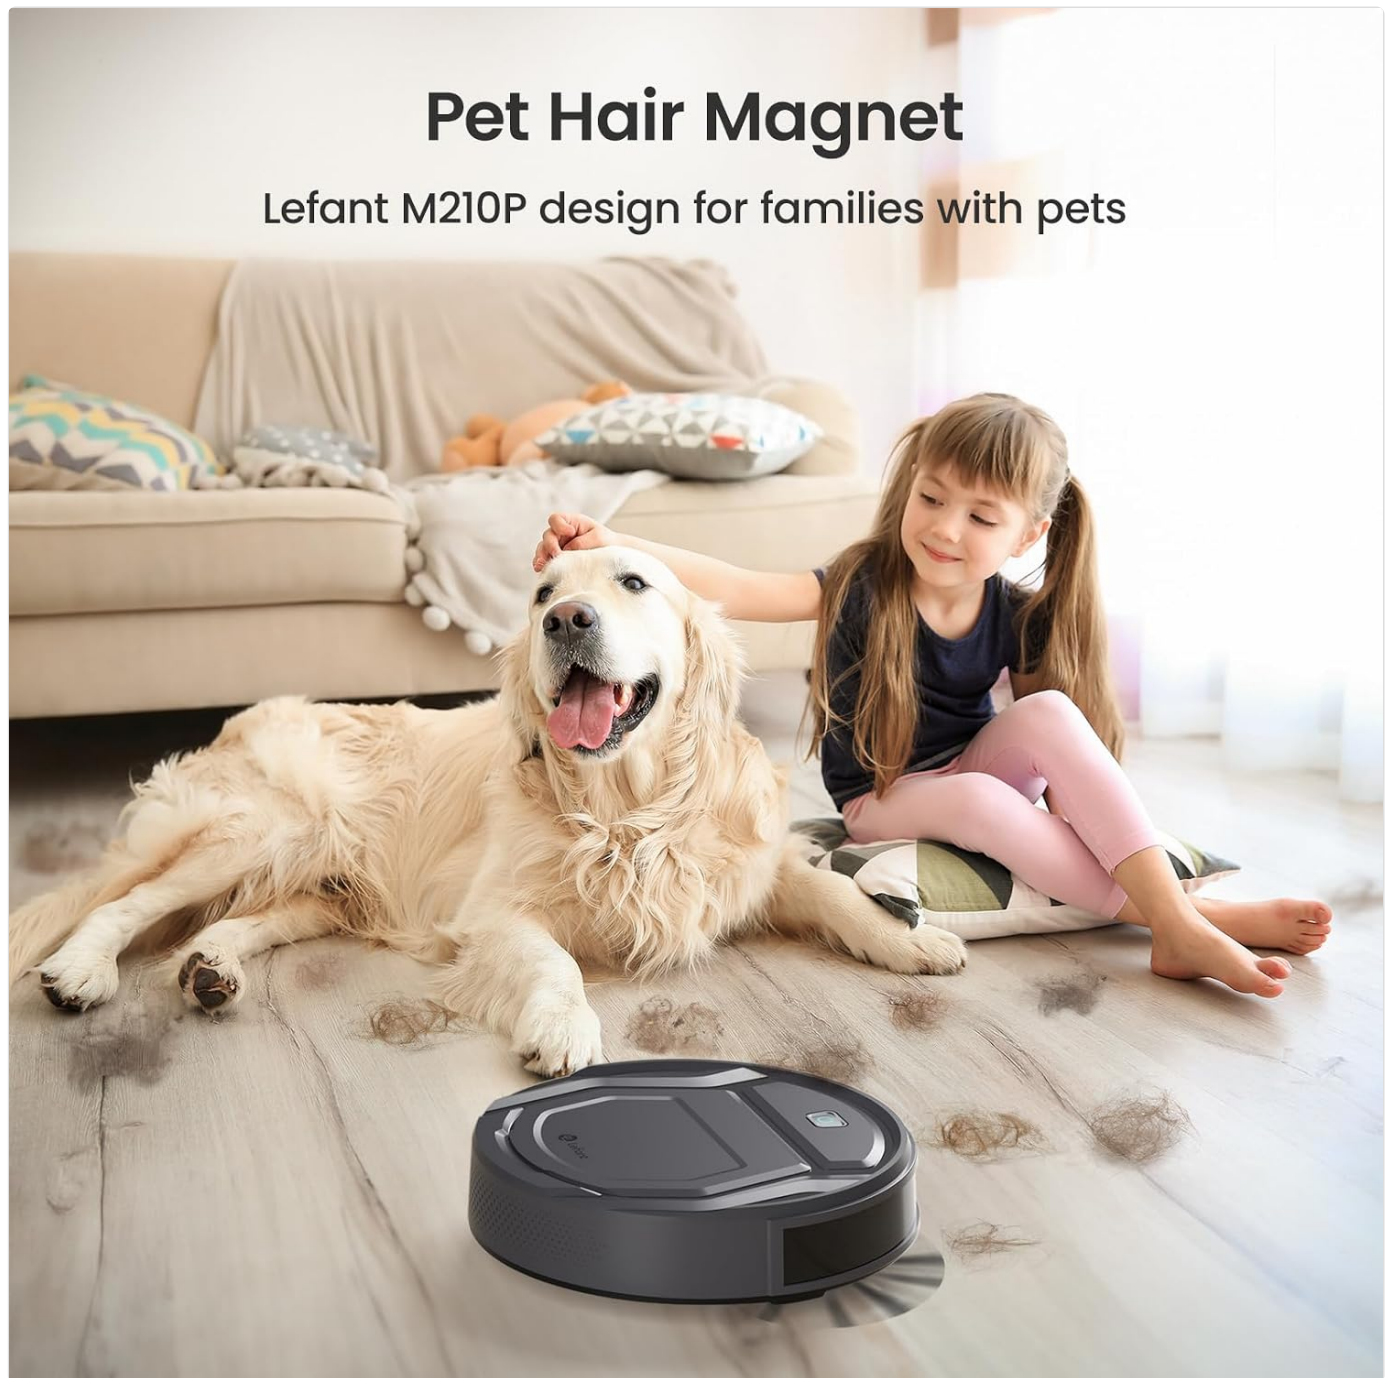


Image: The Lefant M210 Pro robot vacuum with its charging base and two pairs of side brushes.

## 4. PRODUCT OVERVIEW

### Robot Vacuum Components

- **Top Panel:** Power button, Wi-Fi indicator.
- **Front Bumper:** Collision sensors.
- **Side Brushes:** Collect dust and debris from edges and corners.
- **Dust Bin:** Collects dirt and debris.
- **Driving Wheels:** Allow the robot to move.
- **Charging Contacts:** Connect with the charging base.
- **Drop Sensors:** Prevent the robot from falling down stairs.



## Pet Hair Magnet

Lefant M210P design for families with pets

Image: Top view of the Lefant M210 Pro robot vacuum, showing the power button and overall design.

## 5. SETUP

### 5.1 Installing Side Brushes

Press the side brushes into the square posts at the bottom of the robot until they click into place. Ensure the brushes are correctly aligned (L for left, R for right).

### 5.2 Placing the Charging Base

Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters (1.6 feet) of clear space on both sides of the charging base and 1.5 meters (4.9 feet) in front of it. Connect the power adapter to the charging base and plug it into a wall outlet.



Image: The robot vacuum returning to its charging station, illustrating the auto-return charging feature.

### 5.3 Initial Charging

Place the robot vacuum onto the charging base, ensuring the charging contacts align. The indicator light on the robot will

show charging status. For first use, it is recommended to fully charge the battery before operation. A full charge takes approximately 4-5 hours.

## 5.4 Connecting to the Lefant App

1. Download the "Lefant" app from your mobile app market (App Store or Google Play).
2. Register or log in to your account.
3. Add your M210 Pro robot vacuum to the app.
4. Ensure your mobile device is connected to a **2.4 GHz Wi-Fi network**. The robot only supports 2.4 GHz Wi-Fi.
5. Turn the robot's blue button switch to "I" (ON).
6. Press and hold the start button on the robot for 6 seconds until you hear a voice prompt.
7. Follow the in-app instructions to select the M210 Pro and pair it successfully.



Image: A visual guide showing the steps to connect the Lefant robot vacuum to the Lefant mobile application.

## 6. OPERATING THE ROBOT VACUUM

### 6.1 Starting/Pausing Cleaning

- **Manual Start:** Press the power button on the robot once to start cleaning. Press again to pause.
- **App Control:** Use the Lefant app to start, pause, or stop cleaning.

### 6.2 Cleaning Modes

The M210 Pro offers multiple cleaning modes to suit different needs:

- **Zigzag Mode:** Cleans in an efficient, back-and-forth pattern, ideal for large, open areas.
- **Random Mode:** Cleans randomly, suitable for complex environments.
- **Spot Mode:** Concentrates cleaning in a specific area, ideal for heavily soiled spots.
- **Edge Mode:** Cleans along walls and furniture edges.
- **Scheduled Cleaning:** Set specific times for the robot to clean automatically via the app.
- **Manual Control:** Control the robot's movement directly using the app.

# Multiple Cleaning Modes to Meet Your Needs



Image: Illustrations of the robot vacuum performing different cleaning patterns: Random Mode, Zigzag Mode, Edge Mode, and Spot Mode.

## 6.3 Suction Power Adjustment

Adjust the suction power via the Lefant app to optimize cleaning for different debris types and floor surfaces. The M210 Pro provides powerful suction with dual side brushes, effectively sweeping and vacuuming dust, pet hair, crumbs, and debris.

**Q Why does the robot vacuum stop working after a few minutes of first use?**

**A** For the first use, it is recommended to fully charge the battery beforehand.

**Q Where is the remote control?**

**A** This set does not include a remote control; you need to buy it separately.

**Q Why can't the robot connect to Wi-Fi?**

**A** The robot only supports 2.4GHz Wi-Fi networks.

Image: The robot vacuum cleaning various types of debris (dust/pet hair, cat litter, coffee beans) with different suction levels.

## 6.4 Carpet Boost Function

The M210 Pro can detect low-pile carpets and automatically increase suction power to effectively clean dust particles and hairs embedded in the fibers.



Image: The robot vacuum transitioning from a hard floor to a low-pile carpet, demonstrating its carpet auto-detection and boost feature.

## 6.5 Voice Control Integration

The M210 Pro is compatible with Amazon Alexa and Google Home for convenient voice control. Ensure your robot is connected to the Lefant app and then link your Lefant account with your preferred voice assistant.

- **Connecting to Alexa:**

- a. Connect Alexa to the internet and pair it.
- b. Open the Lefant app, go to "Mine" and select "Google Assistant/Alexa".
- c. Choose "Alexa" and tap "One-click Bind."
- d. Tap "Log in to Amazon Account." Click "LINK," then press "Back."
- e. Alexa is now successfully bound.
- f. Open the "Amazon Alexa" app to view the bound devices under "Devices."

- **Connecting to Google Home:** Follow similar steps within the Lefant app and Google Home app to link accounts.



Image: A user interacting with the robot vacuum using voice commands through Amazon Alexa and Google Assistant.

## 7. MAINTENANCE

Regular maintenance ensures optimal performance of your robot vacuum.

### 7.1 Emptying the Dust Bin

The M210 Pro has a 500ml dustbin. It is recommended to empty the dust bin after each cleaning cycle, especially if you have pets. Press the release button to remove the dust bin, open it, and discard the contents. Clean the filter inside the dustbin regularly.



Image: A close-up view of the robot vacuum's 500ml dustbin, shown open for emptying.

### 7.2 Cleaning Filters

Tap the filter to remove loose dirt. You can also rinse the filter under running water. Ensure the filter is completely dry before reinserting it into the dust bin. Replace filters every 2-3 months, or more frequently depending on usage.

### 7.3 Cleaning Side Brushes

Remove the side brushes and use the cleaning tool to remove any hair or debris wrapped around them. If brushes are worn or damaged, replace them with new ones.

### 7.4 Cleaning Sensors and Charging Contacts

Wipe the drop sensors and charging contacts on the robot and charging base with a clean, dry cloth. This ensures proper navigation and charging.

## 8. TROUBLESHOOTING

| Problem                                               | Possible Cause                                | Solution                                                                                                                     |
|-------------------------------------------------------|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| Robot stops working after a few minutes of first use. | Insufficient battery charge.                  | Fully charge the battery before the first use.                                                                               |
| Cannot connect to Wi-Fi.                              | Robot only supports 2.4 GHz Wi-Fi networks.   | Ensure your router is broadcasting a 2.4 GHz signal and your phone is connected to it during setup.                          |
| Robot gets stuck frequently.                          | Obstacles, tangled brushes, or dirty sensors. | Clear obstacles from the cleaning path. Clean side brushes and sensors. The Freemove Tech 3.0 helps it free itself if stuck. |
| Robot does not return to charging base.               | Charging base obstructed or dirty contacts.   | Ensure charging base is in an open area. Clean charging contacts on both robot and base.                                     |



Image: Common troubleshooting questions and answers, including issues with initial use, remote control availability, and Wi-Fi connectivity.

## 9. SPECIFICATIONS

| Feature             | Detail               |
|---------------------|----------------------|
| Brand               | Lefant               |
| Model Name          | M210P                |
| Special Feature     | HEPA Filtration      |
| Color               | Charcoal Grey        |
| Product Dimensions  | 11"L x 11"W x 2.99"H |
| Filter Type         | Sponge               |
| Battery Life        | 120 minutes          |
| Cleaning Path Width | 11 Inches            |
| Voltage             | 19 Volts (DC)        |

| Feature            | Detail                                |
|--------------------|---------------------------------------|
| Dustbin Capacity   | 500 Milliliters                       |
| Power Source       | Battery Powered                       |
| Compatible Devices | Amazon Echo, Google Home, Smartphones |
| Item Weight        | 6.76 pounds                           |
| UPC                | 659048514842                          |

## 10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Lefant website or contact Lefant customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

**Online Resources:**

- Lefant Official Website: [www.lefant.com](http://www.lefant.com)
- Lefant Brand Store on Amazon: [Visit Store](#)

© 2025 Lefant. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**