

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Coleshome](#) /

› [Coleshome 71 Inch Computer Desk with USB Ports, Large Office Desk, Long Study Student Writing Desk, Rustic Brown 71 Inches Rustic Brown User Manual](#)

Coleshome B0D73MSXRS

Coleshome 71 Inch Computer Desk User Manual

Model: B0D73MSXRS | Brand: Coleshome

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Coleshome 71 Inch Computer Desk. This large, versatile desk is designed to provide a spacious and functional workspace for various needs, including home office, study, gaming, and business applications. Its minimalist design, combined with integrated power solutions, offers both aesthetic appeal and practical utility.



Image: The Coleshome 71 Inch Computer Desk, showcasing its ample surface area for multiple devices and integrated power strip.

2. PRODUCT FEATURES

- **Large Desk Panel Dimension:** Measuring 70.9"(L) x 23.6"(W) x 29.0"(H), this desk provides extensive space for monitors, printers, and other office essentials, making it suitable as an executive desk, gaming desk, or large workstation.
- **Power Outlets & Charging Ports:** Equipped with 3 AC power outlets, 1 USB charging port, and 1 Type-C port, allowing convenient charging of smartphones, gaming gear, and Bluetooth devices directly from your desk.
- **Sturdy Construction:** Features thick metal frames made of heavy-duty, powder-coated steel for enhanced stability and safety. A triangle-structure support under the panel ensures long-term durability.
- **Easy Assembly:** Designed for quick and straightforward assembly, with all necessary tools included. Most users can complete assembly within 30 minutes.

Recessed Power Stripe

| 3 AC Outlets + 1 USB 1 Type-C Outlets



Image: Detail of the integrated recessed power strip with multiple outlets and USB ports for convenient charging.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. In case of missing or damaged parts, please contact customer support.

- Desktop Panel
- Metal Frame Components (legs, support bars)
- Integrated Power Strip with USB and Type-C Ports
- Headphone Hook
- Assembly Hardware (screws, bolts, etc.)
- Assembly Tools (e.g., Allen wrench)
- Instruction Manual

4. SETUP AND ASSEMBLY

The Coleshome Computer Desk is designed for quick and easy assembly. Follow the clear instructions provided in the included assembly guide. All necessary tools are provided in the package.

1. Unpack all components and verify against the package contents list.
2. Attach the metal frame components to the desktop panel using the provided hardware. Ensure all connections are secure.
3. Install the integrated power strip into its designated recess on the desktop.

4. Attach the headphone hook to the desired location on the desk frame.
5. Adjust the feet pads at the base of the legs to ensure the desk is level and stable on your floor surface.

Typical assembly time is under 30 minutes for one person.

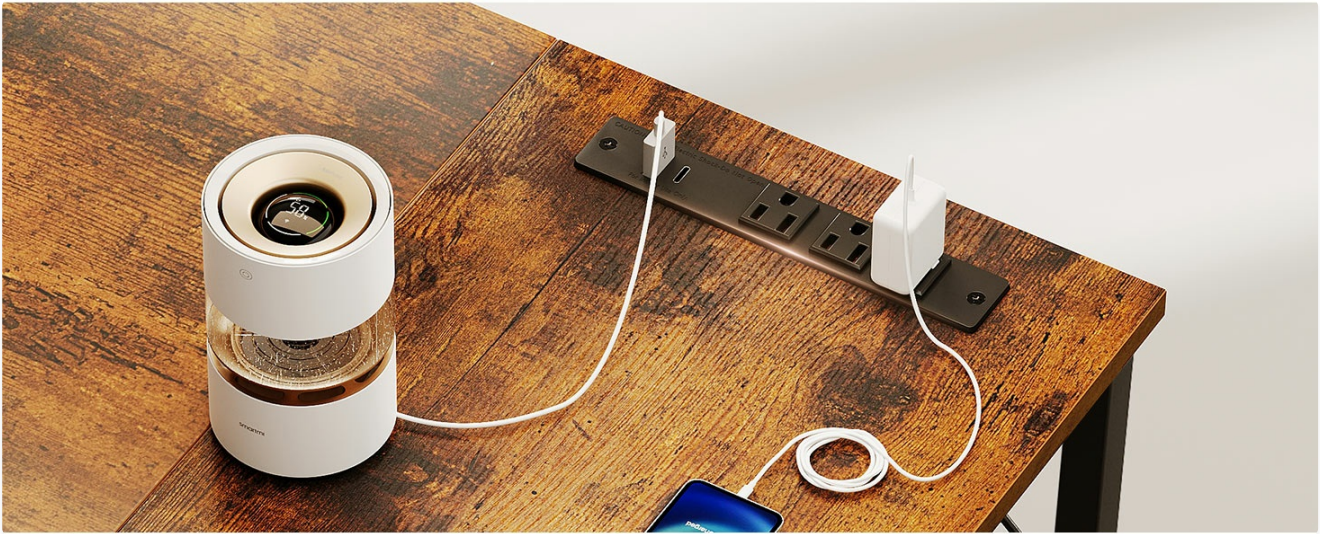


Image: Adjustable feet pads for leveling the desk on uneven surfaces.

5. OPERATING INSTRUCTIONS

The Coleshome Computer Desk is designed for straightforward use. Once assembled, it provides a stable and spacious surface for your work or leisure activities.

Using the Integrated Power Outlets and Charging Ports:

- Connect the desk's main power cord to a standard wall outlet.
- Plug your electronic devices (laptops, monitors, lamps) into the 3 AC power outlets.
- Use the dedicated USB-A and Type-C ports to charge compatible devices such as smartphones, tablets, smartwatches, and earbuds.



Image: Devices connected to the integrated power strip for charging and power supply.

6. MAINTENANCE

To ensure the longevity and appearance of your Coleshome Computer Desk, follow these simple maintenance

guidelines:

- **Cleaning:** Wipe the desktop surface and metal frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood surface.
- **Weight Distribution:** Distribute weight evenly across the desk surface. Avoid placing excessively heavy objects on the edges to prevent tipping.
- **Anchoring:** If the desk is placed in an area where tipping is a concern, ensure proper anchoring to a wall or other stable structure.
- **Regular Checks:** Periodically check all screws and bolts to ensure they remain tight. Tighten if necessary to maintain stability.

7. TROUBLESHOOTING

If you encounter any issues with your Coleshome Computer Desk, please refer to the following common solutions:

- **Desk Wobbles:** Ensure all assembly bolts are securely tightened. Check that the adjustable feet pads are properly leveled on the floor.
- **Power Outlets Not Working:** Verify that the desk's main power cord is securely plugged into a functional wall outlet. Check if the power strip's circuit breaker (if present) has tripped.
- **Damaged or Missing Parts:** If your desk arrives damaged, or if any parts are missing, please do not attempt to force assembly. Contact Coleshome customer support immediately for assistance.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions (L x W x H)	70.9" x 23.6" x 29.0"
Color	Rustic Brown
Style	Modern
Top Material Type	Engineered Wood
Base Material	Metal (Feet Pad)
Special Feature	Built-In USB Outlet (3 AC, 1 USB-A, 1 Type-C)
Included Components	Headphone Hook, Built-in Outlet, Built-in USB Port
Assembly Required	Yes (All tools included)

Dimensions

| Ergonomic Height and Width.



63.0"



29.0"



Image: Detailed dimensions of the Coleshome Computer Desk.

9. WARRANTY AND SUPPORT

Coleshome offers a **1-year warranty** for your peace of mind. This warranty covers manufacturing defects and significant issues that may arise from normal use.

Customer Support:

If you experience any problems with your desk, such as damage upon arrival, missing parts, or scratches, please do not hesitate to contact our professional customer support team. We are committed to helping you solve any issues within 24 hours and can arrange for fast refunds or replacements for any quality problems.

For support, please visit the Coleshome store on Amazon or refer to the contact information provided in your product packaging.

Thank you for choosing Coleshome.