

Cecotec 01852

Cecotec FreeStyle Latte Coffee Machine User Manual

Model: 01852

1. INTRODUCTION

Thank you for choosing the Cecotec FreeStyle Latte Coffee Machine. This versatile 4-in-1 espresso machine is designed to deliver exceptional coffee experiences, offering compatibility with ground coffee, Dolce Gusto, Nespresso, and K-fee capsules. With its powerful 20-bar pump and integrated milk tank, you can enjoy a wide variety of coffee beverages, from rich espressos to creamy lattes and cappuccinos. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.



Figure 1: Cecotec FreeStyle Latte Coffee Machine with a prepared latte.

2. SAFETY INSTRUCTIONS

Always observe the following basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons:

- Read all instructions carefully before operating the appliance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Unplug the machine from the power outlet when not in use and before cleaning.
- Keep hands and cords away from hot parts of the appliance during operation.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- This appliance is for household use only. Do not use outdoors.
- Children should be supervised to ensure they do not play with the appliance.
- Use only accessories recommended by the manufacturer.
- Be careful when handling hot liquids and steam.

3. PRODUCT COMPONENTS

Familiarize yourself with the different parts of your Cecotec FreeStyle Latte Coffee Machine.



Figure 2: Front view of the coffee machine.



Figure 3: Coffee machine with included accessories, including adapters for different capsule types and a measuring spoon.

1. Control Panel / Touch Screen
2. Coffee Outlet
3. Milk Frothing Nozzle (manual)
4. Drip Tray
5. Water Tank (1.6L capacity)
6. Milk Tank (400ml capacity)
7. Capsule Adapters (for Dolce Gusto, Nespresso, K-fee)
8. Ground Coffee Filter
9. Measuring Spoon

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials. Ensure all components listed in Section 3 are present.
2. **Placement:** Place the coffee machine on a stable, flat, and heat-resistant surface, away from water sources

and direct sunlight. Ensure adequate ventilation around the unit.

3. **Water Tank Filling:** Remove the 1.6L water tank from the back of the machine. Fill it with fresh, cold drinking water up to the MAX line. Reinsert the water tank securely.
4. **Milk Tank Filling (for milk-based drinks):** Remove the 400ml milk tank. Fill it with cold milk (dairy or non-dairy) up to the desired level. Reattach the milk tank to the machine.
5. **First Use / Priming:**

- Plug the power cord into a grounded electrical outlet.
- Press the power button on the control panel. The machine will begin heating up.
- Place a large cup under the coffee outlet.
- Select the "Hot Water" function (if available) or run an espresso cycle without coffee to prime the system and rinse internal components. Repeat 2-3 times.

5. OPERATING INSTRUCTIONS

5.1. Making Espresso / Coffee

1. **Choose your coffee type:**
 - **For Ground Coffee:** Insert the ground coffee filter into the portafilter. Add one level scoop of ground coffee using the provided measuring spoon. Tamp lightly. Insert the portafilter into the machine and lock it into place.
 - **For Capsules (Dolce Gusto, Nespresso, K-fee):** Select the appropriate capsule adapter. Insert the capsule into the adapter. Place the adapter into the machine's brewing chamber.
2. **Place Cup:** Position your coffee cup on the drip tray directly under the coffee outlet.
3. **Select Drink:** On the touch screen control panel, select your desired coffee type (Espresso, Lungo, Largo).



Figure 4: Interacting with the touch screen control panel to select a drink.

4. **Brewing:** The machine will automatically start brewing. Wait for the brewing process to complete.



Figure 5: Coffee dispensing into a cup.

5. **Enjoy:** Your coffee is ready to be enjoyed.

5.2. Milk Frothing (Cappuccino, Latte Macchiato, Hot Milk)

The machine features a double milk frothing system: an automatic system using the milk tank and a manual steam nozzle.

5.2.1. Automatic Milk Frothing

1. Ensure the milk tank is filled with cold milk and properly attached.
2. Place your cup under the milk frothing outlet.
3. On the touch screen, select your desired milk-based drink (Cappuccino, Latte Macchiato, Hot Milk).
4. The machine will automatically froth and dispense milk, then brew the coffee.



Figure 6: Automatic milk frothing in progress.

5.2.2. Manual Milk Frothing (Steam Nozzle)

1. Fill a separate pitcher with cold milk.
2. Position the steam nozzle over the pitcher, just below the milk surface.
3. Activate the steam function on the control panel.
4. Move the pitcher slowly up and down to create desired foam.
5. Once frothed, turn off the steam function and add the frothed milk to your coffee.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your coffee machine and ensure optimal performance.

6.1. Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray daily.
- **Water Tank:** Empty any remaining water and rinse the tank. Refill with fresh water for next use.
- **Milk Tank/System:** After each use of the automatic milk system, run a quick rinse cycle (if available) or

detach and thoroughly clean the milk tank and its components with warm soapy water.

- **Steam Nozzle:** Immediately after manual frothing, wipe the steam nozzle with a damp cloth to remove any milk residue. Run a short burst of steam to clear any internal blockages.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.

6.2. Descaling

Descaling is essential to remove mineral buildup and maintain machine efficiency. The frequency depends on water hardness and usage.

1. Empty the water tank and fill it with a descaling solution mixed according to the descaler manufacturer's instructions.
2. Place a large container under the coffee outlet and steam nozzle.
3. Follow the descaling procedure outlined in your machine's specific descaling mode (refer to the control panel or machine settings). If no specific mode, run several cycles of hot water through the machine until the tank is empty.
4. Rinse the water tank thoroughly and refill with fresh water.
5. Run several cycles of fresh water through the machine to rinse out any remaining descaling solution.

7. TROUBLESHOOTING

If you encounter issues with your coffee machine, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No coffee dispenses.	Water tank empty; machine not primed; clogged coffee outlet.	Fill water tank; prime the machine; clean coffee outlet.
Coffee is too weak.	Insufficient coffee grounds/capsule; coarse grind; too much water.	Increase coffee amount; use finer grind; select smaller cup size.
Milk not frothing properly.	Milk tank/nozzle clogged; insufficient milk; milk not cold enough.	Clean milk system/nozzle; ensure sufficient cold milk.
Machine leaks water.	Water tank not seated correctly; drip tray full; internal leak.	Reseat water tank; empty drip tray; contact customer support if internal leak suspected.
Machine not turning on.	Not plugged in; power outage; faulty power cord.	Check power connection; verify power supply; contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	01852
Color	Black

Feature	Detail
Capacity (Water Tank)	1.6 Liters
Capacity (Milk Tank)	400 ml
Power	1350 Watts
Voltage	230 Volts
Pressure	20 Bars (ForceAroma Technology)
Material	Stainless Steel
Item Weight	6.05 Kilograms
Special Feature	Double milk frothing system
Coffee Compatibility	Ground coffee, Dolce Gusto, Nespresso, K-fee capsules

9. WARRANTY AND SUPPORT

Your Cecotec FreeStyle Latte Coffee Machine comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact Cecotec customer service through their official website or the contact information provided with your purchase.

Availability of Spare Parts: 10 Years (as per product specifications).

© 2025 Cecotec. All rights reserved.

Documents - Cecotec – 01852



[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications Warranty
 FREESTYLE LATTE freestyle latte user manual cdn cecotec cloud media files |||
 FREESTYLE LATTE Cafetera de capsulas muy compacta. / Compact capsule coffee machine. Manual de instr... e este est colocado en una posicin adecuada. 6.
 ESPECIFICACIONES TCNICAS Referencia del producto: **01852** Producto: FreeStyle Latte Voltaje: 220-240 V Frecuencia: 50 Hz Potencia: 1150 - 1350 W Las es...
 lang:it score:29 filesize: 1.75 M page_count: 120 document date: 2024-06-10



[\[pdf\] User Manual Instructions Troubleshooting Guide Specifications Warranty](#)

FREESTYLE LATTE Media Expert Apr 16 2024 · Lea las siguientes instrucciones atentamente antes de usar el producto Guarde este manual para referencias futuras o nuevos usuarios instrukcja obsługi CECOTEC Freestyle Latte mediaexpert pl products files 69 6968422 |||

FREESTYLE LATTE Cafetera de capsulas muy compacta. / Compact capsule coffee machine. **01852**_Cafetera FreeStyle Latte.indd 1 Manual de instrucciones Instruction manual Manuel d instructions Bedienungsanleitung Manuale di istruzioni Manual de instruções FREESHTaYnLdElLeAidTiTnEg 1 Instrukcja obs...

lang:it score:24 filesize: 1.89 M page_count: 120 document date: 2024-04-16



[\[pdf\] User Manual Instructions Troubleshooting Guide Specifications Warranty](#)

HEREFREESTYLE Latte Espresso Machine Urban Home01852 Cafetera FreeStyle IM COMERCIAL i6wmc6cdn shopify s files 1 0276 5753 5599 01852 i6wmc6 v 1749818498 |||

FREESTYLE LATTE Cafetera de capsulas muy compacta. / Compact capsule coffee machine. Manual de instr... e este est colocado en una posicin adecuada. 6.

ESPECIFICACIONES TCNICAS Referencia del producto: **01852** Producto: FreeStyle Latte Voltaje: 220-240 V Frecuencia: 50 Hz Potencia: 1150 - 1350 W Las es...

lang:it score:20 filesize: 1.75 M page_count: 120 document date: 2024-06-10



[Cecotec FreeStyle Latte Capsule Coffee Machine User Manual](#)

Comprehensive user manual for the Cecotec FreeStyle Latte capsule coffee machine, covering setup, operation, cleaning, maintenance, troubleshooting, and technical specifications.

lang:it score:18 filesize: 2.03 M page_count: 42 document date: 2024-10-18