

[Manuals.plus](#) /

› [Swarovski](#) /

› Swarovski Octea Lux Chrono Quartz Watch - Red Leather Strap (Model 5646975) User Manual

Swarovski 5646975

Swarovski Octea Lux Chrono Quartz Watch

Model: 5646975

INTRODUCTION

Thank you for choosing the Swarovski Octea Lux Chrono Quartz Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.



Image: Side view of the Swarovski Octea Lux Chrono Quartz Watch, showcasing its rose gold-tone case, red faceted bezel, and red leather strap.

PRODUCT OVERVIEW

The Swarovski Octea Lux Chrono watch is a Swiss-made timepiece featuring a rose gold-tone finish, a red faceted crystal bezel, and a red Italian calf-skin leather strap. It incorporates a chronograph mechanism for precise timing.

Key Features:

- Swiss Made Quartz Movement
- Chronograph Function with Accumulated and Interval Timing
- Rose Gold-tone Coated Stainless Steel Case
- Faceted Crystal Bezel
- Sunray Dial with Crystal Accents
- Italian Calf-skin Leather Strap with Crocodile Embossing
- Water Resistant up to 50 meters (5 ATM)



Image: Front view of the Swarovski Octea Lux Chrono Quartz Watch, highlighting the red sunray dial, chronograph sub-dials, and crystal hour markers.

SETUP

1. Unpacking

Carefully remove the watch from its packaging. Inspect for any visible damage. Retain all packaging materials for future reference or transport.

2. Setting the Time

1. Gently pull the crown (located on the right side of the watch case) out to the second position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

3. Adjusting the Strap

The watch features an Italian calf-skin leather strap with a buckle clasp. To adjust, simply thread the strap through the buckle and secure it at a comfortable fit on your wrist. Ensure the strap is not too tight to allow for proper circulation, nor too loose to prevent the watch from rotating freely.



Image: Back view of the Swarovski Octea Lux Chrono Quartz Watch, showing the case back with brand engraving and the red leather strap with its buckle clasp.

OPERATING THE CHRONOGRAPH

Your Octea Lux Chrono watch is equipped with a chronograph function for measuring elapsed time. The chronograph is operated using the two pushers located on either side of the crown.



Image: Close-up of the watch dial and the two pushers flanking the crown, used for chronograph operation.

1. Starting the Chronograph

Press the top pusher (A) once to start the chronograph. The chronograph seconds hand will begin to move.

2. Stopping and Resuming

Press the top pusher (A) again to stop the chronograph. The elapsed time will be displayed. To resume timing, press the top pusher (A) once more.

3. Resetting the Chronograph

While the chronograph is stopped, press the bottom pusher (B) to reset all chronograph hands to their zero positions.

Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming. It is **not** suitable for diving, snorkeling, or high-impact water sports. Always ensure the crown is fully pushed in before any contact with water. Avoid operating the pushers or crown while the watch is wet or submerged.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your Swarovski watch, clean it regularly. Use a soft, lint-free cloth to wipe the case and crystal. For the leather strap, wipe with a dry, soft cloth. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the watch's finish and strap.

Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the battery runs low, the watch may stop or the second hand may jump in irregular intervals. Battery replacement should be performed by a qualified watchmaker or an authorized Swarovski service center to ensure the water resistance and integrity of the watch are maintained.

Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

TROUBLESHOOTING

Watch Not Running

- Check if the crown is fully pushed in.
- The battery may need replacement. Contact a professional watch service.

Chronograph Hands Not Resetting to Zero

- Ensure the chronograph is stopped before pressing the reset pusher (B).
- If the issue persists, a recalibration or service may be required.

For any issues not covered here, please contact an authorized Swarovski service center.

SPECIFICATIONS

Feature	Specification
Model Number	5646975
Case Size	45.6 mm x 39 mm
Case Diameter	39 Millimeters
Case Thickness	9 Millimeters
Watch Strap Length	17 cm (7 1/2 inches)
Strap Material	Italian Calf-skin Leather
Case Material	Rose Gold-tone PVD Coated Stainless Steel
Dial Color	Red, Rose Gold
Movement Type	Quartz

Display Type	Analog
Water Resistance Depth	50 Meters (5 ATM)
Crystal	Glass
Clasp Type	Buckle

WARRANTY AND SUPPORT

For information regarding the warranty of your Swarovski Octea Lux Chrono watch, please refer to the warranty card included with your purchase or visit the official Swarovski website. For technical support, service, or repairs, please contact an authorized Swarovski retailer or service center. Always ensure that any service is performed by qualified personnel to maintain the watch's integrity and warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question