

[Manuals.plus](#) /

› [Logitech](#) /

› Logitech MX Anywhere 3S Wireless Mouse User Manual

Logitech 910-006960

Logitech MX Anywhere 3S Wireless Mouse User Manual

Model: 910-006960 | Brand: Logitech

INTRODUCTION

The Logitech MX Anywhere 3S is a compact wireless mouse designed for business and travel. It offers advanced features such as any-surface tracking with 8000 DPI, quiet clicks, and MagSpeed scrolling for precision and speed. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your device.

PRODUCT OVERVIEW

The MX Anywhere 3S features an ergonomic design for comfortable use. It includes multiple programmable buttons and a versatile scroll wheel. Below is an image of the mouse highlighting its design.



Figure 1: Top view of the Logitech MX Anywhere 3S Wireless Mouse, showing the scroll wheel, left/right click buttons, and two additional buttons on the side.

Key Features:

- **Any-Surface Tracking:** The 8000 DPI sensor allows tracking on various surfaces, including glass.
- **Quiet Clicks:** Designed for reduced click noise while maintaining tactile feedback.
- **MagSpeed Scrolling:** Provides fast, precise, and quiet scrolling.
- **Ergonomic Design:** Shaped for a natural wrist posture and optimal thumb control.
- **Multi-Device Connectivity:** Connects to up to three devices and allows instant switching.
- **Long Battery Life:** Up to 70 days on a full charge.

SETUP

The Logitech MX Anywhere 3S can be connected via Bluetooth or the included Logi Bolt USB receiver.

Connecting via Bluetooth:

1. Ensure the mouse is powered on using the switch on the bottom.
2. Press and hold one of the Easy-Switch buttons (1, 2, or 3) on the bottom of the mouse until the LED starts blinking rapidly. This indicates pairing mode.
3. On your computer or device, open Bluetooth settings and select "Logitech MX Anywhere 3S" from the list of available devices to pair.
4. The LED on the mouse will glow solid for 5 seconds when connected.

Connecting via Logi Bolt USB Receiver:

1. Plug the Logi Bolt USB receiver into an available USB port on your computer.
2. Ensure the mouse is powered on.
3. The mouse should automatically connect to the receiver. If not, press one of the Easy-Switch buttons (1, 2, or 3) on the bottom of the mouse to select an available channel.

Switching Between Devices:

To switch between paired devices, simply press the corresponding Easy-Switch button (1, 2, or 3) on the bottom of the mouse. The LED next to the selected number will illuminate.

OPERATING INSTRUCTIONS

The MX Anywhere 3S is designed for intuitive use, with customizable options to enhance your workflow.

Customization with Logi Options+ App:

For full customization of buttons and optimization of your workflow, download and install the Logi Options+ app from the official Logitech website. This software allows you to:

- Assign specific functions to the side buttons and the scroll wheel click.
- Adjust tracking speed (DPI) up to 8000.
- Create app-specific profiles for different software applications.
- Configure MagSpeed scrolling behavior.

MagSpeed Scroll Wheel:

The MagSpeed scroll wheel automatically shifts between line-by-line scrolling and hyper-fast free spin mode. You can also manually switch modes by pressing the mode shift button located behind the scroll wheel.

MAINTENANCE

Charging the Mouse:

The MX Anywhere 3S is rechargeable via a USB-C port located at the front of the mouse. A full charge can last up to 70 days, depending on usage. Connect the mouse to a power source using a USB-C cable when the battery indicator light shows low power.

Cleaning:

To clean the mouse, use a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the surface or internal components.

TROUBLESHOOTING

If you encounter issues with your Logitech MX Anywhere 3S mouse, refer to the following common solutions:

Problem	Solution
Mouse not connecting via Bluetooth	<ul style="list-style-type: none">• Ensure the mouse is powered on and fully charged.• Verify the mouse is in pairing mode (blinking LED on Easy-Switch button).• Check your device's Bluetooth settings and ensure Bluetooth is enabled.• Try removing and re-pairing the mouse in your device's Bluetooth settings.
Mouse not connecting via Logi Bolt receiver	<ul style="list-style-type: none">• Ensure the receiver is securely plugged into a USB port.• Try plugging the receiver into a different USB port.• Ensure the mouse is powered on and an Easy-Switch channel is selected.• Install or update the Logi Options+ software to ensure proper driver installation.
Intermittent connection or lag	<ul style="list-style-type: none">• Move the mouse closer to the receiver or Bluetooth device.• Avoid using the mouse on highly reflective surfaces.• Ensure there are no other wireless devices causing interference.• Check for and install any available firmware updates for the mouse via Logi Options+ software.
Buttons or scroll wheel not responding	<ul style="list-style-type: none">• Recharge the mouse.• Restart your computer.• Check button assignments in the Logi Options+ software.

SPECIFICATIONS

Feature	Detail
Brand	Logitech
Model Number	910-006960
Connectivity Technology	Bluetooth, Logi Bolt USB Receiver
Movement Detection Technology	Darkfield High Precision (Gyroscopic)
Mouse Maximum Sensitivity	8000 DPI
Number of Buttons	6 (Left/Right click, Scroll wheel click, Mode shift, Back/Forward buttons)
Hand Orientation	Ambidextrous
Power Source	Battery Powered (1 AA battery included, rechargeable)
Battery Life	Up to 70 days on a full charge
Wireless Range	10 meters (33 feet)

Feature	Detail
Compatible Operating Systems	Mac OS X 10.1 Puma, Windows 10, Windows 7, Windows 8 (and newer)
Item Weight	5.28 ounces
Material	Plastic

WARRANTY AND SUPPORT

The Logitech MX Anywhere 3S is covered by a manufacturer's warranty. For detailed warranty information and technical support, please visit the official Logitech support website or refer to the warranty card included with your product.

Online Support: support.logi.com

