

[Manuals.plus](#) /

› [Pentax](#) /

› Pentax Zoom 105 R/Super 35mm Point and Shoot Film Camera Instruction Manual

Pentax Zoom 105 R/Super

Pentax Zoom 105 R/Super 35mm Point and Shoot Film Camera

Model: Zoom 105 R/Super

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Pentax Zoom 105 R/Super 35mm Point and Shoot Film Camera. Please read this manual thoroughly before operating the camera and keep it for future reference. This camera is designed for ease of use, offering automatic features for capturing memorable moments on 35mm film.



Image: Front view of the Pentax Zoom 105 R/Super camera, showcasing its zoom lens and built-in flash.

SETUP

1. Battery Installation

The Pentax Zoom 105 R/Super requires two AA batteries for operation. Ensure the camera is powered off before installing or replacing batteries.

1. Locate the battery compartment cover on the side or bottom of the camera.
2. Slide or unlatch the cover to open the compartment.
3. Insert two fresh AA batteries, observing the correct polarity (+/-) indicated inside the compartment.
4. Close the battery compartment cover securely until it latches.

2. Film Loading

This camera uses standard 35mm film. Always load film in subdued light to prevent accidental exposure.

1. Open the camera back by sliding the latch located on the side of the camera.
2. Place the film cartridge into the film chamber on the left side, ensuring the film leader points towards the take-up spool on the right.
3. Pull the film leader across to the take-up spool and align it with the red mark or slot.
4. Gently close the camera back until it clicks securely. The camera will automatically advance the film to the first frame.

OPERATING THE CAMERA

1. Power On/Off

To power on the camera, slide the power switch or open the lens barrier (if applicable to your specific model). The camera will typically extend its lens and be ready for use. To power off, close the lens barrier or slide the power switch to the OFF position.

2. Taking Photos

1. Look through the viewfinder to compose your shot.
2. Gently press the shutter button halfway down to activate the autofocus system. The camera will focus on your subject, and an indicator light (often green) in the viewfinder will confirm focus.
3. Press the shutter button all the way down to take the picture. The camera will automatically advance the film to the next frame.

3. Zoom Lens Operation

The Pentax Zoom 105 R/Super features a 38-105mm zoom lens. Use the zoom buttons (usually marked 'W' for Wide and 'T' for Telephoto) located near the shutter button to adjust the focal length. Press 'W' to zoom out (wider view) and 'T' to zoom in (telephoto view).

4. Built-in Flash

The camera is equipped with a built-in flash for low-light conditions. The flash typically operates in an automatic mode, firing when necessary. Some models may offer manual flash control options (e.g., fill-flash, flash off, red-eye reduction) accessible via a mode dial or buttons. Refer to your specific model's markings for these options.

MAINTENANCE

1. Cleaning

- **Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For smudges, use a specialized lens cleaning solution and cloth.
- **Body:** Wipe the camera body with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

2. Film Unloading

Once all frames on the film roll have been exposed, the camera will usually rewind the film automatically. If manual rewind is necessary, locate the rewind button (often on the bottom or side) and press it until the film is fully rewound into its cartridge. Open the camera back and remove the film cartridge for development.

3. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the camera will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Camera does not power on:** Check if batteries are correctly installed and fully charged. Replace if necessary.
- **Film does not advance:** Ensure film is loaded correctly and the camera back is securely closed.
- **Flash does not fire:** The flash may be in a mode where it is disabled, or the batteries may be low. Allow time for the flash to charge if it's in auto mode.
- **Blurry photos:** Ensure the autofocus indicator confirms focus before fully pressing the shutter. Hold the camera steady.

SPECIFICATIONS

Feature	Detail
Brand	Pentax
Model Name	Pentax Zoom 105 / 105R
Film Format Type	35mm
Special Feature	Auto Exposure, Built In Flash
Included Components	Camera Body & Lens
Item Weight	14.4 ounces
Package Dimensions	5 x 4 x 3 inches
UPC	796575663848

WARRANTY AND SUPPORT

This product is offered as an Amazon Renewed item. Amazon Renewed products are backed by the Amazon Renewed Guarantee. This guarantee gives you a replacement or refund within 90 days of receipt if the product does not work as expected. For specific details regarding your warranty and support options, please refer to the Amazon

Renewed program terms and conditions or contact Amazon customer service directly.

© 2024 Pentax. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question