

GHUST TX-43GXR600, TX-49GXR600, TX-55GXR600, TH-32GS550V, TH-43GX650S, TH-49GX650K, TH-49GX655K, TH-65HX650W, TH-75HX600W, TH-

GHUST Voice Remote Control User Manual

Replacement for Panasonic Smart TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the GHUST Voice Remote Control, designed as a direct replacement for various Panasonic Smart TV models. This remote offers precise control and voice search capabilities, enhancing your television viewing experience.

1.1 Compatible TV Models

The GHUST Voice Remote Control is compatible with the following Panasonic TV models:

- TX-43GXR600
- TX-49GXR600
- TX-55GXR600
- TH-32GS550V
- TH-43GX650S
- TH-49GX650K
- TH-49GX655K
- TH-65HX650W
- TH-75HX600W
- TH-65HX750K

2. SETUP AND INITIAL USE

2.1 Battery Installation

To begin using your GHUST Voice Remote Control, you will need two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Close the battery compartment cover securely.

Important: Ensure batteries are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries.

2.2 First Use

No programming or complex setup is required for this replacement remote. Once the batteries are correctly installed, the remote is ready for immediate use with your compatible Panasonic Smart TV. Simply point the remote towards your television and begin operating it.

3. OPERATING INSTRUCTIONS

The GHUST Voice Remote Control features a standard layout with dedicated buttons for various functions. Refer to the image below for a visual guide to the remote's buttons.



Figure 1: Overview of the GHUST Voice Remote Control. This image displays the full remote, showing the power button, number pad, volume and channel controls, navigation buttons, and dedicated function keys.

3.1 Button Functions

Below is a description of the primary functions of the remote control buttons:

Button	Function
Power (Red Button)	Turns the TV on or off.
Number Pad (0-9)	Direct channel selection or inputting numbers.
LIST	Accesses the channel list or other indexed content.
INFO	Displays information about the current program or input.
VOL (+/-)	Adjusts the volume level up or down.
Mute (Speaker with X)	Mutes or unmutes the TV audio.
P (Channel Up/Down)	Changes the TV channel up or down.
Voice Assistant (Google Assistant icon)	Activates the voice control feature for commands and search.
NETFLIX	Direct access to the Netflix application.
HOME	Returns to the TV's home screen or main menu.
MENU	Opens the TV's main settings or options menu.
Navigation (Up, Down, Left, Right Arrows)	Navigates through menus and selections.
OK	Confirms a selection or enters a menu item.
BACK	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
GUIDE / REVEAL	Accesses the electronic program guide (EPG) or reveals hidden information.
ZOOM / INDEX	Zooms in/out or accesses an index function.
SOURCE / HOLD	Selects input source or holds a function.
Playback Controls (Rewind, Play, Fast Forward, Pause, Stop)	Controls media playback (e.g., USB, streaming apps).
SUBTITLE	Toggles subtitles on or off.
Color Buttons (R, G, Y, B)	Context-sensitive functions, often used in menus or interactive services.
TEXT	Accesses teletext services.
FAV	Accesses favorite channels or content.
AD	Activates Audio Description for visually impaired users.
I/II	Switches between audio tracks or dual sound modes.

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the remote control's appearance and functionality, wipe it regularly with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Care

- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.
- If the remote's performance degrades, replace both AAA batteries with new ones.

5. TROUBLESHOOTING

If you encounter issues with your GHUST Voice Remote Control, please refer to the following common problems and solutions:

Problem	Possible Solution
Remote is not responding.	<ul style="list-style-type: none">◦ Check if the batteries are inserted correctly with the correct polarity.◦ Replace old batteries with new AAA batteries.◦ Ensure there are no obstructions between the remote and the TV's infrared sensor.◦ Point the remote directly at the TV.
Voice control is not working.	<ul style="list-style-type: none">◦ Ensure your TV supports voice control and is properly configured.◦ Check the TV's network connection, as voice features often require internet access.◦ Speak clearly and directly into the remote's microphone.
Specific buttons are not working.	<ul style="list-style-type: none">◦ Clean the remote control, especially around the non-functional buttons, to remove any dirt or debris.◦ Test other buttons to determine if it's an isolated button issue or a general remote problem.

6. SPECIFICATIONS

Feature	Detail
Brand	GHUST
Compatibility	Panasonic Smart TVs (Specific models listed in Section 1.1)
Special Feature	Voice Search
Power Source	2 x AAA Batteries (not included)
Color	Black
Material	High-quality ABS



 
Feature	Detail
Dimensions	Approximately 9.84 x 4.72 x 1.38 inches (Package Dimensions)
Item Weight	Approximately 2.12 ounces




7. SUPPORT AND WARRANTY

GHUST is committed to providing high-quality products. If you have any questions regarding the quality or functionality of your GHUST Voice Remote Control, please do not hesitate to contact our customer service. We are dedicated to resolving any issues promptly to ensure your satisfaction.


For customer support, please refer to the contact information provided with your purchase or visit the GHUST official website.

Related Documents - TX-43GXR600, TX-49GXR600, TX-55GXR600, TH-32GS550V, TH-43GX650S, TH-49GX650K, TH-49GX655K, TH-65HX650W, TH-75HX600W, TH-

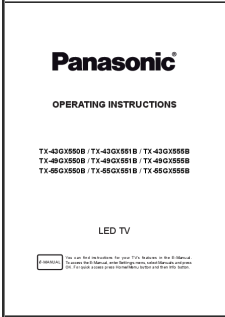	<p>Panasonic LED TV Operating Instructions & Model Guide</p> <p>Comprehensive operating instructions and user manual for Panasonic LED TV models TX-40JX850B, TX-50JX850B, TX-58JX850B, TX-65JX850B series. Covers setup, safety, connections, features, and specifications.</p>
	<p>Panasonic LED TV Operating Instructions: TX-40/50/58/65JX800 Series</p> <p>Comprehensive operating instructions for Panasonic LED TV models TX-40JX800B, TX-40JX800BZ, TX-50JX800B, TX-50JX800BZ, TX-58JX800B, TX-58JX800BZ, TX-65JX800B, and TX-65JX800BZ. Covers setup, connections, features, safety, and maintenance.</p>
	<p>Panasonic LED TV Operating Instructions TX-43GX550B Series</p> <p>Comprehensive operating instructions for Panasonic LED TV models TX-43GX550B, TX-43GX551B, TX-43GX555B, TX-49GX550B, TX-49GX551B, TX-49GX555B, TX-55GX550B, TX-55GX551B, and TX-55GX555B. Covers setup, features, maintenance, troubleshooting, and connectivity.</p>

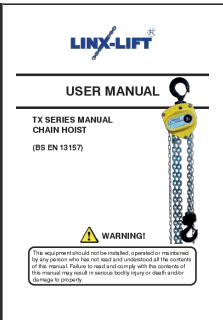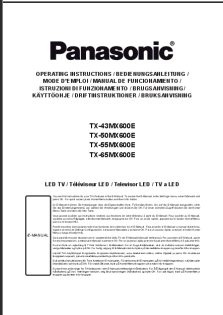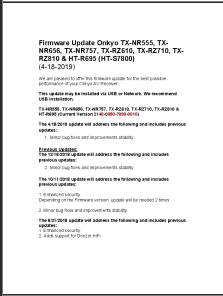   	<p>LINX-LIFT TX Series Manual Chain Hoist User Manual</p> <p>User manual for the LINX-LIFT TX Series manual chain hoist, detailing safety, operation, inspection, maintenance, troubleshooting, and spare parts for models TX-0.5T through TX-30T.</p>
	<p>Panasonic LED TV Operating Instructions & User Manual (TX-43MX600E, TX-50MX600E, TX-55MX600E, TX-65MX600E)</p> <p>Comprehensive operating instructions and user manual for Panasonic LED Televisions, model series MX600E. Includes setup, features, connectivity, troubleshooting, and specifications.</p>
	<p>Onkyo AV Receiver Firmware Update Guide for TX-NR555, TX-NR656, TX-NR757, TX-RZ610, TX-RZ710, TX-RZ810 & HT-R695</p> <p>Official firmware update information for Onkyo AV receivers TX-NR555, TX-NR656, TX-NR757, TX-RZ610, TX-RZ710, TX-RZ810, and HT-R695 (HT-S7800). Details release notes, installation instructions via USB or Network, and important precautions.</p>

 Documents - GHUST – TX-43GXR600, TX-49GXR600, TX-55GXR600, TH-32GS550V, TH-43GX650S, TH-49GX650K, TH-49GX655K, TH-65HX650W, TH-75HX600W, TH-

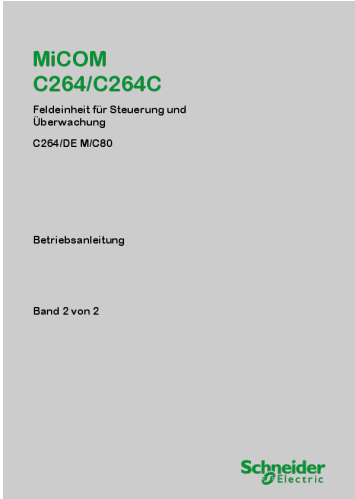


[\[pdf\]](#) Guide Declaration of Conformity

MiCOM C264 C264C DE M C80 Schneider Electric Band2 schneider electric files p enDocType User guide File Name Doc Ref


MiCOM C264/C264C Feldeinheit fr Steuerung und berwachtung C264/DE M/C80 Betriebsanleitung Band 2 von 2 Betriebsanleitung C264/DE M/C80 MiCOM C264/C264C Seite 1/2 MiCOM C264/C264C FELDEINHEIT FR STEUERUNG UND BERWACHUNG INHALT Inbetriebnahme Inbetriebnahmeprotokoll Wartung Anwendung Lexikon An...

 lang:de score:19 filesize: 18 M page_count: 454 document date: 2013-08-22

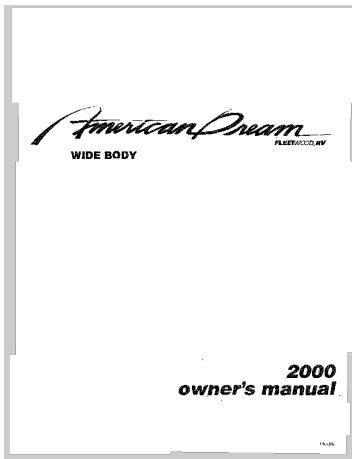


[\[pdf\]](#) User Manual Owner's Manual Flyer Diagram

owner s manual American Dream Operator Manual t 1552497620 bus manuals jimdo free app 11540397728 AMERICAN COACH Manuals Bus Coach Wiring Diagrams Fault Codes ||| WIDE BODY 2000 owner s manual. WIDE BODY 2000 1999 by Fleetwood Enterprises, Tne. Allighls re-er ... a weigh Sta1illll, the attendant will guide you through lthe correct positioning of the motor home on **th-** -cales. l. Center the front wheels on the scale platform and take a reading. This Lq the front ... lang:en score:18 filesize: 3.25 M page_count: 222 document date: 2018-06-29

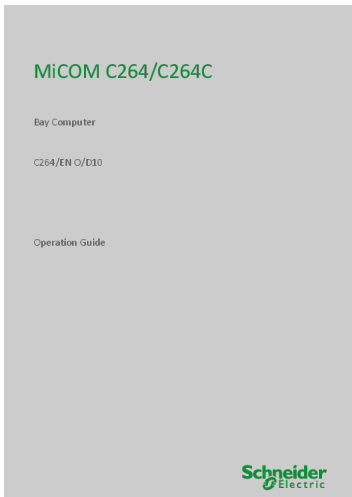 

[\[pdf\]](#) Specifications Guide Declaration of Conformity

 MiCOM C264 C264C EN O D10 Schneider Electric schneider electric files p enDocType User guide File Name Doc Ref M MiCOM C264/C264C Bay Computer C264/EN O/D10 Operation Guide Operation Guide MiCOM C264/C264C MiCOM C264/C264C BAY COMPUTER CONTENTS Safety Handling Introduction Technical Data Functional Description Hardware Connection Human Machine Interface Application Glossary C264/EN O/D10 Page 1/2 C264/EN... lang:en score:17 filesize: 16.82 M page_count: 834 document date: 2013-08-23

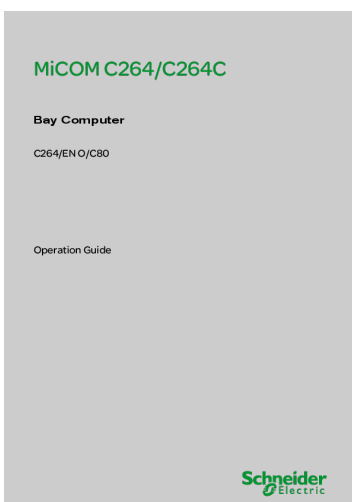

[\[pdf\]](#) Specifications Guide Declaration of Conformity


MiCOM C264 C264C Bay Computer EN O C80 Schneider Electric schneider electric files p enDocType User guide File Name Doc Ref MiCOM C264/C264C Bay Computer C264/EN O/C80 Operation Guide Operation Guide MiCOM C264/C264C MiCOM C264/C264C BAY COMPUTER CONTENTS Safety Handling Introduction Technical Data Functional Description Hardware Connection Human Machine Interface Application Lexical C264/EN O/C80 Page 1/2 C264/EN ... lang:en score:17 filesize: 21.09 M page_count: 828 document date: 2011-10-24



[\[pdf\]](#) Guide

Movie Radio Guide September 26 1942 for Old Time Researchers group otrr org scanned by Al Girard
And 42 09 worldradiohistory Archive |||

 FIFTEEN CENTS r PROGRAMS FOR SEPT. 26-OCT. 2 i .0t:j. -.t Air loan Leslie: It s
Fun to Be Sevent ... 1 AL1 IV FIIM WSBT WCCO *Ness: 1Vt1BIt WROK WCFL
WEAL: W01 WIND Ch i-iafian Science: WHO WISH *KI **TH-** 3Faratr06 of Rhythm:
News It NA MIITittl Atotorradt IV Ail The fHti Sunday School WC S. Hs o...
lang:en **score:16** filesize: 9.93 M page_count: 40 document date: 2014-02-22

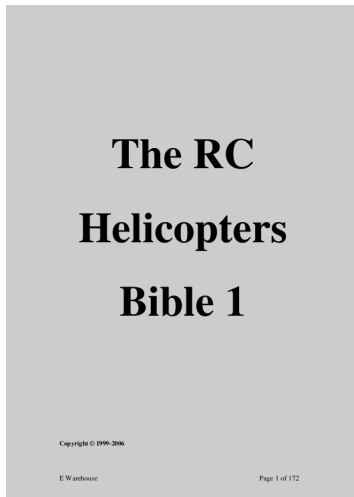

[The RC Helicopters Bible: A Comprehensive Guide to Flying and Maintenance](#)

Explore the world of Radio Control (RC) helicopters with 'The RC Helicopters Bible'.
This comprehensive guide covers everything from buying your first model, learning to
fly, advanced maneuvers, maintenance tips, troubleshooting, and detailed
specifications for popular models like Nexus and Raptor.

lang:en **score:12** filesize: 411.76 K page_count: 172 document date: 2006-03-13