

[Manuals.plus](#) /

> [YY KATTY](#) /

> YY KATTY Universal Replacement Remote Control User Manual

YY KATTY universal

YY KATTY Universal Replacement Remote Control User Manual

Model: universal

1. INTRODUCTION

The YY KATTY Universal Replacement Remote Control is designed to simplify your home entertainment experience by providing a single control unit for a wide range of televisions. This remote offers broad compatibility and two straightforward setup methods, ensuring ease of use for most smart TVs and older models on the market.

1.1. Key Features

- **Wide Compatibility:** Works with most TV brands, including LG, Samsung, Philips, Panasonic, Sharp, TCL, Vizio, Sony, Sanyo, Toshiba, Maganvox, Hisense, JVC, RCA, Hitachi, Haier, Westinghouse, Vestel, and Seiki.
- **Direct Replacement:** Eliminates the need for multiple remotes, directly replacing original controls.
- **Easy Setup:** Features two convenient setting methods for quick configuration.
- **Enhanced Convenience:** Streamlines channel navigation, volume adjustment, and access to smart features.
- **Reliable Performance:** Constructed with high-quality, environmentally friendly materials for durability.



Figure 1.1: The remote control highlighting its wide compatibility with various TV brands. This image illustrates the range of televisions the remote can operate, including LG, Samsung, Philips, Panasonic, Sharp, TCL, Vizio, Sony, Sanyo, Toshiba, Maganvox, Hisense, JVC, RCA, Hitachi, Haier, Westinghouse, Vestel, and Seiki.

2. SETUP GUIDE

Your YY KATTY Universal Remote Control offers two primary methods for setup: direct use (no programming required for many models) and code-based programming. Please ensure 2 AAA batteries are installed correctly before proceeding.

2.1. Battery Installation

Open the battery compartment on the back of the remote control. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment. Close the battery cover securely.



Figure 2.1: An illustration showing the remote control and indicating the requirement for 2 AAA batteries for operation. The image also highlights the use of environmentally friendly materials in the product's construction.

2.2. Direct Use (No Programming Required)

For many modern TV models, the remote control may work directly out of the box without any programming. Simply point the remote at your TV and try pressing the Power button. If the TV responds, no further setup is needed.



Environmentally friendly materials, safe and reliable

Product size: L x W x thick
17.5 x 4.5 x 1.7(CM)

2 AAA batteries to work

Environmentally friendly materials

Figure 2.2: This image emphasizes the remote's ability to be used directly with many TVs without requiring complex programming. It shows the remote in front of multiple TV screens, suggesting immediate functionality.

2.3. Code-Based Programming (Manual Input)

If the direct use method does not work, you will need to program the remote using a specific code for your TV brand. Refer to the code list provided with your remote control's packaging. The general steps are:

1. Turn on the TV you wish to control.
2. Press and hold the 'SET' button (or a similar programming button, refer to your specific remote's manual if different) until the indicator light on the remote turns on.
3. Enter the 3-digit or 4-digit code for your TV brand using the number buttons.
4. The indicator light should turn off, indicating successful programming.
5. Test the remote by pressing the Power button. If the TV turns off, the remote is successfully programmed. If not, try the next code for your TV brand or repeat the process.

Note: Some universal remotes may also offer an automatic code search function. Consult your remote's specific instructions for details on this method if available.

3. OPERATING THE REMOTE CONTROL

Once programmed, your universal remote control functions similarly to your original TV remote. Below is a guide to the common buttons and their functions.

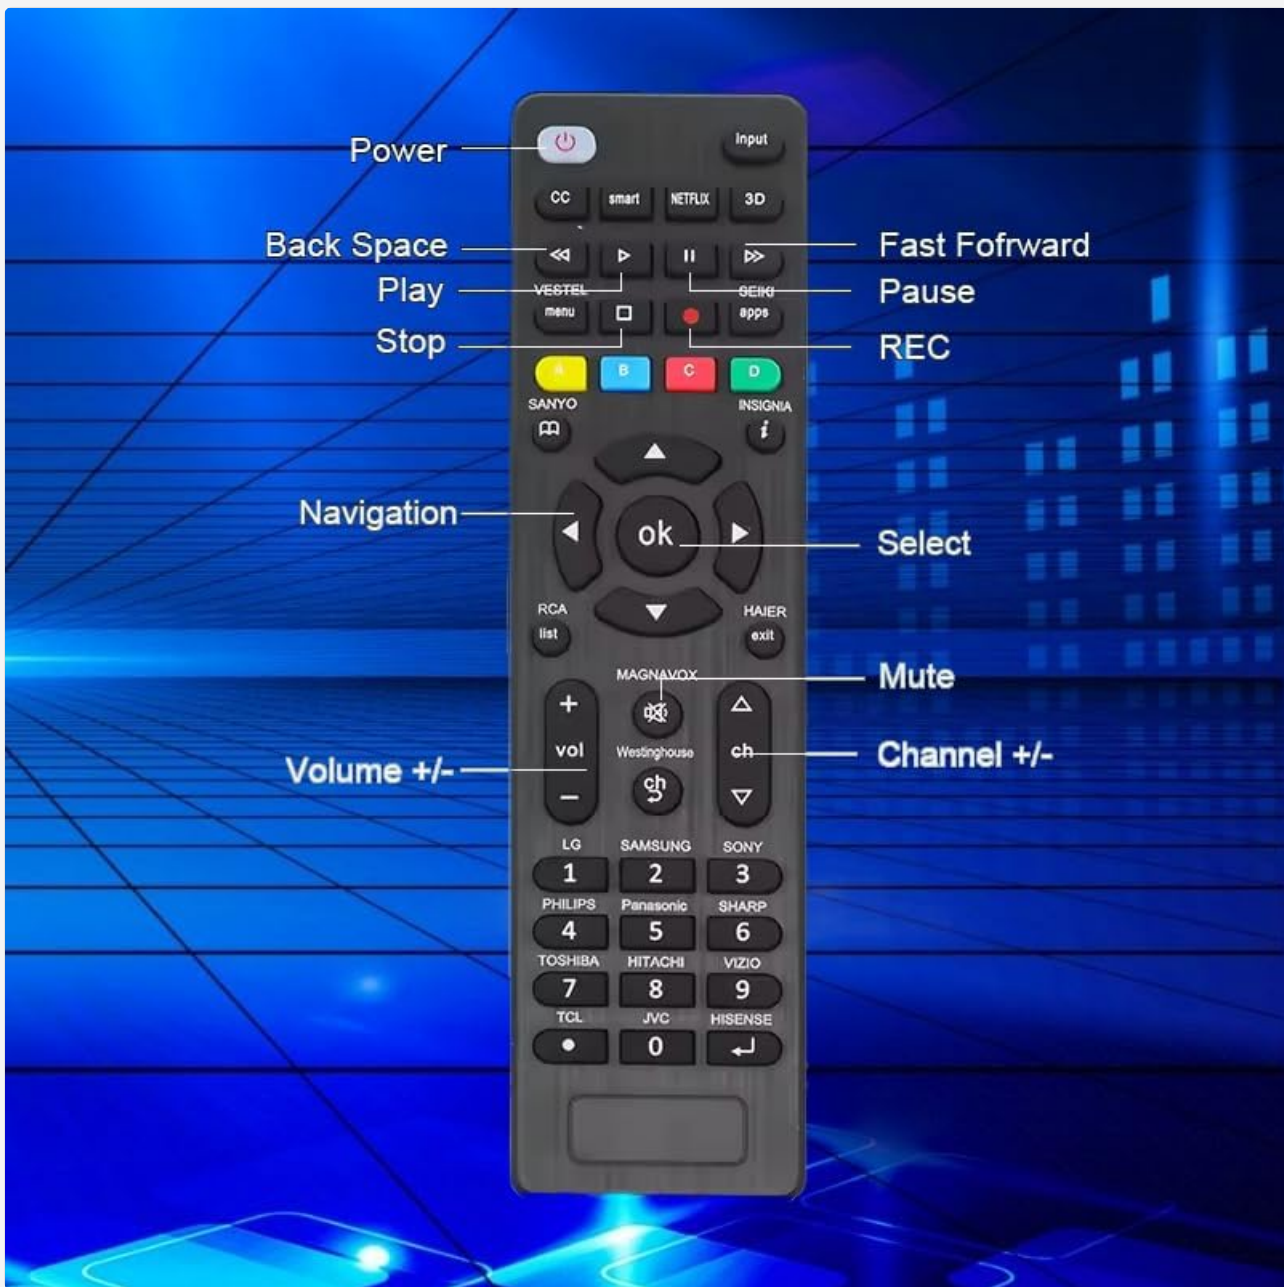


Figure 3.1: A detailed diagram of the remote control, labeling its various buttons and their corresponding functions, such as Power, Input, Navigation, Volume, Channel, and media playback controls.

3.1. Button Functions

- **Power ():** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **CC (Closed Caption):** Toggles closed captions on/off.
- **Smart/Netflix/3D/Apps:** Direct access buttons for smart TV features or specific streaming services (functionality may vary by TV model).
- **Media Playback Controls (◀◀, ▶, ■, ●):** Fast forward, play, pause, stop, and record functions.
- **Menu/Vestel/Seiki:** Accesses the TV's main menu or specific brand menus.
- **Color Buttons (A, B, C, D):** Multi-functional buttons often used for specific features within menus or smart TV apps.

- **Navigation (▲, ◀, ▼, ▶):** Arrow keys for navigating menus and selecting options.
- **OK:** Confirms selections in menus.
- **RCA/List/Haier/Exit:** Specific brand buttons or general function buttons like 'List' for channel lists or 'Exit' to leave menus.
- **Vol +/-:** Adjusts the volume up or down.
- **Mute ():** Mutes or unmutes the TV sound.
- **Ch +/-:** Changes channels up or down.
- **Number Pad (0-9):** Direct channel entry and numerical input.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

4.1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always use new AAA batteries and ensure correct polarity. Do not mix old and new batteries, or different types of batteries.

4.2. Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, which can damage the internal components.

4.3. Storage

Store the remote in a dry place, away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your universal remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly and have sufficient charge. Replace them if necessary.
 - Ensure there are no obstructions between the remote and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's IR receiver.
- **Remote does not control the TV:**
 - Re-attempt the programming process (Section 2.3) using a different code for your TV brand if multiple codes are listed.
 - Verify that the TV is powered on and not in standby mode.
 - Confirm that the remote is pointed directly at the TV's IR sensor.
- **Some buttons do not work:**
 - This can sometimes happen if the programmed code is not a perfect match. Try another code for your TV brand.
 - Ensure the buttons are not stuck or dirty. Clean the remote as described in Section 4.2.

- **Remote works for non-smart TVs:**

- While advertised for smart TVs, this universal remote is also compatible with many older, non-smart TV models. The setup process remains the same.

6. SPECIFICATIONS

Feature	Detail
Brand	YY KATTY
Model Number	universal
Package Dimensions	6.85 x 1.77 x 0.94 inches
Item Weight	1.76 ounces
Color	Black
Power Source	2 x AAA Batteries (not included)
Max Number of Supported Devices	8 (Universal compatibility)
Compatible Devices	Television
Special Feature	Universal

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your YY KATTY Universal Replacement Remote Control, please refer to the documentation included with your purchase or contact the manufacturer directly through their official website or customer service channels. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 YY KATTY. All rights reserved.

For more information, visit www.yykatty.com (placeholder link)