

CDCASA PE305-XNE-BN-LL-1

CDCASA Oversized Swivel Rocker Recliner Chair User Manual

Model: PE305-XNE-BN-LL-1

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using this recliner chair. Keep this manual for future reference.

- **Weight Limit:** Do not exceed the maximum weight capacity of 350 pounds (158 kg). Overloading may cause damage to the chair or personal injury.
- **Children and Pets:** Keep children and pets away from the recliner mechanism, especially during operation, to prevent injury.
- **Placement:** Ensure the chair is placed on a level, stable surface. Allow sufficient clearance around the chair for reclining and rocking functions (recommended wall clearance: 7.5 inches).
- **Moving Parts:** Be aware of moving parts when operating the recliner. Keep hands and feet clear of the mechanism.
- **Cleaning:** Use only recommended cleaning methods for chenille fabric. Avoid harsh chemicals that may damage the material.
- **Inspection:** Periodically inspect all connections and fasteners to ensure they are tight and secure.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Note: Your chair may arrive in two separate boxes, which might be delivered on different days.

- Seat Base with Reclining Mechanism
- Backrest
- Left Armrest
- Right Armrest
- User Manual (this document)



Image: Chair components are shipped in two boxes for convenient delivery and assembly.

3. ASSEMBLY INSTRUCTIONS

Assembly of the CDCASA Oversized Swivel Rocker Recliner Chair is designed to be straightforward and typically takes about 15 minutes. No additional tools are required.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from their packaging. Ensure no parts are left inside the boxes.
2. **Attach Armrests:** Align the metal brackets on the armrests with the corresponding slots on the sides of the seat base. Slide the armrests down firmly until they click into place.
3. **Attach Backrest:** Position the backrest over the rear of the seat base, aligning its metal brackets with the slots on the seat base. Push down firmly until the backrest locks securely.
4. **Secure Connections:** Gently push down on all assembled parts to ensure they are fully engaged and stable.
5. **Remove Shipping Ties:** Locate and carefully cut any plastic zip ties securing the reclining mechanism or other components underneath the chair. These are for shipping purposes only.

Your browser does not support the video tag.

Video: This official assembly guide demonstrates the quick and easy steps to set up your CDCASA recliner chair, including attaching the armrests and backrest to the seat base.

4. OPERATING INSTRUCTIONS

4.1 Reclining Function

1. **To Open Footrest and Recline to TV Position:** Locate the pull ring on the right side of the seat. Pull the ring outwards. The footrest will extend, and the backrest will simultaneously adjust to a standard TV viewing position.
Recommendation: Place your legs against the footrest before pulling the ring for smoother operation.
2. **To Fully Recline (up to 160°):** From the TV position, gently lean back against the backrest. Apply slight pressure with your back to push the backrest further into a more reclined position, up to a maximum of 160 degrees for deeper relaxation.
3. **To Close Footrest:** While seated, press your heels firmly against the footrest. The footrest will retract, and the


backrest will return to its upright position. You may need to lean forward slightly to assist the mechanism.



1.Pull with your hand to open the footrest.



It is recommended to brace the footrest with your legs before opening it.

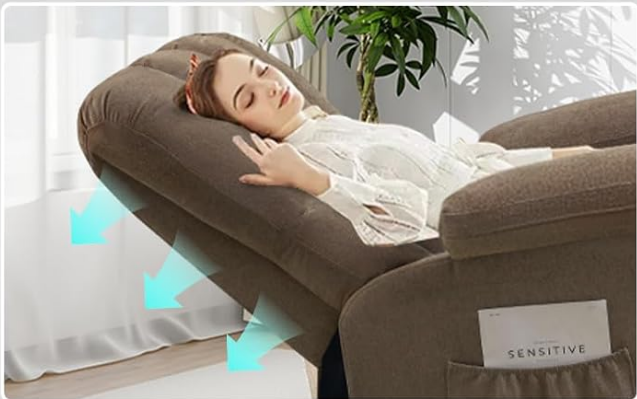

2.Lean back to recline the backrest.



You need to apply some pressure with your foot to close the footrest.

Image: Visual guide to the reclining mechanism, illustrating how to open the footrest and adjust the backrest.



Image: This diagram illustrates the various reclining angles, from 90° for reading to 160° for sleeping, and the corresponding body support.

4.2 Swivel and Rocking Function

The chair features a smooth 360-degree swivel base and a gentle rocking motion for added comfort.

- **Swivel:** To swivel, simply rotate the chair in any direction. The 360-degree swivel base allows for full rotation.
- **Rocking:** To engage the rocking function, lean back and forth gently. The chair is designed to provide a stable and comfortable rocking experience.

3-IN-1 FUNCTION

Recliner & Swivel & Rocking



Image: This image demonstrates the chair's 3-in-1 functionality, including the 360-degree swivel and rocking motion.

5. MAINTENANCE

Proper care and maintenance will extend the life of your CDCASA recliner chair.

- **Cleaning Chenille Fabric:**

- For light cleaning, vacuum regularly with an upholstery attachment to remove dust and loose particles.
- For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain.
- For deeper cleaning, use a mild fabric cleaner specifically designed for chenille or upholstery. Test on an inconspicuous area first. Follow the cleaner's instructions carefully.
- Avoid using harsh chemicals, bleach, or abrasive cleaners, as these can damage the fabric.

- **Mechanism Care:** The reclining and swivel mechanisms are designed for durability. Avoid forcing the mechanism. If it feels stiff, ensure no obstructions are present. Do not apply lubricants unless specifically instructed by customer

- support.
- **Structural Integrity:** Periodically check all bolts and screws to ensure they are tight. Retighten if necessary.
 - **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric.

6. TROUBLESHOOTING

If you encounter any issues with your recliner chair, please refer to the following common solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Footrest does not extend or retract smoothly.	Obstruction in mechanism; mechanism not fully engaged; shipping ties still attached.	Check for any objects blocking the mechanism. Ensure all shipping ties have been removed. Apply pressure with legs/heels as instructed.
Backrest does not recline or return to upright position.	Not enough pressure applied; obstruction; mechanism issue.	Ensure you are applying sufficient back pressure to recline or leaning forward to return upright. Check for obstructions.
Chair feels unstable or wobbly.	Loose connections; uneven floor.	Check and tighten all assembly connections (armrests, backrest). Ensure the chair is on a level surface.
Swivel or rocking motion is stiff.	Obstruction under base; mechanism needs break-in.	Check for any objects under the chair base. New mechanisms may require some use to become smoother.

7. SPECIFICATIONS

Feature	Detail
Brand	CDCASA
Model Number	PE305-XNE-BN-LL-1
Color	Brown
Product Dimensions (D x W x H)	37.6"D x 36.6"W x 39.4"H
Seat Depth	22.6 inches
Maximum Weight Capacity	350 Pounds (158 kg)
Materials	Wood, Alloy Steel, High Rebound Sponge, Chenille Fabric
Item Weight	90.4 Pounds (41 kg)
Fabric Type	Chenille
Special Features	360° Swivel, Rocking Function, Manual Recliner, Side Pockets

Feature	Detail
Reclining Positions	Standard TV position, up to 160° full recline



Load capacity: 350LBS

Ideal Height: 5'1-5'9

Wall Clearance: 7.5"



Image: Comprehensive diagram displaying the dimensions of the recliner chair, including width, depth, height, seat dimensions, and wall clearance.

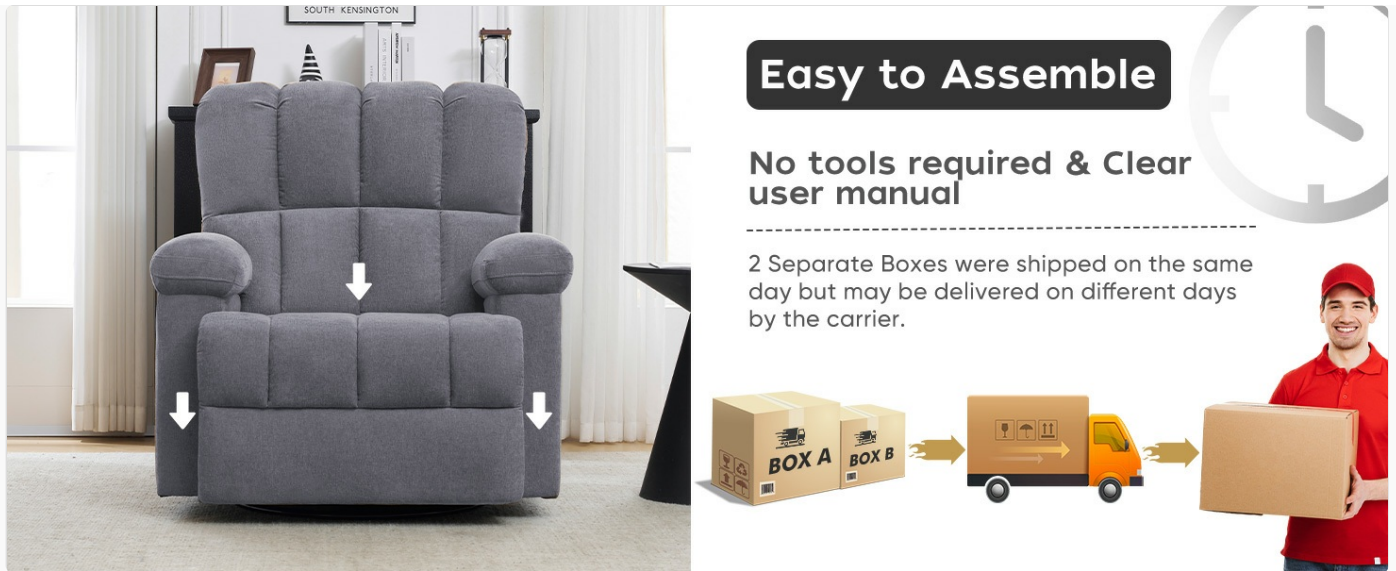


Image: Detailed views showcasing the chair's wider seat, the robust 360-degree swivel base, and the sturdy footrest mechanism.

8. WARRANTY AND SUPPORT

CDCASA is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, we encourage you to retain your proof of purchase.

For any inquiries, assistance with assembly, operational questions, or troubleshooting, please do not hesitate to contact our customer support team. We are here to gladly assist you.

Contact information typically found on the product packaging or the retailer's website.

© 2024 CDCASA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question