

Manuals.plus /

- › ZWP /
- › User Manual for ZWP BN59-01181B Replacement Remote Control

ZWP BN59-01181B

User Manual

ZWP REPLACEMENT REMOTE CONTROL

Model: BN59-01181B

1. Introduction

This manual provides instructions for the ZWP BN59-01181B Replacement Remote Control. This remote is designed to be a direct replacement for various Samsung Smart TV remote models, offering seamless functionality without the need for complex programming.

2. Product Overview



Figure 2.1: Front view of the ZWP BN59-01181B Replacement Remote Control, showing

all buttons and the ergonomic design.



Figure 2.2: Dimensions of the remote control, illustrating its length (5.51 inches), width (1.97 inches), and thickness (0.91 inches).

2.1 Key Features

- **Direct Replacement:** Compatible with various Samsung Smart TV models including BN59-01185A, BN59-01181B, BN59-01182F, BN59-01185F, BN59-01181A, UA55H8000AW, and UA65HU8500W.
- **No Programming Required:** Functions immediately upon battery insertion.
- **Durable Construction:** Made from high-quality, wear-resistant ABS material for comfortable handling and long life.
- **Stable Signal:** Designed for quick response and stable link with your television.
- **Long Range Control:** Effective control up to 26 feet with multi-angle capability (120 degrees).

3. Setup

3.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Work Right Out of The Box After Putting Batteries

Requires Two AAA batteries
(Batteries are not included)

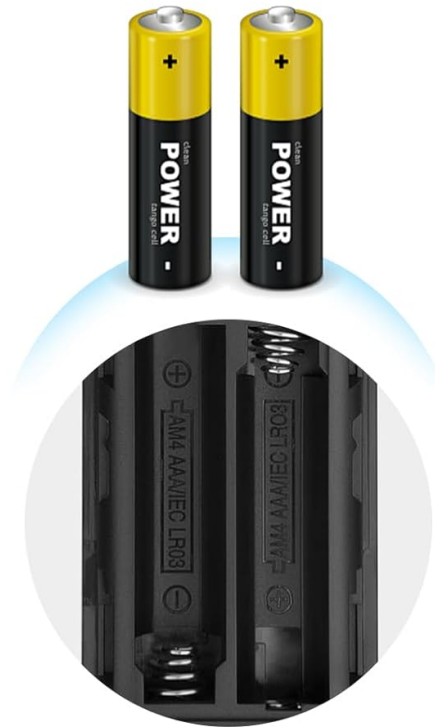


Figure 3.1: Illustration of the battery compartment and proper AAA battery insertion.

Once batteries are installed, the remote control is ready for use with compatible Samsung Smart TVs without any additional pairing or programming.

4. Operation

This remote control functions identically to the original Samsung remote models it replaces. Simply point the remote at your Samsung Smart TV and press the desired buttons.

4.1 Basic Functions

- **Power Button ():** Turns the TV on or off.
- **Volume Up/Down (VOL +/-):** Adjusts the television volume.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Smart Hub:** Accesses the Samsung Smart Hub for apps and streaming services.
- **Return/Exit:** Navigates back or exits menus.
- **Directional Pad (Navigation Ring):** Used to navigate through menus and selections.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **Menu:** Opens the TV's main menu.

- **Guide/CH.LIST:** Displays the program guide or channel list.
- **Play/Pause/Stop/Fast Forward/Rewind:** Media playback controls.

Long Distance Precise Control



Figure 4.1: The remote control offers long-range and multi-angle precise control for seamless operation.

5. Maintenance

5.1 Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

5.2 Storage

When not in use for extended periods, or if the remote is not functioning correctly, consider removing the batteries to prevent leakage and potential damage to the remote.



Figure 5.1: The remote is designed with a comfortable feel and made from environmentally friendly ABS material for durability.

6. Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote has limited range or intermittent response.	Low batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Remove any obstructions. Ensure TV's IR sensor is clear.
Certain buttons do not work.	Remote malfunction; TV model incompatibility for specific functions.	Verify remote compatibility with your specific TV model. If issue persists, contact support.

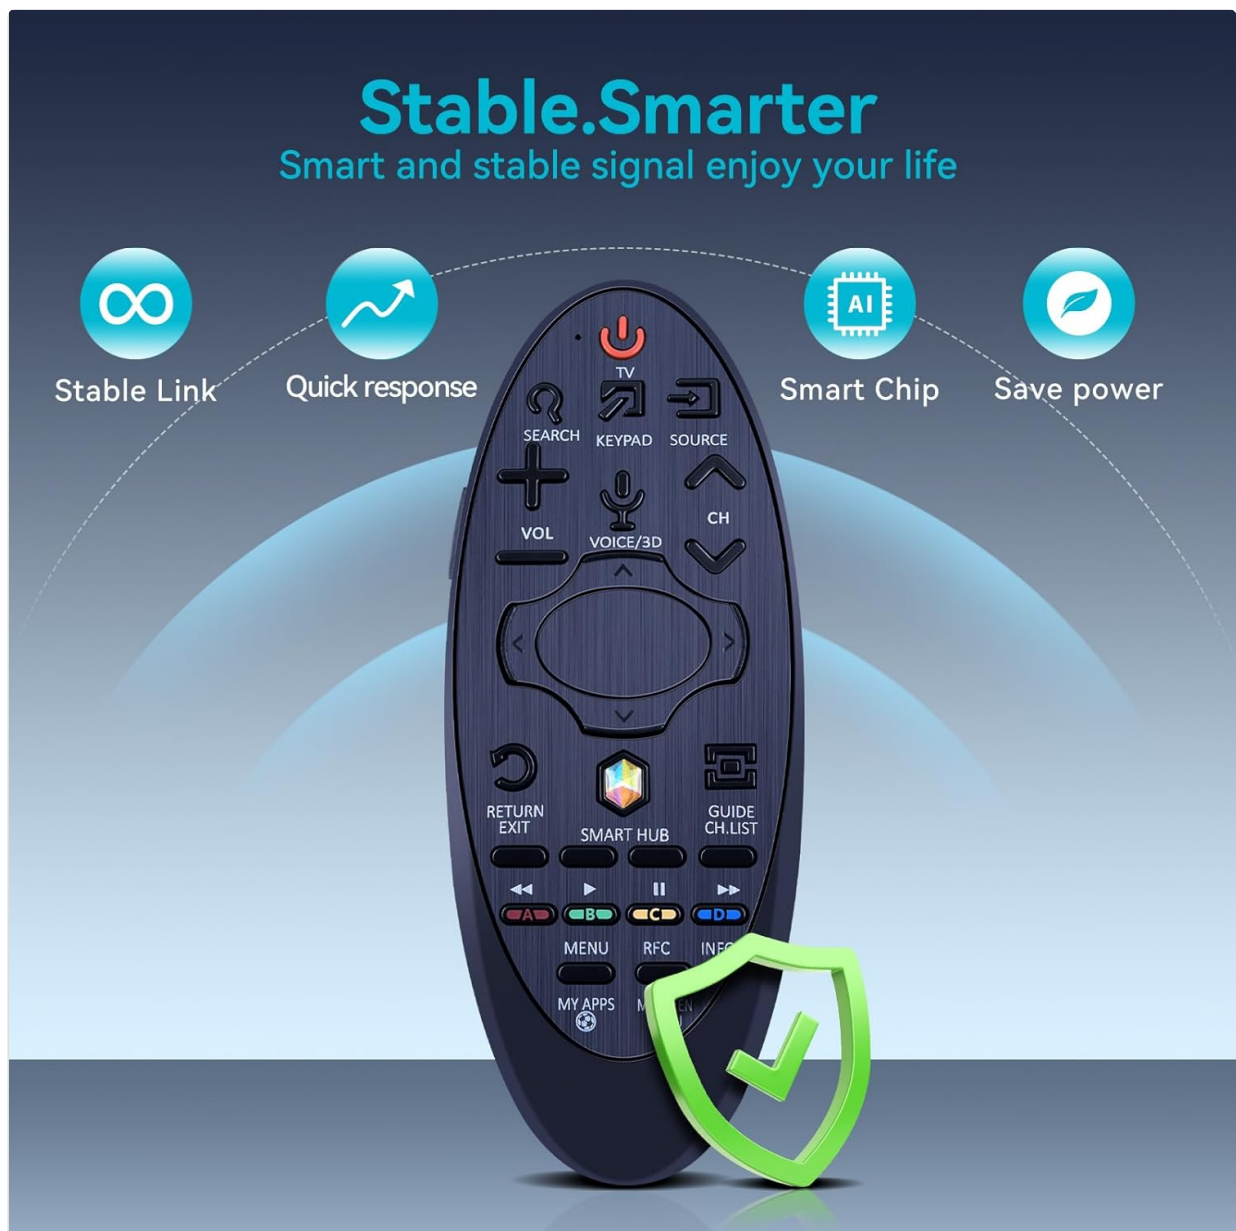


Figure 6.1: The remote features a smart chip for stable link and quick response, contributing to reliable performance.

7. Specifications

Model: BN59-01181B

Compatible TV Models: BN59-01185A, BN59-01181B, BN59-01182F, BN59-01185F, BN59-01181A, UA55H8000AW, UA65HU8500W

Power Source: 2 x AAA Batteries (not included)

Material: High-quality ABS

Color: Black

Dimensions (L x W x H): Approximately 5.51 x 1.97 x 0.91 inches (14 x 5 x 2.3 cm)

Item Weight: Approximately 1.76 ounces (50 grams)

Special Feature: No Programming Required

8. Warranty and Support

For any questions or issues regarding your ZWP Replacement Remote Control, please contact the seller or manufacturer directly. Please refer to your purchase documentation for specific warranty information.

Note: This remote control does not include voice function.

