

## Moulinex FP247827

# Moulinex EasyForce Food Processor Instruction Manual

Model: FP247827 | Brand: Moulinex

## INTRODUCTION

---

The Moulinex EasyForce Food Processor is designed to simplify your cooking experience, offering a wide range of functions to prepare various dishes with ease. This versatile appliance comes with 6 essential attachments, enabling 25 different functions, from slicing and grating to kneading and blending. Its powerful 800W motor ensures quick and efficient processing, while its compact design and dishwasher-safe parts make it convenient for everyday use and storage.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Always read all instructions before using the appliance.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands and utensils out of the container while processing food to reduce the risk of severe injury to persons or damage to the food processor.
- Blades are sharp. Handle with care.
- Ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only.

## COMPONENTS AND ACCESSORIES

---

Your Moulinex EasyForce Food Processor comes with several components and attachments to perform various tasks. Familiarize yourself with each part:



**Main Unit and Accessories:** This image displays the main food processor unit, including the motor base, processing bowl, lid, and various attachments such as the blender jug, slicing/grating discs, kneading blade, and chopping blade.

ALL-IN-ONE WITH 6 ATTACHMENTS

الكل في واحد مع 6 ملحقات



**All-in-One with 6 Attachments:** A visual representation of the food processor set, highlighting its comprehensive nature with six distinct attachments ready for various culinary tasks.



**Easy to Store Accessories:** An exploded view demonstrating how the various attachments and components of the food processor can be neatly stored within the main bowl, emphasizing its space-saving design.



## 1.8L BLENDER ATTACHMENT

## 1.8 لملحق خلاط ساعة

**1.8L Blender Attachment:** The food processor base with the large 1.8-liter blender jug attached, ready for making smoothies or other liquid preparations.

- **Motor Base:** The main unit housing the 800W motor and control dial.
- **Processing Bowl:** Large capacity bowl for chopping, slicing, grating, and kneading.
- **Lid with Feeder Tube:** Secures the bowl and allows ingredients to be added during operation.
- **Pusher:** Used to guide ingredients through the feeder tube.
- **Chopping Blade:** For mincing, chopping, and pureeing.
- **Kneading Blade:** For mixing and kneading dough.
- **Slicing Disc:** For uniform slicing of vegetables and fruits.
- **Grating Disc:** For fine or coarse grating of cheese, vegetables, etc.
- **Parmesan Grating Cartridge:** Specific attachment for grating hard cheeses.
- **Mashing Blade:** For mashing cooked vegetables.
- **1.8L Blender Jug:** For blending liquids, smoothies, and soups.

## SETUP GUIDE

---

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash all removable parts (bowl, lid, blades, discs, blender jug) in warm soapy water or in a dishwasher (refer to cleaning section). Wipe the motor base with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Assemble the Main Unit:**
  - Place the motor base on a stable, flat, and dry surface.
  - Carefully place the processing bowl onto the motor base, aligning it correctly until it locks into place with a slight turn.
  - Insert the desired attachment (e.g., chopping blade, slicing disc) onto the central shaft inside the bowl. Ensure it is securely seated.
  - Place the lid onto the processing bowl, aligning the locking tabs. Turn the lid clockwise until it clicks securely into place. The appliance will not operate unless the lid is properly locked.
4. **Blender Attachment Setup:**
  - For blending, remove the processing bowl and attach the blender jug to the motor base, twisting to lock.
  - Ensure the blender lid is securely placed on the jug.
5. **Power Connection:** Plug the power cord into a suitable electrical outlet.

## OPERATING INSTRUCTIONS

---

The Moulinex EasyForce Food Processor features two speed settings and a pulse function for precise control over your food preparation.



**Easy to Use:** A close-up of the control dial, showing a hand adjusting the speed setting, emphasizing the user-friendly interface.

- **Speed Settings:**

- **Speed 1 (Low):** Ideal for softer ingredients, mixing, and light kneading.
- **Speed 2 (High):** Suitable for harder ingredients, chopping, and faster processing.

- **Pulse Function (P):** Provides short bursts of power at maximum speed. Use for coarse chopping, quick blending, or when precise control is needed. Hold the dial in the 'P' position for as long as desired, then release.

- **General Operation:**

1. Ensure the appliance is correctly assembled and locked.
2. Add ingredients to the processing bowl or blender jug. Do not overfill.
3. Select the desired speed setting (1 or 2) or use the Pulse function.
4. For continuous operation, turn the dial to 1 or 2. For pulse, hold at 'P'.
5. Once processing is complete, turn the dial to '0' (off) and unplug the appliance.
6. Wait for blades to stop completely before opening the lid and removing ingredients.

- **Specific Attachment Usage:**

- **Chopping/Mincing:** Use the chopping blade. Add ingredients to the bowl. Use pulse for coarse results, or speed 2 for finer chopping.
- **Slicing/Grating:** Insert the appropriate disc. Place ingredients into the feeder tube and use the pusher to guide them through while the appliance is running on speed 2.
- **Kneading:** Use the kneading blade. Add flour and liquids to the bowl. Use speed 1 or 2 for kneading dough.
- **Blending:** Use the 1.8L blender jug. Add liquids and soft ingredients. Use speed 2 for smooth results or pulse for crushed ice.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will ensure the longevity and optimal performance of your food processor.



**Easy to Clean:** This image shows various detachable parts of the food processor, including blades and discs, placed in a dishwasher rack, indicating they are dishwasher safe for convenient cleaning.

- **Before Cleaning:** Always unplug the appliance from the power outlet before cleaning.

- **Motor Base:** Wipe the motor base with a soft, damp cloth. Do not immerse the motor base in water or any other liquid.
- **Removable Parts (Bowl, Lid, Blades, Discs, Blender Jug):**
  - Most removable parts are dishwasher safe (excluding the motor base). Place them on the top rack of your dishwasher.
  - Alternatively, wash by hand in warm soapy water. Rinse thoroughly and dry immediately.
  - Exercise extreme caution when handling sharp blades and discs. Use a brush for cleaning if necessary.
- **Storage:** Ensure all parts are completely dry before storing. The smart storage system allows most accessories to be stored inside the main processing bowl for compact storage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Appliance does not start.	Not properly assembled or plugged in.	Ensure the bowl and lid are correctly locked into place. Check if the power cord is securely plugged into the outlet.
Motor stops during operation.	Overload protection activated.	Unplug the appliance, remove some ingredients, and let the motor cool down for 15-20 minutes before restarting.
Ingredients not processed evenly.	Too many ingredients or incorrect speed.	Reduce the quantity of ingredients. Use the pulse function for better control or adjust the speed setting.
Loud noise or vibration.	Improper assembly or unstable surface.	Ensure all parts are correctly assembled and locked. Place the appliance on a stable, flat surface.

## SPECIFICATIONS

---

**Brand:** Moulinex

**Model Number:** FP247827

**Color:** Black

**Power/Wattage:** 800 Watts

**Material:** Plastic

**Number of Speeds:** 2 (plus Pulse function)

**Blender Jug Capacity:** 1.8 Liters

**Product Dimensions (DxWxH):** 45.6 cm x 27.3 cm x 36.6 cm

**Item Weight:** 4.63 Kilograms

**Special Features:** Dishwasher safe parts (excluding motor base)

**Included Components:** Food processor, chopping blade, kneading blade, slicing disc, grating disc, parmesan grating cartridge, mashing blade, 1.8L blender jug.

## WARRANTY AND SUPPORT

---

Moulinex is committed to providing durable and reliable products. This appliance is designed for long-term use, with low-cost spare parts available for many years.

- **Repairability:** Spare parts are available at 6200 service centers worldwide, ensuring the product can be repaired

and used for many years. This commitment is part of our effort to protect the environment and reduce waste.

- For warranty details, service requests, or technical support, please refer to the warranty card included with your purchase or visit the official Moulinex website.