

› **YLYHHFY** /

› YLYHHFY Clip On Earbuds Bluetooth 5.3 Headphones User Manual

YLYHHFY YYK-S19

YLYHHFY Clip On Earbuds Bluetooth 5.3 Headphones User Manual

Model: YYK-S19

INTRODUCTION

Thank you for choosing the YLYHHFY Clip On Earbuds. These open-ear headphones are designed for comfort and awareness, featuring Bluetooth 5.3 technology for stable connectivity, long battery life, and a lightweight, waterproof design suitable for various activities. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

- YLYHHFY Clip On Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW



Figure 1: Earbuds in Charging Case. This image shows the two earbuds resting in their open charging case, which features a digital display indicating battery levels for both the case and individual earbuds.

Bluetooth V5.3

More energy-efficient

Equipped with upgraded V5.3 chip, improving transmission efficiency while reducing loss, achieving better connection stability and audio fluency.



Figure 2: Bluetooth V5.3 Chip. An internal view of the earbud highlighting the integrated Bluetooth 5.3 chip, which ensures efficient and stable wireless connectivity.

High elasticity material adjustable stretching

Using high elasticity and skin-friendly material, adjustable and stretchable to fit all ear shapes, only about 5g for single ear, lightweight and comfortable.



Figure 3: High Elasticity Material. This image illustrates the flexible and adjustable design of the earbud, allowing it to conform comfortably to various ear shapes.

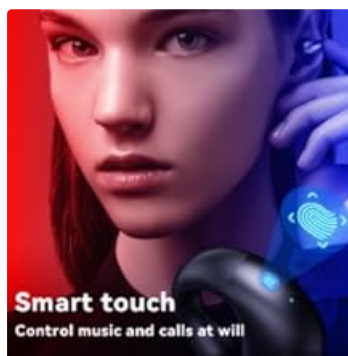


Figure 4: Smart Touch Control. A close-up view of the earbud indicating the touch-sensitive area for controlling music playback and calls.

1. Charging the Earbuds and Case

Before first use, ensure both the earbuds and the charging case are fully charged.

1. Connect the provided USB charging cable to the charging port on the case and to a USB power source (e.g., computer, wall adapter).
2. The digital display on the charging case will show the current battery level and charging status.
3. Place the earbuds into the charging case. They will begin charging automatically. The individual earbud battery indicators on the case display will show their charging status.
4. Charging time for the case is approximately 32 hours for full charge, and earbuds charge within the case.



Figure 5: Charging Case Digital Display. The charging case features a digital display that shows the remaining battery life of the case and the charging status of the earbuds.

2. Pairing with a Device

The earbuds feature effortless pairing and will automatically connect to the last-paired device.

1. Open the charging case and take out both earbuds. They will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, computer), enable Bluetooth.
3. Search for "YYK-S19" or similar in the list of available Bluetooth devices.
4. Select "YYK-S19" to connect. Once connected, you will hear a confirmation tone.
5. If pairing fails, place the earbuds back into the case, close the lid, wait a few seconds, then repeat the steps.

OPERATING INSTRUCTIONS

Wearing the Earbuds

The clip-on design ensures comfort and stability. Gently clip the earbuds onto your ears, adjusting the angle and curvature for a secure and comfortable fit. The multi-point support system distributes weight evenly.

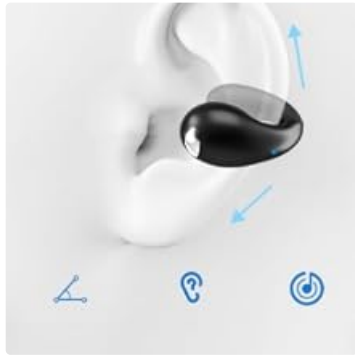


Figure 6: Earbud Placement. This diagram illustrates the correct way to clip the earbud onto the ear for optimal fit and comfort.

Touch Controls

The earbuds feature smart touch controls for easy management of music and calls.

Action	Function
Single Tap (Left/Right Earbud)	Play/Pause Music, Answer/End Call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Left/Right Earbud)	Activate Voice Assistant
Long Press (2 seconds) (Left/Right Earbud)	Reject Call
Long Press (3 seconds) (Left/Right Earbud)	Power On/Off (when not in case)

Sound Quality and Call Function

These earbuds deliver a wide sound stage with Hi-Fi Stereo Sound and powerful bass. Built-in call noise reduction helps to make calls clearer by detecting and reducing external noise.



Figure 7: Audio Driver Components. An exploded view illustrating the internal components of the earbud's audio driver, responsible for delivering high-quality sound.

MAINTENANCE AND CARE

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The earbuds have a high degree of waterproof protection (nano coating). While suitable for sweat and rain during sports, they are not designed for submersion in water. Do not swim or shower with them.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds and charging case frequently. Charge them regularly, even if not used for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing/connecting.	Low battery, out of range, pairing mode not active, previous connection issue.	Ensure earbuds and case are charged. Place earbuds back in case, close, then reopen to re-activate pairing mode. Ensure Bluetooth is enabled on your device and within 10 meters (33 feet) of the earbuds. Forget "YYK-S19" from your device's Bluetooth list and re-pair.
No sound from one or both earbuds.	Earbuds not connected, volume too low, media paused.	Check Bluetooth connection. Increase volume on both earbuds and connected device. Ensure media is playing. Try resetting the earbuds (refer to manufacturer's website if specific reset steps are not in manual).
Charging case not charging.	Faulty cable, power source issue, dirty charging port.	Try a different USB cable and power adapter. Ensure charging port is clean and free of debris.
Earbuds falling off during activity.	Improper fit.	Adjust the angle and curvature of the clip to ensure a snug fit around your ear. Ensure the multi-point support system is properly engaged.

SPECIFICATIONS

Feature	Detail
Model Name	YYK-S19
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Version	5.3

Feature	Detail
Bluetooth Range	Up to 10 meters (33 feet)
Battery Life (Earbuds)	4-5 Hours (single charge)
Total Playtime (with Charging Case)	30-32 Hours
Charging Time (Case)	Approx. 32 Hours
Item Weight (Earbuds)	Approx. 3.5 grams per earbud
Water Resistance Level	Water Resistant (Nano Coating)
Control Method	Touch
Frequency Range	20 Hz - 20,000 Hz
Product Dimensions	1.97 x 1.77 x 0.79 inches

WARRANTY AND SUPPORT

YLYHHFY products come with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your package or visit the official YLYHHFY website.

If you encounter any issues or have questions regarding your YLYHHFY Clip On Earbuds, please do not hesitate to contact our customer support team. We are committed to providing assistance and resolving any problems within 24 hours.

Contact Information: Please refer to the contact details provided on the product packaging or the official YLYHHFY website for the most up-to-date support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is one of my YLYHHFY YYK-S19 earbuds intermittently failing to produce sound even after performing all suggested reset procedures?

If one of your YLYHHFY YYK-S19 earbuds is intermittently failing after a year of use, and standard resets haven't worked, the issue may be related to hardware wear or debris. Please try the following...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0D77W61TD>

More documents and user manuals: <https://manuals.plus/>