

INFANS TP10093BE

INFANS Kids Play Tent Instruction Manual

Model: TP10093BE

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- This product is designed for children aged 36 months to 5 years.
- Ensure all components are securely assembled before allowing children to play.
- Regularly inspect the tent for any damage or loose parts. Discontinue use if any issues are found.
- Keep the tent away from open flames, heat sources, and sharp objects.
- Adult supervision is recommended at all times when children are using the tent.
- The product materials (food-grade PP) are free from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde. It has passed tests for stability, asphyxiation, load, and shear.

PACKAGE CONTENTS

Verify that all items listed below are present in the package:

- 1 x Tent Fabric
- 1 x Set of Support Poles (PVC Pipes and Connectors)
- 1 x Star Light String
- 1 x Anti-slip Mat
- 1 x Instruction Manual

SETUP INSTRUCTIONS

Follow these steps to assemble your INFANS Kids Play Tent:

1. **Unpack Components:** Carefully remove all items from the packaging and lay them out on a clean, flat surface.
2. **Assemble Frame:** Connect the PVC pipes using the provided connectors to form the tent's frame. Refer to the included diagram in the physical instruction manual for specific pole configurations. Ensure all connections are solid

and secure.

3. **Drape Tent Fabric:** Drape the tent fabric over the assembled frame, ensuring it fits snugly and aligns with all corners and openings.
4. **Secure Fabric:** Fasten the tent fabric to the frame as indicated in the physical manual, typically using ties or loops.
5. **Install Anti-slip Mat:** Place the anti-slip mat inside the tent on the floor. The mat is designed to fit the tent's base, providing a comfortable and secure play area.
6. **Add Star Lights:** Insert the star light string into the designated pockets or loops along the interior or exterior of the tent. Ensure the battery pack (if applicable) is placed in a safe, accessible location away from children.
7. **Adjust Curtains:** The tent features windows with tie-up curtains and a front door with curtains. Use the provided ropes to tie back the curtains for ventilation or leave them down for a private space.
8. **Final Placement:** Once assembled, place the tent on a stable, flat surface, either indoors or outdoors.



Image: Assembly details showing PVC pipes, connectors, and fabric attachment points for a stable structure.

The INFANS Kids Play Tent offers a versatile and safe environment for children.

- **Spacious Play Area:** The tent measures approximately 52.7"x 46.6" x 40", providing ample space for children to play, read, or nap comfortably.
- **Anti-Trip Design:** The tent features an invisible threshold at the door, with the bottom close to the ground. This design minimizes the risk of children tripping or falling when entering or exiting the tent.
- **Ventilation and Visibility:** Four windows provide good ventilation. The door and window curtains can be tied back using the attached ropes to allow airflow and visibility, or left closed for a private space.
- **Star Lights:** The included star light string adds a decorative and comforting ambiance. Ensure batteries are correctly installed if required.
- **Indoor and Outdoor Use:** This playhouse is suitable for both indoor and outdoor environments, such as playrooms, gardens, patios, or beaches. Always ensure the tent is placed on a flat, stable surface.



Image: The tent's flat threshold design prevents tripping, unlike traditional raised thresholds.

INDOOR AND OUTDOOR PLAYHOUSE

Indoor

Outdoor



Image: The play tent is suitable for both indoor and outdoor use.



KIDS INDOOR PRINCESS CASTLE PLAY TENT WITH LED STAR LIGHT

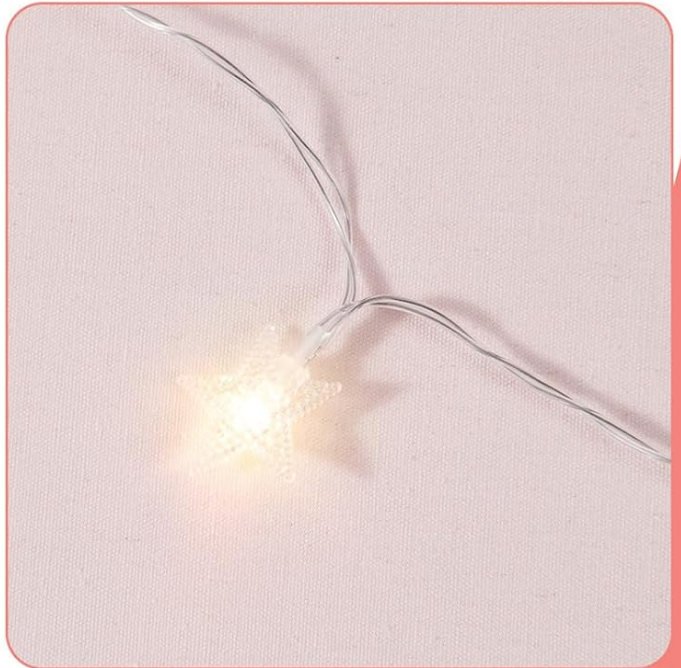


Image: Detail of the LED star lights integrated with the tent design.

MAINTENANCE

Proper care will extend the life of your play tent.

- **Cleaning the Mat:** The anti-slip mat is washable. For best results, follow the care instructions on the mat's label. Typically, machine wash on a gentle cycle with cold water and air dry.
- **Cleaning Tent Fabric:** The tent fabric can be spot cleaned with a damp cloth and mild soap. Do not machine wash the entire tent structure.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct sunlight.
- **Inspection:** Periodically check all poles, connectors, and fabric for wear and tear. Replace any damaged parts immediately.

PREMIUM MATERIAL FOR THE HIGHEST LEVEL OF COMFORT



Image: The tent includes a thick, washable anti-slip mat for comfort and easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your play tent, refer to the following common solutions:

- **Tent Not Standing Firmly:** Ensure all PVC pipes are fully inserted into their connectors. Check that the frame is assembled according to the diagram in the physical manual.
- **Star Lights Not Working:** Verify that batteries are correctly installed and are not depleted. Check for any loose connections in the light string.
- **Fabric Sagging:** Ensure the tent fabric is properly aligned and secured to the frame at all attachment points.
- **Difficulty Disassembling:** Gently twist and pull the PVC pipes from the connectors. Do not force them, as this may cause damage.

SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	52.7" x 46.6" x 40" (approx.)
Item Weight	8.8 pounds
Model Number	TP10093BE
Recommended Age	36 months - 5 years
Material	Cotton fabric, Plastic PVC pipes
Safety Certifications	US. CPSIA & ASTM Approved



Image: Product dimensions of the INFANS Kids Play Tent.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact INFANS customer service. Refer to the product packaging or the official INFANS website for contact details.

Manufacturer: INFANS

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question