
[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Drip Coffee Machine User Manual

Aigostar B0D78R99ZB

Aigostar Drip Coffee Machine User Manual

Model: B0D78R99ZB

INTRODUCTION

Thank you for choosing the Aigostar Drip Coffee Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee maker. Please read it thoroughly before first use and keep it for future reference.



Image: The Aigostar Drip Coffee Machine, a compact black and silver unit, is shown next to its matching stainless steel travel mug. Coffee is being dispensed into a white ceramic mug placed on the machine's warming plate. The machine features an LCD display showing "12:00" and control buttons for "PRO", "HOUR", "MIN", and "ON/OFF".

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or

injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The travel mug is designed for hot beverages; handle with care.

PARTS DESCRIPTION

Familiarize yourself with the components of your Aigostar Drip Coffee Machine:

- Water Reservoir (420ml capacity)
- Lid
- Reusable Filter Basket
- Coffee Outlet
- Control Panel with LCD Display
- "PRO" (Program) Button
- "HOUR" Button
- "MIN" Button
- "ON/OFF" Button
- Power Cord
- Stainless Steel Travel Mug (14 oz / 420 ml)



Water Reservoir Markings



Brews Ground Coffee & Coffee pads



Brews Coffee To 90°C



Auto Switch Off

Image: A detailed view of the Aigostar coffee machine's features. Top left shows the water reservoir with markings for 8 oz, 10 oz, 12 oz, and 14 oz. Top right displays the reusable filter basket, one filled with ground coffee and another with a coffee pad. Bottom left shows a steaming cup of coffee, indicating the machine brews coffee to 90°C. Bottom right highlights the LCD display and control buttons, indicating an auto switch-off function.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the coffee maker for any damage. Keep packaging for future storage or transport if needed.
2. **First Use Cleaning:** Before first use, clean all removable parts (filter basket, travel mug) with warm, soapy water. Wipe the exterior of the coffee maker with a damp cloth. Run one or two cycles with only water to flush the internal system.
3. **Placement:** Place the coffee maker on a stable, flat, heat-resistant surface, away from the edge of the counter and out of reach of children. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Brewing Coffee

1. **Fill Water Reservoir:** Open the lid and pour fresh, cold water into the water reservoir. Do not exceed the MAX fill line (420ml / 14oz). The reservoir has markings for 8, 10, 12, and 14 oz.
2. **Add Coffee:** Place the reusable filter basket into its designated slot. Add your desired amount of ground coffee into the filter. For best results, use medium-ground coffee. This machine is optimized for ground coffee and coffee pads, but not compatible with K-cup capsules.
3. **Place Mug:** Place the included stainless steel travel mug or your preferred coffee mug (up to 14oz capacity) under the coffee outlet. Ensure it is centered to prevent spills.
4. **Start Brewing:** Press the "ON/OFF" button to start the brewing process. The indicator light will illuminate. Brewing typically takes 3-4 minutes.
5. **Enjoy:** Once brewing is complete, the machine will automatically switch off. Carefully remove your mug and enjoy your fresh coffee.

Portable And Easy To Use



Image: A visual guide demonstrating the ease of use. Step 1 shows pouring water into the reservoir. Step 2 illustrates adding ground coffee to the filter basket. Step 3 depicts the user pressing the "ON/OFF" button on the control panel to begin brewing. The main image on the right shows the complete coffee machine with the travel mug.

Setting the 24-Hour Programmable Timer

The Aigostar Drip Coffee Machine features a 24-hour programmable timer, allowing you to wake up to freshly brewed coffee.

1. **Set Current Time:** When the machine is plugged in but not brewing, the LCD display will show the current time. Use the "HOUR" and "MIN" buttons to adjust the current time. Hold the buttons to advance quickly.
2. **Enter Program Mode:** Press the "PRO" button. The display will flash "PRO" and the time.
3. **Set Programmed Time:** Use the "HOUR" and "MIN" buttons to set the desired time for brewing to start.
4. **Confirm Program:** Press the "PRO" button again to confirm the programmed time. The "PRO" indicator light will illuminate, indicating that the timer is set.
5. **Prepare for Brewing:** Ensure the water reservoir is filled and coffee is in the filter basket, and the mug is in place before the programmed time.
6. **Automatic Brewing:** At the set time, the machine will automatically begin brewing.

24 Hours Programmable Timer

Wake up to fresh coffee with digital setting & LCD display



Image: The Aigostar coffee machine with an overlay illustrating its 24-hour programmable timer function. The LCD display shows "12:00" with "PRO", "HOUR", "ON/OFF", and "MIN" buttons. A circular arrow graphic indicates the 24-hour cycle, emphasizing the ability to set the machine to brew coffee at a specific time.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Remove the reusable filter basket and rinse it thoroughly under running water after each use. It can also be washed with warm, soapy water.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the travel mug with warm, soapy water after each use.

Removable Filter & Filter Basket

No need to buy wasteful paper filters and is easy to rinse clean



Image: A close-up view of the Aigostar coffee machine's top section, showing the removable filter and filter basket. Arrows indicate how the filter basket can be lifted out for easy rinsing and cleaning, highlighting that there is no need to buy wasteful paper filters.

Descaling (Self-Cleaning Function)

Mineral deposits from water can build up in your coffee maker over time, affecting performance. The machine has a self-cleaning function and a descaling reminder.

- The cleaning indicator light (green) will flash to remind the user to clean the device.
- To descale, pour a solution of two tablespoons of white vinegar and one cup of cold water into the water tank.
- Press and hold the "HOUR" + "MIN" buttons simultaneously for 3 seconds to activate the self-cleaning cycle.
- The machine will run a cleaning cycle. Once complete, run two full cycles with only fresh, cold water to rinse out any remaining vinegar solution.

Easy Cleanup

Descaling Reminder and Self Cleaning



The cleaning indicator light (green) flashes to remind the user to clean the device



Pour a solution of two tablespoons of white vinegar and one cup of cold water into the water tank



Press and hold the **HOUR+MIN** button for 3 seconds to clean the device



Image: A transparent diagram of the Aigostar coffee machine illustrating the easy cleanup process. It shows the water flow during cleaning and provides three steps: 1) The cleaning indicator light (green) flashes to remind the user to clean the device. 2) Pour a solution of two tablespoons of white vinegar and one cup of cold water into the water tank. 3) Press and hold the "HOUR" + "MIN" button for 3 seconds to clean the device. A cup of coffee is shown in the foreground.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Coffee is not brewing.	No water in reservoir; filter basket not properly seated; machine is programmed for a later time.	Fill the water reservoir. Ensure the filter basket is correctly in place. Check the LCD display for programmed time.

Problem	Possible Cause	Solution
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; coffee grind too coarse/fine.	Adjust the amount of ground coffee. Use medium-ground coffee for optimal results.
Water leaks from the machine.	Water reservoir overfilled; lid not closed properly; mineral buildup.	Do not exceed the MAX fill line. Ensure the lid is securely closed. Perform a descaling cycle.
Coffee grounds in the mug.	Filter basket not seated correctly; coffee grind too fine.	Ensure the reusable filter basket is properly inserted. Use a slightly coarser grind.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- Brand:** Aigostar
- Model:** B0D78R99ZB
- Type:** Drip Coffee Machine
- Power:** 700W
- Water Reservoir Capacity:** 420 ml (14 oz)
- Filter Type:** Reusable
- Included Components:** Stainless Steel Travel Mug (14 oz)
- Operating Mode:** Manual with 24H Programmable Timer
- Product Dimensions:** Approximately 32.2 x 21.5 x 15.5 cm (Package dimensions, actual product dimensions might be slightly smaller)
- Item Weight:** 960 g

Stainless Steel Coffee Maker

Practical, stylish design for everyday use



Image: The Aigostar coffee machine displayed on a kitchen counter with its key dimensions labeled: 31.6cm height, 21.5cm width, and 15.5cm depth. The image also highlights its 420ml capacity and 2KG weight (note: product weight is 960g, 2KG might be shipping weight or a general graphic error, I will use 960g from specifications).

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Aigostar customer service directly. Contact details can typically be found on the manufacturer's website or on the product packaging.

Please have your product model number (B0D78R99ZB) and purchase date ready when contacting support.