



Manuals.plus /

› Wellshave /

› Wellshave Advance 3-in-1 Nose, Ear, and Eyebrow Trimmer User Manual

Wellshave HY-6005

Wellshave Advance 3-in-1 Nose, Ear, and Eyebrow Trimmer User Manual

Model: HY-6005 | Brand: Wellshave

1. INTRODUCTION

Thank you for choosing the Wellshave Advance 3-in-1 Nose, Ear, and Eyebrow Trimmer. This device is designed for precise and comfortable grooming of unwanted hair. Please read this manual thoroughly before first use to ensure safe and optimal performance.



Image: The Wellshave Advance 3-in-1 Nose, Ear, and Eyebrow Trimmer with its packaging.

2. SAFETY INFORMATION

- Keep the trimmer clean and dry.
- Avoid use on infants.
- Do not immerse the device in water.
- Exercise caution when using near the eyes.
- This device is intended for personal grooming only.
- Keep out of reach of children.

3. PACKAGE CONTENTS

The complete Wellshave Advance 3-in-1 Trimmer set includes:

- Main Trimmer Unit
- Nose Trimmer Attachment
- Detail Trimmer Attachment (for eyebrows and difficult areas)
- Shaver Head Attachment
- USB Charging Cable
- User Manual



Image: All components included in the Wellshave Advance 3-in-1 Trimmer package.

4. PRODUCT FEATURES

- **SkinGuard™ Technology:** Designed for safe and painless shaving, preventing nicks and irritation.
- **Powerful Motor:** Ensures efficient hair removal without pulling. Features a 7,000 RPM motor for excellent trimming performance.
- **Razor-Sharp Blades:** Provides a perfect, clean shave.
- **Long Battery Life:** Up to 150 minutes of use on a single charge. Equipped with a 600mAh Li-ion battery.
- **360-Degree Spinning Blades:** For comprehensive and effective trimming.

- **USB-C Charging:** Easy and convenient charging. A full charge takes approximately 3 hours and provides 1 hour of continuous use.
- **3 Multifunctional Attachments:** Includes a nose trimmer, detail trimmer, and shaver head for versatile grooming.
- **Battery Indicator:** A red light indicates a low battery.
- **Easy to Use:** Attachments can be changed with a simple twist.
- **Light & Compact Design:** Ideal for easy storage and travel. Dimensions: 14.5 cm length, 2.7 cm width.
- **Ergonomic Design:** Comfortable and easy to hold, even when wet.
- **IPX5 Waterproof:** Allows for easy rinsing and cleaning under running water.

The Nose Sculptor

3-in-1 nostrimmer set



- 
SkinGuard™ Technology
Safe and painless shaving
- 
Does not pull hair
Thanks to the powerful motor
- 
Razorsharp blades
For a perfect shave
- 
Long battery life
Up to 150 mins of use
- 
Spinning blades
360 degrees

Image: Overview of the Wellshave Advance 3-in-1 Trimmer's key features, including SkinGuard Technology and long battery life.



Image: Demonstrates the light and compact design of the Wellshave Advance 3-in-1 Trimmer, highlighting its dimensions.

Product Feature Video

Your browser does not support the video tag.

Video: This video showcases the key features of the Wellshave Advance 3-in-1 Trimmer, including its powerful motor, rechargeable battery, and waterproof design.

5. SETUP

5.1 Charging the Device

1. Ensure the trimmer is turned off.
2. Connect the provided USB-C charging cable to the charging port at the bottom of the trimmer.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).
4. The battery indicator light will illuminate during charging. It typically takes 3 hours for a full charge.
5. A full charge provides approximately 60 minutes of continuous use.

USB-C Charging

Easy to charge



Li-ion Battery



-  3 hours charging
-  1 hour of use

Image: The trimmer connected to a USB-C charging cable, illustrating the charging process.

Battery Indicator

Shows a red light when empty



Easy to use

Change attachments in one spin

Image: Shows the battery indicator light and how to easily change attachments on the trimmer.

5.2 Attaching/Changing Heads

1. Ensure the trimmer is turned off.
2. To remove an attachment, gently twist it counter-clockwise and pull it upwards.
3. To attach a new head, align the desired attachment with the main unit and twist clockwise until it clicks securely into place.

3 Attachments

Multifunctional usage



Image: The three interchangeable attachments: nose trimmer, detail trimmer, and shaver head.

6. OPERATION

6.1 Using the Nose Trimmer Attachment

1. Attach the nose trimmer head to the main unit.
2. Turn on the trimmer by pressing the power button.
3. Gently insert the trimmer tip into your nostril or ear canal. Do not insert too deeply.
4. Move the trimmer in a circular motion to trim unwanted hair.
5. After use, turn off the device and clean the attachment.

6.2 Using the Detail Trimmer Attachment

1. Attach the detail trimmer head.
2. Turn on the trimmer.
3. Use the precision blade to shape eyebrows or trim hair in other difficult-to-reach areas.
4. Move the trimmer gently against the direction of hair growth for best results.
5. After use, turn off the device and clean the attachment.

6.3 Using the Shaver Head Attachment

1. Attach the shaver head.
2. Turn on the trimmer.
3. Gently press the shaver against your skin and move it in short, circular motions to achieve a smooth finish.
4. This attachment is suitable for facial hair or other small areas requiring a close shave.
5. After use, turn off the device and clean the attachment.

Product Operation Video

Your browser does not support the video tag.

Video: This video demonstrates the various attachments of the Wellshave Advance 3-in-1 Trimmer, including the detail trimmer, shaver head, and body groomer, showcasing their ease of use and cordless convenience.

7. MAINTENANCE

7.1 Cleaning

1. Ensure the trimmer is turned off and disconnected from the charging cable before cleaning.
2. Remove the attachment head.
3. Rinse the attachment head under running water. The device is IPX5 waterproof, allowing for easy cleaning.
4. Use the small cleaning brush (if included) to remove any stubborn hair from the blades.
5. Wipe the main unit with a dry cloth. Do not immerse the main unit in water.
6. Allow all parts to air dry completely before reassembling or storing.

7.2 Storage

Store the trimmer and its attachments in a cool, dry place, away from direct sunlight and extreme temperatures. Keep the protective cap on the attachment when not in use to protect the blades.

8. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the device is fully charged. Check if the power button is pressed correctly.
- **Poor trimming performance:** The battery might be low; recharge the device. The blades might be clogged with hair; clean the attachment thoroughly.
- **Device feels hot:** This is normal during extended use. Allow the device to cool down before continuing. If it becomes excessively hot, discontinue use and contact support.
- **Hair pulling:** Ensure the blades are clean and free of debris. The battery might be low, affecting motor speed.

9. SPECIFICATIONS

Feature	Specification
Model Number	HY-6005
Brand	Wellshave
Manufacturer	Gibson Supplies
Power Source	Battery-Powered
Battery Type	1 Lithium Ion battery (600mAh)
Charging Time	Approx. 3 hours
Operating Time	Approx. 60 minutes (up to 150 minutes total use)
Motor Speed	7,000 RPM
Blade Material	Plastic (with metal cutting elements)
Color	Black
Waterproof Rating	IPX5
Package Dimensions	16.6 x 9 x 2.9 cm
Weight	150 g

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Wellshave website. Keep your proof of purchase for any warranty claims.