

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOOLOO](#) /

› [GOOLOO GT4000S Jump Starter and GT150 Tire Inflator Instruction Manual](#)

## GOOLOO GT4000S, GT150

# GOOLOO GT4000S Jump Starter & GT150 Tire Inflator Instruction Manual

Model: GT4000S, GT150

## 1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your GOOLOO GT4000S Jump Starter and GOOLOO GT150 Tire Inflator. Please read this manual thoroughly before use and retain it for future reference.



Image: The GOOLOO GT4000S Jump Starter (yellow and black unit with clamps) and the GOOLOO GT150 Tire Inflator (black rectangular unit with digital display).

## 2. IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the device and vehicle:

- Read all instructions before use.
- Do not operate the jump starter if the cables or clamps are damaged.
- Ensure correct polarity connection (red to positive, black to negative) to avoid sparks or damage.
- Do not jump start vehicles with battery voltage other than 12V.
- Keep out of reach of children.
- Do not expose to rain or extreme temperatures.
- Do not use the tire inflator for purposes other than inflating tires or compatible items.
- Avoid over-inflating tires; always check recommended PSI.

### 3. PRODUCT OVERVIEW

---

#### 3.1 GOOLOO GT4000S Jump Starter

- **Peak Current:** 4000A
- **Engine Compatibility:** Up to 12.0L Gasoline, 10.0L Diesel
- **Charging:** 100W Fast-Charging (1.2 hours for full charge, 5 minutes for a single jumpstart). Type-C port for charging.
- **Output:** Up to 100W for charging MacBooks and other laptops (Type-C port only).
- **Battery Life:** Up to 60 jumpstarts on a single full charge.
- **Compatibility:** Suitable for RVs, pickup trucks, motorcycles, SUVs, tractors, boats, and other 12V vehicles.

# JUMP START DEAD VEHICLES

12 VOLT | 10.0L DIESEL | 12.0L GAS | 60 STARTS | LED LIGHT



Image: The GOOLOO GT4000S Jump Starter connected to a car battery in an engine bay, illustrating its primary function.

## 3.2 GOOLOO GT150 Tire Inflator

- **Max Pressure:** 150 PSI
- **Inflation Speed:** Inflates a completely flat 205/55 R16 car tire (0-36PSI) in approximately 7 minutes.
- **Features:** Auto-shutoff, cordless design, portable size, ultra-bright LED screen for clear display.
- **Compatibility:** Suitable for car tires, SUV tires, motorcycle tires, bicycle tires, balls, kayaks, and swim rings.

# CORDLESS SUPER FAST INFLATION



  **≤1 Min**  
29-36 PSI

**Inflate 205/55 R16 Tire**

Image: The GOOLOO GT150 Tire Inflator connected to a car tire, demonstrating its inflation capability.

## 4. SETUP AND CHARGING

### 4.1 Charging the GT4000S Jump Starter

1. Connect the provided USB-C cable to the jump starter's Type-C input port.
2. Connect the other end of the USB-C cable to a 100W fast-charging wall adapter (not included, unless specified in package contents) or a compatible car charger.
3. The display will show the charging wattage and battery percentage. A full charge from 0% to 100%

typically takes 1.2 hours with a 100W charger.



Image: The GOOLOO GT4000S Jump Starter being charged via its USB-C port inside a vehicle, highlighting its fast-charging capability.

#### 4.2 Charging the GT150 Tire Inflator

The GT150 Tire Inflator is charged via its USB-C port. Connect it to a compatible USB-C charger. The LED screen will indicate the charging status.

# FUNCTION AS POWER BANK

Provide power supply in emergencies for electronics



Image: The GOOLOO GT150 Tire Inflator connected to a smartphone via a USB cable, demonstrating its power bank functionality.

## 5. OPERATING INSTRUCTIONS

### 5.1 Using the GT4000S Jump Starter

1. Ensure the jump starter is sufficiently charged (above 20%).
2. Connect the jumper cable clamps to the jump starter unit.
3. Attach the red clamp to the positive (+) terminal of the vehicle battery and the black clamp to the

negative (-) terminal.

4. Turn on the jump starter. The screen should display "READY" if the connection is correct and the battery is detectable.
5. If the battery is completely dead or too low to detect, press the "BOOST" button for 1-2 seconds until "READY" is displayed. This forces the jump starter to provide maximum output.
6. Start your vehicle's engine within 30 seconds.
7. Once the vehicle starts, immediately remove the clamps from the car battery, then disconnect them from the jump starter.

Your browser does not support the video tag.

Video: Official GOOLOO demonstration on how to jump start a car using a GOOLOO jump starter. This video illustrates the connection process and starting the vehicle.

## 5.2 Using the GT150 Tire Inflator

1. Connect the air hose to the GT150 inflator and then securely attach it to the tire valve stem.
2. Turn on the GT150. The LED screen will display the current tire pressure.
3. Use the '+' and '-' buttons to set the desired target pressure.
4. Press the power button to start inflation. The inflator will automatically stop once the target pressure is reached.
5. Disconnect the air hose and store the unit.

# PRESET PRESSURE DETECT AUTO SHUT-OFF



Image: The GOOLOO GT150 Tire Inflator's LED screen showing both the real-time and preset tire pressure values, indicating its auto-shutoff feature.

## 6. MAINTENANCE AND STORAGE

- Store the units in a cool, dry place away from direct sunlight and moisture.
- Recharge the jump starter every 3-6 months to maintain battery health, even if not used.
- Clean the units with a dry, soft cloth. Do not use harsh chemicals.

## 7. TROUBLESHOOTING

### Common Issues and Solutions

Problem	Possible Cause	Solution
Jump Starter not turning on	Low battery or faulty unit	Charge the unit fully. If issue persists, contact support.
"READY" not displayed (GT4000S)	Incorrect connection or battery too low	Check clamp connections. Use "BOOST" function for completely dead batteries.
Tire Inflator not working (GT150)	Low battery, hose not connected properly	Charge the unit. Ensure hose is securely attached to tire valve.

## 8. SPECIFICATIONS

### GOOLOO GT4000S Jump Starter

- Peak Amperage:** 4000A
- Voltage:** 12V
- Battery Type:** Lithium-ion
- Charging Input:** USB-C (100W Max)
- USB Output:** USB-C (100W Max), USB-A (various outputs)

### GOOLOO GT150 Tire Inflator

- Max Pressure:** 150 PSI
- Power Source:** Cordless (Internal Battery)
- Display:** Ultra Bright LED Screen

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official GOOLOO website. Please have your model numbers (GT4000S, GT150) ready when contacting support.