

[Manuals.plus](#) /

> [Hyper Tough](#) /

> Hyper Tough Electric Pressure Washer User Manual

Hyper Tough ABW-VCL-1600A

Hyper Tough Electric Pressure Washer User Manual

Model: ABW-VCL-1600A

INTRODUCTION

The Hyper Tough Electric Pressure Washer is designed for convenience and efficiency, making it ideal for cleaning decks, cars, patio furniture, and more. Its compact design allows for vertical storage, and it's lightweight for easy transport. The on-board accessory storage keeps everything organized and within reach. Equipped with an auto start and stop function to extend pump life, this pressure washer includes a 13Amp electric motor with an aluminum axial pump that provides a rated flow rate of 1.2GPM.

It comes with an ergonomically designed spray gun with a quick-connect system wand, two 1/4" spray nozzles (15 Degree & 25 Degree), a non-marring and non-kinking high-pressure hose with M22 fitting, and an attachable foam bottle. Perfect for light and medium-duty, frequent jobs around residential areas, use it for car washing, shutter cleaning, spot cleaning, grills, lawn furniture, and light mildew/mold removal.

SAFETY INFORMATION

It is crucial to read and understand all safety warnings and instructions before operating this pressure washer. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Use only as directed.
- Keep out of reach of children.
- Always wear appropriate protective gear during operation, including eye protection and sturdy footwear.
- Do not use in wet conditions or expose to rain.
- Ensure the unit is properly connected to a grounded outlet.
- Never point the spray gun at people, pets, or electrical devices.
- Do not operate the pressure washer if the power cord or high-pressure hose is damaged.
- Always disconnect the power supply before performing any maintenance or cleaning.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Hyper Tough Electric Pressure Washer:



Figure 1: Main unit with spray gun, hose, and nozzles attached.



Figure 2: Pressure washer showing the attachable foam bottle.



Figure 3: Rear view of the pressure washer, highlighting the compact design.

Key Features:

- **Compact Design:** Easy vertical storage and lightweight for effortless transport.
- **On-Board Accessory Storage:** Keeps all accessories organized and within reach.
- **Auto Start & Stop Function:** Extends pump life by automatically starting and stopping the motor as needed.
- **Powerful Performance:** Equipped with a 13Amp electric motor and aluminum axial pump, delivering a rated flow rate of 1.2GPM.
- **Complete Kit:** Includes spray gun, quick connect wand, two spray nozzles (15° & 25°), high-pressure hose, and attachable foam bottle.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts listed in the "Product Overview" section are present.
2. **Connect Water Supply:** Attach a standard garden hose (not included) to the water inlet connection on the pressure washer. Ensure the connection is tight to prevent leaks.
3. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the high-pressure outlet on the unit and the other end to the spray gun. Tighten securely.
4. **Attach Spray Wand/Nozzle:** Insert the desired spray nozzle (15° or 25°) into the quick-connect fitting on the spray wand until it clicks into place.
5. **Connect Power:** Plug the pressure washer's power cord into a grounded 120V AC electrical outlet. Ensure the outlet is suitable for outdoor use and has a Ground Fault Circuit Interrupter (GFCI).

6. **Turn on Water:** Fully open the water supply to the garden hose. Allow water to flow through the pressure washer and out of the spray gun for about 30 seconds to purge any air from the system.

OPERATING INSTRUCTIONS

1. **Start the Unit:** Turn the ON/OFF switch on the pressure washer to the "ON" position. The motor will start briefly and then stop due to the auto start/stop function.
2. **Begin Cleaning:** Squeeze the trigger on the spray gun to start the water flow and activate the motor. Release the trigger to stop the water flow and the motor.
3. **Adjust Spray Pattern:** Change nozzles as needed for different cleaning tasks. The 15° nozzle provides a concentrated spray for tough dirt, while the 25° nozzle offers a wider spray for general cleaning.
4. **Using the Foam Bottle:**
 - Fill the attachable foam bottle with appropriate pressure washer detergent.
 - Attach the foam bottle to the spray gun.
 - Squeeze the trigger to apply detergent.
 - After applying detergent, remove the foam bottle and reattach a spray nozzle to rinse the surface.
5. **Optimal Cleaning Distance:** Hold the spray wand at an appropriate distance from the surface to be cleaned. Start further away and move closer if more pressure is needed, being careful not to damage the surface.
6. **Shutting Down:**
 - Turn the ON/OFF switch to the "OFF" position.
 - Turn off the water supply.
 - Squeeze the spray gun trigger to release any remaining pressure in the system.
 - Disconnect the power cord from the outlet.
 - Disconnect the garden hose and high-pressure hose.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Clean Nozzles:** Periodically clean the spray nozzles to prevent clogging. Use the included nozzle cleaning tool if necessary.
- **Inspect Hoses and Connections:** Before each use, check the high-pressure hose and all connections for any signs of wear, damage, or leaks. Replace damaged parts immediately.
- **Water Inlet Filter:** Inspect and clean the water inlet filter regularly to prevent debris from entering the pump.
- **Storage:** Store the pressure washer in a dry, frost-free area. Drain all water from the pump and hoses before storing to prevent freezing damage. Utilize the on-board accessory storage for neat organization.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------|---|--|
| Unit does not start | Power cord not plugged in; GFCI tripped; ON/OFF switch in "OFF" position. | Ensure power cord is securely plugged in; Reset GFCI; Turn switch to "ON". |

| Problem | Possible Cause | Solution |
|------------------------|--|---|
| Low pressure | Insufficient water supply; Clogged nozzle; Air in pump. | Ensure water supply is fully open; Clean nozzle; Purge air from system by running water through the gun without power for 30 seconds. |
| Water leaks | Loose connections; Damaged O-rings. | Tighten all connections; Inspect and replace O-rings if damaged. |
| Motor stops frequently | Auto start/stop function working as intended; Overheating. | This is normal operation; Allow unit to cool down if continuously stopping due to prolonged use. |

SPECIFICATIONS

- **Brand:** Generic (Marketed as Hyper Tough)
- **Model Number:** ABW-VCL-1600A
- **Power Source:** Corded Electric
- **Color:** Black
- **Maximum Pressure:** 1600 PSI
- **Maximum Flow Rate:** 1.2 GPM
- **Item Weight:** 16.7 Pounds
- **Product Dimensions:** 13.7"L x 10.43"W x 18.3"H
- **Manufacturer:** Hyper Tough
- **Country of Origin:** China

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your product at the time of purchase or contact the manufacturer directly. Protection plans may also be available for extended coverage.