

[Manuals.plus](#) /

› [Hyper Tough](#) /

› Hyper Tough 20V Cordless 130MPH Sweeper Instruction Manual

Hyper Tough HT21-401-003-05

Hyper Tough 20V Cordless 130MPH Sweeper

MODEL: HT21-401-003-05

Introduction

Thank you for choosing the Hyper Tough 20V Cordless 130MPH Sweeper. This lightweight and powerful tool is designed for efficient clearing of light grass clippings and leaves from small sidewalks, driveways, and hard surfaces. Its cordless design offers freedom of movement without the need for gas, outlets, or extension cords. The ergonomic handle ensures comfort and grip during extended use.

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new sweeper. Please read it thoroughly before first use and keep it for future reference.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the sweeper.
- **Wear Eye Protection:** Always wear safety glasses or goggles when operating the sweeper.
- **Keep Area Clear:** Ensure the work area is free of people, pets, and loose objects that could become projectiles.
- **Secure Grip:** Maintain a firm grip on the ergonomic handle during operation.
- **Battery Safety:** Use only the specified battery and charger. Do not expose the battery to water or extreme temperatures.
- **Proper Storage:** Store the sweeper and battery in a dry, secure location away from children.

Package Contents

Your Hyper Tough 20V Cordless 130MPH Sweeper package includes the following items:

- 1 x 20V Max 100 CFM Sweeper

- 1 x 20V Max 2.0 Ah Lithium-Ion Battery
- 1 x 20V Max Battery Charger

**HYPER
TOUGH™**



WHAT'S INCLUDED:

- ***1 – 20V Max 130 MPH Sweeper/Blower***
- ***1 – 20V Max 2.0Ah Lithium-Ion Battery***
- ***1 – 20V Max Battery Charger***

Image: All components included in the Hyper Tough 20V Cordless Sweeper package.

Setup

Follow these steps to prepare your sweeper for use:

1. **Attach the Tube:** Push the sweeper tube onto the main housing until it clicks securely into place.
2. **Charge the Battery:** Connect the 20V Max 2.0 Ah lithium-ion battery to the 20V Max battery charger. Ensure the battery is fully charged before first use.
3. **Insert Battery:** Align the ribs of the charged battery with the battery port on the sweeper and slide it in until it locks.

**HYPER
TOUGH™**

QUICK START GUIDE



Push the tube onto the sweeper housing until the latch snap into place.



Align the ribs of the charged battery and insert it into the battery port.



To switch the sweeper on, slide the on/off switch forward to "I".
To switch the sweeper off, slide the on/off switch back to "O".

Image: Visual guide for attaching the tube and inserting the battery.

Operating Instructions

Your Hyper Tough sweeper is designed for ease of use and effective debris clearing.

- **Starting the Sweeper:** To turn the sweeper ON, slide the on/off switch forward to the "I" position.
- **Stopping the Sweeper:** To turn the sweeper OFF, slide the on/off switch back to the "O" position.
- **Clearing Debris:** Direct the nozzle towards the debris you wish to clear. The powerful 130MPH airspeed effectively moves light grass clippings and leaves.
- **Ergonomic Design:** The lightweight design (3.6 lbs) and ergonomic handle allow for comfortable one-handed operation, reducing fatigue during use.

**HYPER
TOUGH™**

**130
MPH**

Image: The sweeper demonstrating its powerful 130 MPH air speed.

**HYPER
TOUGH™**

EASY *CLEAN UP*

Image: The sweeper making quick and easy work of cleaning up leaves.

**HYPER
TOUGH™**

LIGHTWEIGHT AND PORTABLE

Image: Highlighting the lightweight and portable nature of the sweeper.

HYPER TOUGH™



100 CFM **CORDLESS SWEEPER/BLOWER**

Image: Key features including the soft-grip handle and removable tube for easy storage.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your sweeper.

- **Cleaning:** After each use, wipe down the exterior of the sweeper with a damp cloth. Ensure the air intake and exhaust vents are free of debris.
- **Battery Care:** Store the battery in a cool, dry place. For long-term storage, ensure the battery is partially charged (around 50%).
- **Storage:** The removable tube allows for easy storage. Store the sweeper in a dry, protected area.

Troubleshooting

If you encounter issues with your sweeper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Sweeper does not start	Battery not inserted correctly; Battery is discharged; On/Off switch not in 'ON' position.	Ensure battery is fully seated; Charge the battery; Slide switch to 'I' position.
Low air output	Battery is low; Air intake/exhaust blocked; Tube not securely attached.	Recharge battery; Clear any obstructions; Re-attach tube until it clicks.
Short battery life	Battery not fully charged; Battery is old/worn.	Ensure full charge; Consider replacing battery if performance degrades significantly.

Specifications

Feature	Detail
Model Name	Hyper Tough
Model Number	HT21-401-003-05
Power Source	Battery Powered
Voltage	20 Volts
Item Weight	3.6 Pounds
Product Dimensions	7.28"L x 6.3"W x 18.9"H
Maximum Speed	12500 RPM
Air Speed	130 Miles per Hour
Material	Plastic
Color	Black

Warranty and Support

Your Hyper Tough 20V Cordless 130MPH Sweeper comes with **a2-Year Limited Warranty**. This warranty covers defects in material and workmanship under normal use. Please retain your proof of purchase for warranty claims.



Image: Highlighting the 2-Year Limited Warranty.

For technical support, warranty service, or to purchase replacement parts, please visit the official Hyper Tough website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

© 2024 Hyper Tough. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D79Q1F2Z>

More documents and user manuals: <https://manuals.plus/>