

[Manuals.plus](#) /

› [TECKNET](#) /

› TECKNET Wireless Keyboard and Mouse Combo User Manual

TECKNET TK-KM006

TECKNET Wireless Keyboard and Mouse Combo User Manual

Model: TK-KM006

Brand: TECKNET

INTRODUCTION

This user manual provides detailed instructions for the TECKNET Wireless Keyboard and Mouse Combo (Model: TK-KM006). This compact and efficient combo offers a stable 2.4GHz wireless connection, quiet operation, and a portable design, making it ideal for various computing environments.



Figure 1: TECKNET Wireless Keyboard and Mouse Combo (Black Gray)

PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1 x TECKNET Wireless Keyboard
- 1 x TECKNET Wireless Mouse
- 1 x Nano USB Receiver (stored inside the mouse battery compartment)
- 1 x User Manual



Figure 2: The Nano USB receiver is conveniently stored within the mouse.

SETUP GUIDE

Follow these steps to set up your TECKNET Wireless Keyboard and Mouse Combo:

1. Install Batteries:

- For the keyboard: Open the battery compartment on the back and insert 2 AAA batteries (not included). Ensure correct polarity.
- For the mouse: Open the battery compartment on the bottom. Insert 2 AAA batteries (not included). The Nano USB receiver is stored here; remove it before inserting batteries.

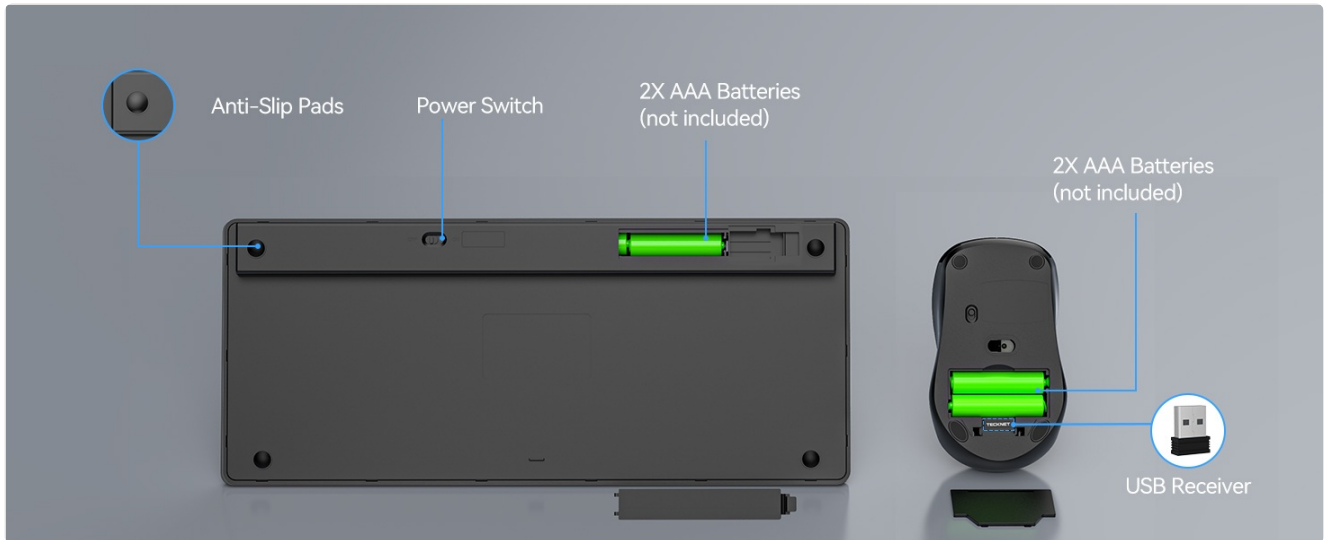


Figure 3: Battery compartments for the keyboard and mouse, showing the USB receiver storage.

2. Connect the USB Receiver:

- Plug the Nano USB receiver into an available USB port on your computer, laptop, or smart TV.

3. Power On Devices:

- Turn on the keyboard using the ON/OFF switch located on its back.
- Turn on the mouse using the ON/OFF switch located on its bottom.

4. Automatic Connection:

The keyboard and mouse should automatically connect to your device. No additional drivers are typically required for most operating systems (Windows, Mac, Chrome OS, Android, Linux).

Setup Demonstration Video

Your browser does not support the video tag.

Video 1: This video demonstrates the simple plug-and-play setup process for the TECKNET Wireless Keyboard and Mouse Combo.

OPERATING INSTRUCTIONS

Keyboard Functions

The keyboard features a comfortable scissor-key design for quiet typing and includes 12 multimedia hotkeys for enhanced efficiency.

- **FN + F1:** Play/Pause
- **FN + F2:** Previous Track
- **FN + F3:** Next Track

- **FN + F4:** Volume Up
- **FN + F5:** Volume Down
- **FN + F6:** Mute/Unmute
- **FN + F7:** Homepage
- **FN + F8:** Search
- **FN + F9:** Browser Favorites
- **FN + F10:** Hibernate
- **FN + F11:** Insert
- **FN + F12:** Print Screen



Figure 4: Overview of the keyboard's 12 multimedia function keys.

Mouse Functions

The mouse is designed for ultra-quiet clicking and offers adjustable DPI settings for sensitivity control.

- **Quiet Click:** Right and left clicks are engineered to be silent, minimizing disturbance.
- **DPI Adjustment:** Press the DPI button on top of the mouse to cycle through 3 sensitivity levels: 800, 1200, and 1600 DPI.

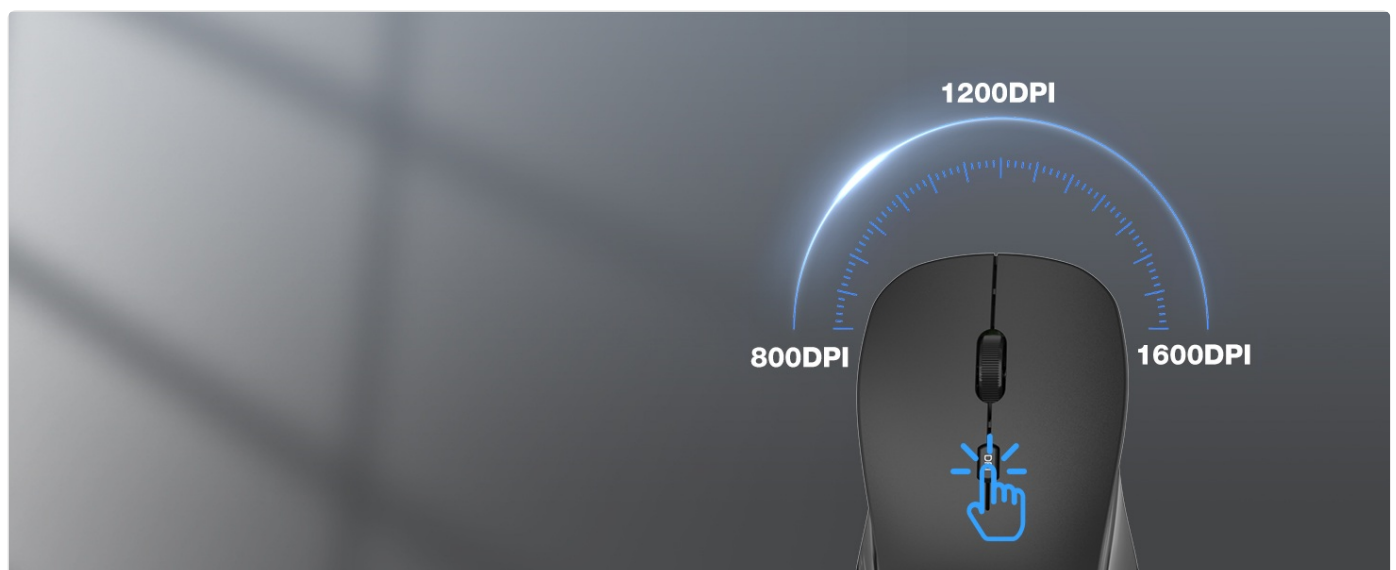


Figure 5: Adjusting the mouse's DPI sensitivity for precise control.

To ensure the longevity and optimal performance of your keyboard and mouse combo:

- Keep the devices clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Avoid exposing the devices to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble or attempt to repair the devices yourself. This may void the warranty.
- When not in use, the devices enter an energy-saving mode. Press any key to wake them up.
- Turn off the power switches on both the keyboard and mouse when storing for extended periods to conserve battery life.

LONG BATTERY LIFE

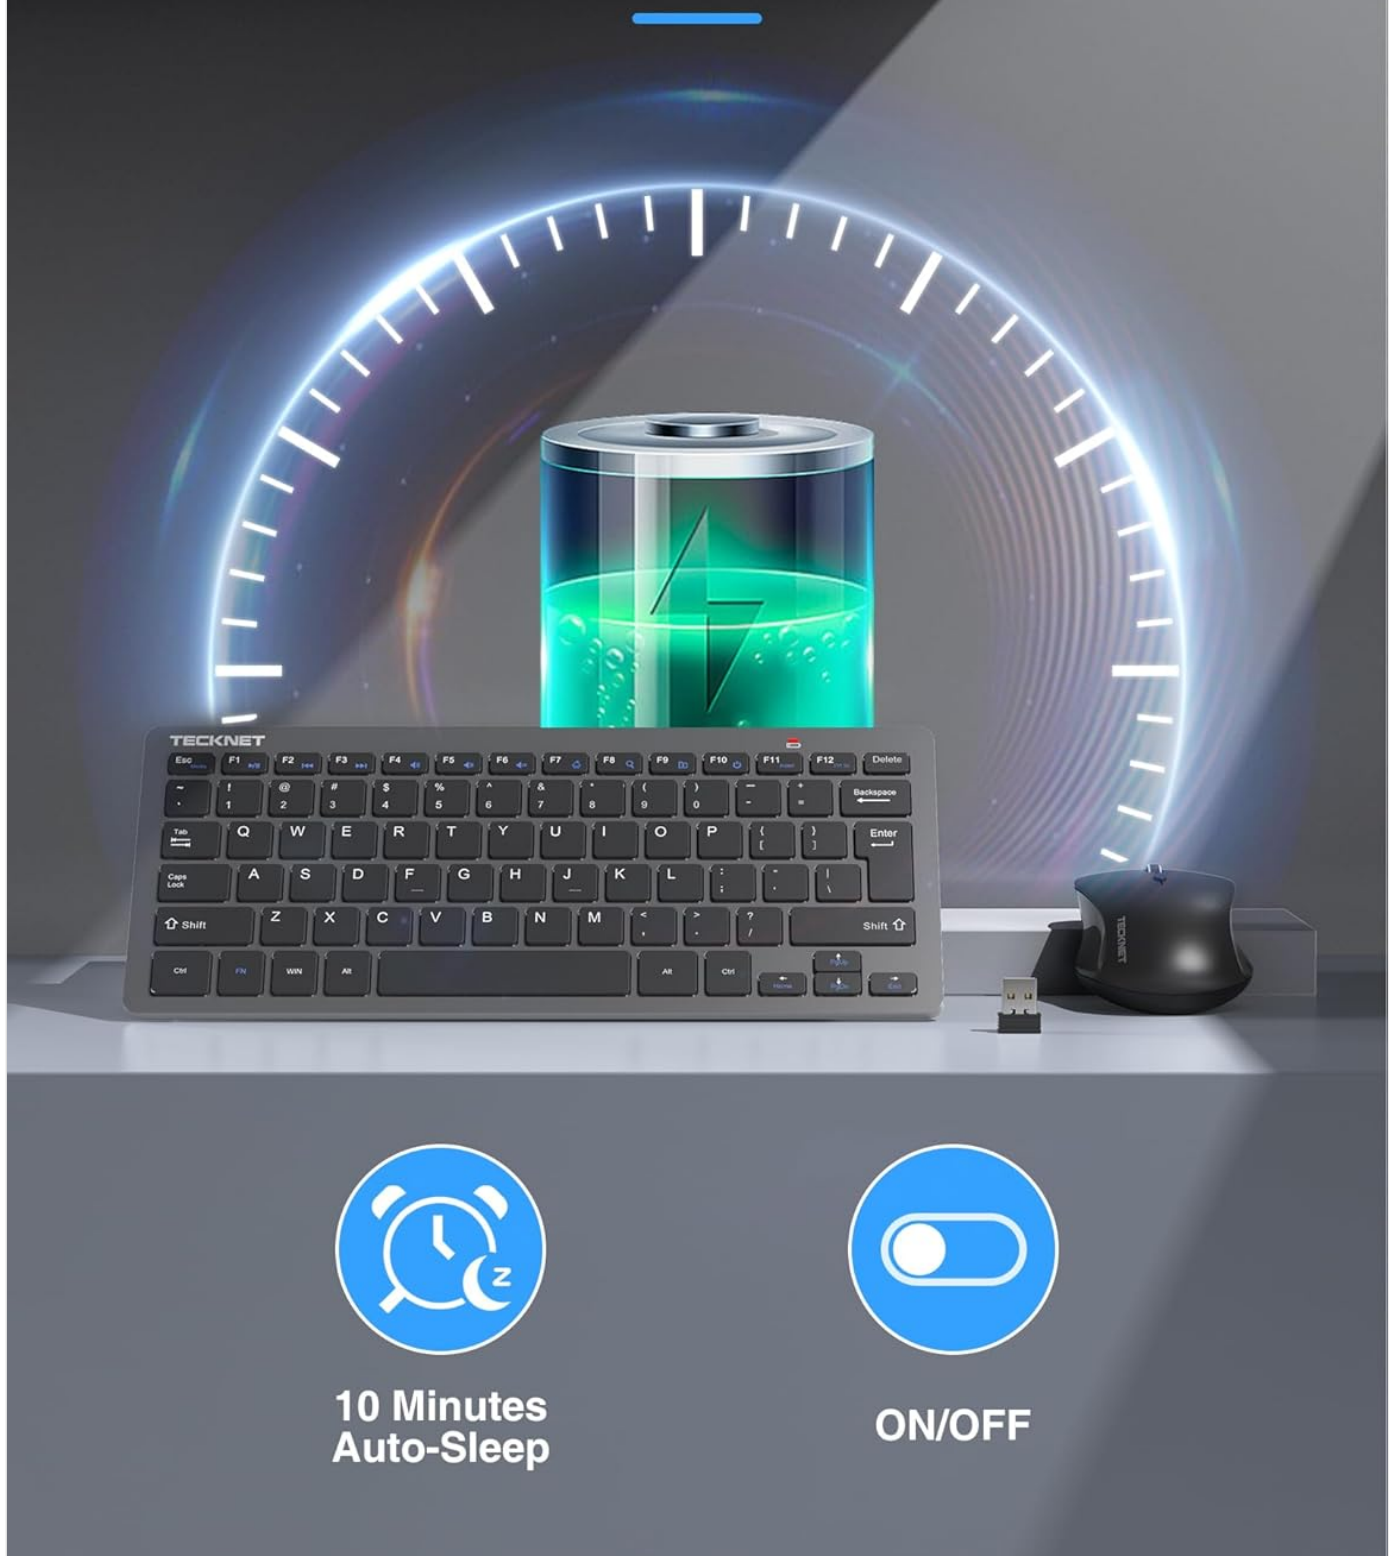


Figure 6: The combo features an auto-sleep function and on/off switches for extended battery life.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Keyboard/Mouse not responding.	• Ensure both devices are powered on. • Check if the USB receiver is securely plugged into a working USB port. • Replace the batteries in both the keyboard and mouse. • Try plugging the USB receiver into a different USB port.
Lag or intermittent connection.	• Ensure the devices are within the 15-meter (49 feet) operating range. • Move the devices closer to the USB receiver. • Avoid placing the receiver near strong electromagnetic interference sources (e.g., other wireless devices, large metal objects).
Mouse cursor erratic or not moving smoothly.	• Clean the optical sensor on the bottom of the mouse. • Ensure you are using the mouse on a suitable surface (non-reflective, non-transparent). • Adjust the DPI setting to a different level.

SPECIFICATIONS

- **Model:** TK-KM006
- **Connectivity:** 2.4GHz Wireless (via Nano USB Receiver)
- **Wireless Range:** Up to 15 meters (49 feet)
- **Keyboard Dimensions:** 292 x 125 x 19mm
- **Keyboard Weight:** 300g
- **Mouse Dimensions:** 110 x 65 x 30mm
- **Mouse Weight:** 58g
- **Mouse DPI Levels:** 800/1200/1600 DPI (Adjustable)
- **Keyboard Battery:** 2 x AAA batteries (not included)
- **Mouse Battery:** 2 x AAA batteries (not included)
- **Compatibility:** Windows 11/10/8/7/2000/ME/XP/Vista, Android Smart TVs, Mac, Chrome OS, Linux
- **Key Lifespan:** Over 8 million presses

WARRANTY AND SUPPORT

TECKNET offers a **36-month warranty** for this product (registration required). For any product issues, technical assistance, or warranty claims, please contact TECKNET customer service directly. Refer to the contact information provided in your product packaging or visit the official TECKNET website for support.

Email Support: support@tecknet.co.uk

