



[Manuals.plus](#) /

› [LONPOO](#) /

› LONPOO Stereo System Remote Control User Manual

LONPOO 886/816/609

LONPOO Stereo System Remote Control User Manual

Models: 886, 816, 609

INTRODUCTION

This user manual provides detailed instructions for the LONPOO Stereo System Remote Control, compatible with models 886, 816, and 609. Please read this manual carefully before using your remote control to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

PRODUCT OVERVIEW

The LONPOO remote control is designed to provide convenient access to the functions of your LONPOO stereo system. It features a clear button layout for intuitive control.



Figure 1: Front view of the LONPOO stereo system remote control, showing all buttons and their labels.



Figure 2: Angled view of the LONPOO stereo system remote control, highlighting its ergonomic design.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your LONPOO stereo system. Ensure there are no obstructions between the remote and the stereo system.

Button Functions

Button	Function
Power	Turns the stereo system On or Off.
Mute	Mutes or unmutes the audio output.
SCAN	Initiates a scan for radio stations or tracks.
Play/Pause	Plays or pauses the current track/media.
CH- / CH+	Navigates to the previous/next channel or track.
TUN- / TUN+	Adjusts the tuning frequency (e.g., for radio).

Button	Function
MODE	Switches between different input modes (e.g., CD, FM, AUX, Bluetooth).
VOL- / VOL+	Decreases or increases the volume level.
REPEAT	Toggles repeat playback mode (e.g., repeat one, repeat all).
0-9 (Number Pad)	Directly selects track numbers or radio station frequencies.
PROG (Program)	Enters program mode to create a custom playback sequence.
EQ (Equalizer)	Cycles through preset equalizer modes (e.g., Rock, Pop, Jazz).

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries, ensuring correct polarity (+/-).
	Obstruction between remote and stereo system.	Remove any objects blocking the line of sight to the stereo's IR sensor.
	Remote is too far from the stereo system.	Move closer to the stereo system.
Buttons are sticky or unresponsive.	Dirt or debris under the buttons.	Clean the remote control surface. Avoid spills.

SPECIFICATIONS

- **Brand:** LONPOO
- **Compatible Devices:** Stereo System (Models 886, 816, 609)
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1
- **Power Source:** 2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your LONPOO stereo system or visit the official LONPOO website. This remote control is designed to be a direct replacement or compatible accessory for the specified LONPOO stereo system models.

For further assistance, please contact LONPOO customer service through their official channels.

