#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- KIEUIENK /
- > Digital Pet, Digital Pets for Kids, Electronic Pet Game Machine with Keychain, Virtual Pet for Girls, Boys (Purple)

#### **KIEUIENK B0D7BQ18PR**

# **KIEUIENK Digital Pet Electronic Game Machine User Manual**

Model: B0D7BQ18PR

#### INTRODUCTION

The KIEUIENK Digital Pet Electronic Game Machine is an interactive virtual pet device designed for entertainment and fostering responsibility. It features multiple built-in game modes and a user-friendly interface, making it suitable for various age groups. Its compact design with smooth corners ensures durability and ease of handling.



Image: Front view of the KIEUIENK Digital Pet Electronic Game Machine in purple, featuring a screen, three control buttons (RESET, SELECT, DECIDE), and a keychain attachment. The device has a unicorn and cloud design.

# **SAFETY INFORMATION**

This product is designed with child safety in mind, featuring smooth corners and durable PP material. No specific safety warnings beyond general electronic device handling are provided by the manufacturer. Always supervise young children during use. Keep away from water and extreme temperatures.

## WHAT'S IN THE BOX

- 1 x Electronic Pet Game Machine (Purple)
- 1 x Keychain attachment



Image: The Electronic Pet Game Machine shown with its attached keychain, highlighting its portability.

# SETUP

# **Battery Installation**

The device is powered by batteries. To install or replace batteries:

- 1. Locate the battery compartment on the back of the device.
- 2. Use a small screwdriver (not included) to open the battery compartment cover.
- 3. Insert the required batteries (type and quantity typically indicated inside the compartment) ensuring correct polarity (+/-).
- 4. Replace the battery compartment cover and secure it with the screw.

#### **Initial Power On**

After battery installation, the device should power on automatically or by pressing the 'RESET' button. Follow on-screen prompts to set up your virtual pet.

## **OPERATING INSTRUCTIONS**

#### **Controls**

The device features three primary control buttons:

- **RESET:** Used to restart the device or return to the main menu in some contexts.
- SELECT: Navigates through menu options or cycles through choices.
- **DECIDE:** Confirms a selection or performs an action.
- CANCEL: Used to exit a menu or cancel an action.



Image: A close-up view of the bottom portion of the digital pet device, clearly showing the 'RESET', 'SELECT', 'DECIDE', and 'CANCEL'

## **Caring for Your Virtual Pet**

Your virtual pet requires regular attention to thrive. Key activities include:

- Feeding: Provide food when your pet is hungry.
- Playing: Engage in mini-games to keep your pet happy and entertained.
- Cleaning: Clean up after your pet to maintain its health.
- Discipline: Address misbehavior to teach your pet good habits.
- Medical Care: Administer medicine if your pet falls ill.

#### **Game Modes**

The device includes multiple built-in game modes for extended entertainment. Use the 'SELECT' and 'DECIDE' buttons to navigate through the game menu and choose your preferred activity.



Image: A child holding the purple digital pet game machine, demonstrating its handheld nature and ease of use during play.

## **M**AINTENANCE

- Cleaning: Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Storage: Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care: Remove batteries if the device will not be used for an extended period to prevent leakage.

## **T**ROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low or dead batteries; incorrect battery installation.	Replace batteries; ensure correct polarity.
Screen is blank or frozen.	Software glitch; low battery.	Press the 'RESET' button; replace batteries.
Buttons are unresponsive.	Software glitch; physical obstruction.	Press the 'RESET' button; ensure buttons are not stuck.

# **SPECIFICATIONS**

Feature	Detail
Product Name	Virtual Electronic Digital Pet
Model Number	B0D7BQ18PR
Material	PP (Polypropylene)
Product Dimensions	Approx. 5.8 x 4.9 x 1.7 cm (2.28 x 1.93 x 0.67 inches)
Weight	26g
Display Type	LCD
Power Source	Battery Powered
Controller Type	Button Control
Recommended Age	10 - 20 years (as per manufacturer)



Image: The digital pet game machine with arrows and measurements indicating its dimensions: 5.8cm/2.28in width and 4.9cm/1.93in height.

# WARRANTY AND SUPPORT

For product support, inquiries, or warranty information, please contact the manufacturer, KIEUIENK, through their official channels or the retailer from whom the product was purchased. Please retain your proof of purchase for any warranty claims.

#### Related Documents - B0D7BQ18PR



## KIEUIENK Portable Mini Printer Operating Manual Guide

Comprehensive operating manual for the KIEUIENK Portable Mini Printer. This guide covers packing lists, machine description, specifications, precautions, app download and connection, paper loading, warranty, after-sales information, specific function guidelines, and troubleshooting common problems.

	per use used on reasons were responsing namening up
	a paper is too hip and jeromed Phone hale and some
4 Indicator Seators St	decirity. Thurgo the mechine (half on hour) model the paper soil, the paper sell in not public to the per existif publish paper soil and by a section, professior, professior sould.
on and language process he	more the support of paper rail, manually aired the per solland then install the support, or density put in the per solland pine.
	en the paper competitient of the medicine and other a time competitient directors associated and
1.Nopper P	midd the paper out, the paper oid in not author tothe per subsit put the paper out out to a section preferably principle paper outsit.
	e privier delenda a paper sensor februs, clear the near retir an abushal relatio custor needs
3.Spriaming Ur	mild and rehelal
fed. 1.The paper od bit color To	to aid the paper aid and one year frequently to story
O speide door. No	of an Perjaper, and redshifted the solar scin locally ap-
not retailed correctly as	
	the out the paper rational aut of the wrinted of, named for printing
1.7to naditivitox over 15 bind triples 6	ne cover of machine took is not closed Spittic/Reptice is cover and press the cover finite with patin.
	power. Charge and their print
- A	Quit the grint durally to the Nighaet
EPaper roll has been left. In	
	mand paper rule are justiced in sealed bags or bosons.
a consective observe O	on't different phone mades and versions, the phone observed different, and the phone system had as the should have
. 1	were careful paper corner to people with give
	ill the records before printing, and try in exold along a desert perm-origed pen-or-the printing paper within trong
2	minist temperature, humbley, or attached, solidisched assess, or your basels, or hand anothers will
preservation D	hell the fielding of words been structed in contact light and store the printing paper
1K11	is dry analogous.  In colonia of the colonial explore about and he is contact.
	Diaruther printed surface or tempered largitar craps
	you need to stick the printing paper, phase swind the final paper with adherive backing, borne shallow hou
	Deplete will according the fading