

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Centtechi](#) /

› [Centtechi Montessori Wooden Board Game Instruction Manual - Model 1868659](#)

Centtechi 1868659

Centtechi Montessori Wooden Board Game Instruction Manual

Model: 1868659

INTRODUCTION

This manual provides comprehensive instructions for the Centtechi Montessori Wooden Board Game, Model 1868659. This game is designed to engage children aged 3 and up in a fun and educational activity, promoting hand-eye coordination, fine motor skills, and strategic thinking. Please read this manual thoroughly before setup and play to ensure proper use and enjoyment.



Image: The Centtechi Montessori Wooden Board Game fully assembled, showing the wooden tower, colorful sticks inserted, and several wooden balls resting on top, with a few balls and the dice scattered around the base.

SAFETY INFORMATION

- **Small Parts Warning:** This game contains small balls and sticks which may pose a choking hazard for children under 3 years of age. Adult supervision is required during play.
- **Material Safety:** The game components are made from high-quality beech wood and non-toxic, water-based paint. Ensure all parts are intact before play.
- **Storage:** Store all game components in the provided storage bag when not in use to prevent loss and keep them out of reach of very young children.

WHAT'S IN THE BOX

Verify that all components are present before beginning play:

1 x Wooden Tower: The main game structure.

48 x Colorful Sticks: Used to create the playing surface.

6 x Wooden Balls: The objects that players try to prevent from falling.

1 x Dice: Used to determine which color stick to remove.

1 x **Storage Bag**: For convenient storage of game components.

1 x **Instruction Manual**: This document.



Image: A visual representation of all components included in the game box: a gift box, wooden tower, 48 wooden sticks, a storage bag, a dice, 6 wooden balls, and a manual.

SETUP

Follow these steps to prepare the game for play:

1. **Assemble the Tower:** Place the wooden tower on a flat, stable surface. Ensure the base is secure.
2. **Insert the Sticks:** Begin inserting the 48 colorful sticks through the holes in the tower's acrylic panels. Insert them randomly or in a pattern, ensuring they crisscross to form a stable network. The sticks should extend through both sides of the tower.
3. **Place the Balls:** Carefully place all 6 wooden balls on top of the network of sticks, inside the top opening of the tower. The balls should rest on the sticks and not fall through to the bottom.

Easy to Play



1 Players insert wooden sticks.



2 Place the colorful balls on top.



3 Players roll the dice and take turns removing sticks.



4 The player with the fewest wooden balls dropped, wins!

Image: A collage of four images illustrating the game setup and play: 1) Players insert wooden sticks, 2) Place colorful balls on top, 3) Players roll the dice and take turns removing sticks, 4) The player with the fewest dropped balls wins.

OPERATING INSTRUCTIONS (HOW TO PLAY)

The Centtechi Montessori Wooden Board Game can be played by 1-6 players. The objective is to remove sticks without letting the wooden balls fall.

Game Rules:

1. **Player Order:** Determine the first player (e.g., youngest player, dice roll). Play proceeds clockwise.
2. **Roll the Dice:** On a player's turn, they roll the dice. The dice has colored sides corresponding to the stick colors.
3. **Remove a Stick:** The player must carefully remove one stick of the color indicated by the dice from anywhere in the tower. If no sticks of that color are available, the player may choose any other stick to remove.
4. **Falling Balls:** If any wooden balls fall to the bottom of the tower during a player's turn, that player collects those balls.
5. **End of Game:** The game continues until all balls have fallen to the bottom.

6. **Winning:** The player who has collected the *fewest* fallen balls at the end of the game is the winner.

This game encourages strategic thinking as players analyze which stick to remove to minimize ball drops. It also promotes patience and concentration.



Image: Two young boys are seated on a carpet, actively engaged in playing the Genttechi Montessori Wooden Board Game. One boy is carefully removing a stick, while the other observes.

Fun Family Board Games

Enjoy Happy Time with Your Children



Image: A family of four, including two adults and two children, is seated on a carpet, playing the Centtechi Montessori Wooden Board Game. They are all focused on the game, demonstrating family interaction.

MAINTENANCE

Proper care will ensure the longevity of your Centtechi Montessori Wooden Board Game:

- **Cleaning:** Wipe the wooden components with a dry or slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the wood and paint.
- **Storage:** After each use, disassemble the game and store all components in the provided storage bag. Keep the game in a cool, dry place away from direct sunlight and extreme temperatures to prevent warping or fading.
- **Inspection:** Periodically inspect all parts for any signs of wear or damage. Discontinue use if any part is broken or splintered to prevent injury.

Best Choice for Your Kids



Image: A detailed view of the game's construction, emphasizing its wooden design, the acrylic panels where sticks are inserted, the smooth finish of the wood, and the non-toxic water-based paint on the sticks.

TROUBLESHOOTING

If you encounter any issues with your game, refer to the following common solutions:

Problem	Solution
Sticks slide out too easily during setup.	Ensure sticks are inserted firmly and crisscross sufficiently to create tension. Some initial looseness is normal before balls are placed.
Balls fall immediately after placement.	Verify that enough sticks are inserted to form a dense network capable of supporting the balls. Re-insert sticks to create a more stable base.
Dice color does not match any available sticks.	As per game rules, if no sticks of the rolled color are available, the player may choose any other stick to remove.
Missing game components.	Refer to the "What's in the Box" section. If components are missing upon initial unboxing, contact customer support.

SPECIFICATIONS

- **Model Number:** 1868659
- **ASIN:** B0D7C1C3SW
- **Brand:** Centtechi
- **Materials:** High-quality Beech Wood, Acrylic, Non-toxic Water-based Paint
- **Package Dimensions:** 8.62 x 4.88 x 4.84 inches
- **Item Weight:** 1.3 pounds
- **Recommended Age:** 3 years and up
- **Number of Players:** 1-6
- **Manufacturer:** Yunhe County Qiaoying Toys Co., Ltd.

WARRANTY AND SUPPORT

Centtechi is committed to providing quality products. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, returns, or technical support, please refer to the retailer's policy where the product was purchased or contact Centtechi customer service through their official channels.

Please retain your proof of purchase for warranty claims.