

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karinear](#) /

› [Karinear 110V Electric Cooktop 2 Burner User Manual](#)

## Karinear KNC-PF302SGB-4-UL

# Karinear 110V Electric Cooktop 2 Burner User Manual

Model: KNC-PF302SGB-4-UL



## INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Karinear 110V Electric Cooktop 2 Burner. Please read this manual thoroughly before installation, operation, or maintenance to ensure proper use and to prevent potential hazards.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure proper ventilation around the cooktop during operation.
- This appliance is designed for household use only.

## WHAT'S IN THE Box

- Karinear 110V Electric Cooktop
- User Manual
- Scraper



Image: The Karinear 110V Electric Cooktop, showing its sleek black glass surface, two heating elements, and attached power cord with a standard 110V plug.

## SETUP AND INSTALLATION

Your Karinear electric cooktop offers versatile installation options: it can be used as a portable countertop unit or integrated as a

built-in appliance.

## Countertop Use

For countertop use, simply place the cooktop on a stable, flat, heat-resistant surface. Ensure there is adequate clearance around the unit for ventilation. The cooktop has rubber feet on the bottom for stability.

# Drop-in Install or Countertop Use



Drop-in install it saving space  
and is more aesthetically pleasing



More convenient to use  
on the countertop

Image: A split image showing the Karinear cooktop both as a drop-in installation and as a more convenient countertop unit, highlighting its versatility.

## Built-in Installation

If you choose to install the cooktop as a built-in unit, ensure your countertop cutout meets the specified dimensions. This provides a seamless and aesthetically pleasing look.

**Stovetop Size:** 20.5 x 11.4 inches (520 x 290 mm)

**Cutout Size:** 19.7 x 11 x 1.73 inches (500 x 280 x 44 mm)



Image: A detailed diagram illustrating the precise dimensions for built-in installation, including stovetop size and cutout size in both inches and millimeters.

No special wiring is required as the unit comes with a standard 110V plug. Simply plug it into a compatible outlet after installation.

## OPERATING INSTRUCTIONS

The Karinear electric cooktop features intuitive touch controls for easy operation.

### Power On/Off

Press the **On/Off** button to turn the cooktop on or off. The display will illuminate when powered on.

### Adjusting Power Levels

The cooktop offers 9 power levels for precise temperature control. Use the + and - buttons next to each burner's display to increase or decrease the power level.

**Large Burner:** Up to 1800W

**Small Burner:** Up to 900W

## Timer Function

To set a cooking timer (up to 99 minutes), press the **Timer** button and use the + and - buttons to adjust the desired time. The cooktop will automatically shut off when the timer expires.

## Child Safety Lock

To activate the child safety lock, press and hold the **Lock** button for a few seconds until 'Lo' is displayed. This prevents accidental operation. To unlock, press and hold the **Lock** button again until 'Lo' disappears.

## Residual Heat Indicator

After cooking, if the glass surface is still hot, an 'H' will be displayed for the corresponding burner. This indicates residual heat and will disappear once the surface has cooled to a safe temperature.

## Cookware Compatibility

This electric ceramic hob is compatible with any pots and pans made of heat-resistant materials. Unlike induction cooktops, it does not require specific iron or magnetic cookware.

## Child Safety Lock



## 99 Mins Timer



## Residual Heat Indicator



Image: A composite image showing the cooktop's display indicating the Child Safety Lock ('Lo'), the 99-minute Timer function, and the Residual Heat Indicator ('H').

## MAINTENANCE AND CLEANING

To maintain the performance and appearance of your cooktop, regular cleaning is recommended.

- Always ensure the cooktop is turned off and completely cool before cleaning.
- Use a soft cloth or sponge with mild dish soap and warm water to wipe down the glass surface.
- For stubborn stains or burnt-on food, use the provided scraper or a ceramic cooktop cleaner. Follow the cleaner's instructions.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the glass surface.
- Wipe dry with a clean, soft cloth to prevent water spots.

# High quality smooth glass, easy to clean



Comes with  
scraper

Image: A hand wiping the smooth black glass surface of the cooktop with a cleaning cloth, demonstrating its ease of cleaning. A scraper tool is also shown in the corner.

## TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	Not plugged in; power outage; child lock activated.	Ensure plug is securely in outlet. Check household circuit breaker. Press and hold the Lock button to deactivate child lock.
'H' displayed after use.	Residual heat on the surface.	This is normal. The 'H' indicates the surface is still hot. Wait for it to disappear before cleaning or touching.
Cooktop automatically shuts off.	Overheat protection activated; timer expired.	Allow the unit to cool down. Check if the timer was set and has reached zero.

Problem	Possible Cause	Solution
Controls are unresponsive.	Child lock activated; dirty control panel.	Deactivate child lock. Clean the control panel thoroughly.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

**Brand:** Karinear

**Model:** KNC-PF302SGB-4-UL

**Voltage:** 110-120V

**Power:** 2000W (1800W large burner + 900W small burner)

**Installation Type:** Countertop or Built-in

**Stovetop Size:** 20.5 x 11.4 inches

**Cutout Size:** 19.7 x 11 x 1.73 inches

**Material:** High-quality Black Glass

**Heating Elements:** 2 (R radiant)

**Special Features:** 9 Power Levels, Child Safety Lock, Timer, Auto Shut-off, Residual Heat Indicator, Overheat Protection, Abnormal Voltage Protection

**Item Weight:** 11.68 pounds

**Product Dimensions:** 20.47 x 11.42 x 1.77 inches

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Karinear website. Keep your purchase receipt as proof of purchase for warranty claims.

You can also visit the [Karinear Store on Amazon](#) for more information and support.