

- Manuals.plus /
- › [AIIONP](#) /
 - › AIIONP Mini Bag Sealer A98870 - User Manual

AIIONP A98870

AIIONP Mini Bag Sealer A98870

User Manual

Model: A98870 | Brand: AIIONP

INTRODUCTION

The AIIONP Mini Bag Sealer A98870 is a portable, USB rechargeable 2-in-1 device designed for sealing and cutting various plastic and snack bags. This compact tool helps preserve food freshness by creating an airtight seal and offers a convenient way to open bags with its integrated cutter.

Its magnetic strip allows for easy storage on metal surfaces like refrigerators, ensuring it's always within reach.

Mini Bag Sealer

Keep food fresh all the time



Image: The Mini Bag Sealer being used to seal a snack bag, illustrating its primary function of preserving food freshness.

PRODUCT FEATURES

- **2-in-1 Functionality:** Seamlessly switches between heat sealing and bag cutting for versatile use.
- **USB Rechargeable:** Equipped with a Type-C charging port, eliminating the need for frequent battery replacements.
- **Easy Operation:** Simple button controls for quick sealing and precise cutting.
- **Food Preservation:** Helps extend the freshness of vegetables, fruits, grains, and snacks by creating an airtight seal.
- **Portable Design:** Compact and lightweight, making it easy to store and carry for on-the-go use.
- **Magnetic Backing:** Features a magnetic strip for convenient storage on metal surfaces.

Widely used

Hanging storage



Fruit storage



Small
snack packaging



Pocket

Image: The Mini Bag Sealer demonstrating its wide range of uses, including hanging storage, fruit preservation, small snack packaging, and easy portability in a pocket.

PACKAGE CONTENTS

- 1 x AllONP Mini Bag Sealer (Model A98870)
- 1 x USB Type-C Charging Cable
- 1 x User Manual

SETUP

1. **Initial Charge:** Before first use, fully charge the Mini Bag Sealer using the provided USB Type-C cable. Connect the cable to the device's charging port and a compatible USB power source. The pilot lamp will indicate charging status (e.g., red for charging, blue for fully charged or power on).
2. **Power On:** Press the power button to activate the device. The pilot lamp will illuminate.

No battery required

Type-C interface



Image: The Mini Bag Sealer showing its Type-C charging port and pilot lamp indicators for charging and power status.

OPERATING INSTRUCTIONS

Sealing Bags

1. Ensure the device is charged and powered on.
2. Align the open edge of the bag between the sealing plates of the device.
3. Press and hold the "+" button (usually the bottom button) to activate the heat sealing function.
4. Slowly and steadily slide the sealer across the bag's opening, applying gentle pressure. Move at a consistent speed to ensure a complete seal.
5. Release the button once the bag is sealed.

2-in-1 sealing

Keep food fresh all the time



Seal bag



Open bag

Image: Illustration of the 2-in-1 functionality, showing how to seal a bag and how to use the integrated cutter to open a bag.

Easy to use

Just a gentle pull



Sealing: Press and hold the "+" button



Opening the bag: Press and hold "-"

Image: Detailed view of the sealer's buttons, indicating which button to press for sealing and which for opening.

Cutting Bags

1. Ensure the device is powered on.
2. Place the edge of the bag into the cutting slot.
3. Press and hold the "-" button (usually the top button) to activate the cutter.
4. Slide the sealer across the bag's opening to cut it.
5. Release the button once the bag is cut.

Applicable Bag Types

This sealer is suitable for various plastic bags, including:

- Food storage bags
- Potato chip bags
- Fruit bags

- Candy bags
- Pet food bags
- Vacuum bags
- Seasoning bags
- Salad bags

Suitable for various of bags



Image: A visual guide to the different types of bags that can be sealed or cut with the device.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the sealer with a soft, damp cloth. Do not immerse the device in water. Ensure the sealing and cutting areas are free from food debris.
- **Storage:** Store the Mini Bag Sealer in a cool, dry place. Utilize its magnetic backing to attach it to a refrigerator or other metal surface for convenient access and storage.
- **Charging:** Recharge the device when the battery is low to ensure optimal performance.

TROUBLESHOOTING

Device not turning on:

Ensure the device is fully charged. Connect it to a power source using the USB-C cable and allow it to charge for at least 30 minutes before attempting to power it on again.

Bag not sealing properly:

- Check if the device is fully charged. Low battery can affect heating performance.
- Ensure the bag material is compatible with heat sealing. Very thick or very thin bags may require different speeds.
- Slide the sealer slowly and steadily across the bag. Moving too quickly may result in an incomplete seal.
- Ensure there are no wrinkles or folds in the bag where you are trying to seal.

Cutter not working effectively:

- Ensure the device is powered on.
- Check for any debris obstructing the blade. Clean the cutting slot carefully.
- Ensure the bag is properly inserted into the cutting slot and the "-" button is pressed firmly.

SPECIFICATIONS

Brand	AIIONP
Model Number	A98870
Material	ABS Plastic
Color	White
Product Dimensions	4.8"L x 1.26"W x 2"H (12.2cm x 3.2cm x 5.08cm)
Item Weight	56 Grams (1.98 ounces)
Power Source	Battery Powered (USB Rechargeable)
Charging Port	USB Type-C
Operation Mode	Manual
Voltage	12 Volts (DC)

Product size



Image: Product dimensions and examples of its portable use in various settings.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official AIIONP website. Keep your purchase receipt as proof of purchase.

© 2024 AIIONP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7CGJW4T>

More documents and user manuals: **<https://manuals.plus/>**