

[Manuals.plus](#) /

> [PPMIC](#) /

> PPMIC T18-T Karaoke Machine Instruction Manual

PPMIC T18-T

PPMIC T18-T Karaoke Machine Instruction Manual

Comprehensive guide for setup, operation, and maintenance of your portable karaoke system.

PRODUCT OVERVIEW

The PPMIC T18-T Karaoke Machine is a portable Bluetooth 5.3 karaoke speaker designed for immersive sound and versatile entertainment. It features an upgraded 6.5-inch subwoofer, advanced DSP chip, vocal-removal, and echo adjustment functions. With multiple connection methods and a long-lasting battery, it's perfect for various settings, from parties to outdoor gatherings.



Figure 1: PPMIC T18-T Karaoke Machine with included accessories.

This image displays the main unit of the PPMIC T18-T Karaoke Machine, featuring a colorful LED light ring on the speaker grille. Alongside the main unit are two wireless microphones, a USB-C charging cable, an auxiliary cable, and a shoulder strap, illustrating the complete package contents.

WHAT'S IN THE BOX

- 1 x Karaoke Machine (PPMIC T18-T)
- 2 x Wireless Microphones
- 1 x Auxiliary Cable
- 1 x Type-C Power Cable
- 1 x Shoulder Strap
- 1 x User Manual

SPECIFICATIONS

Feature	Detail
Brand	PPMIC
Model Number	T18-T
Item Weight	4.8 pounds
Product Dimensions	5.9 x 9.7 x 11.8 inches
Speaker Count	1 (6.5-inch Subwoofer)
Output Wattage	20 Watts (Max 60W)
Bluetooth Version	5.3
Battery Type	Lithium Ion (4000 mAh)
Battery Life	6-8 hours (continuous play)
Charging Time	2-4 hours
Connectivity	Bluetooth 5.3, TF Card, USB Flash Drive, Type-C, AUX
Special Features	Instrumental Mode, Echo Effect, Light Up Speaker, PA System
Material Type	Acrylonitrile Butadiene Styrene (ABS)

SETUP

1. Charging the Speaker

Before first use, fully charge the karaoke machine. Connect the provided Type-C power cable to the charging port on the control panel. The charging lamp will illuminate red while charging and turn off when fully charged.

MULTIPLE CONNECTIONS AND DEVICES

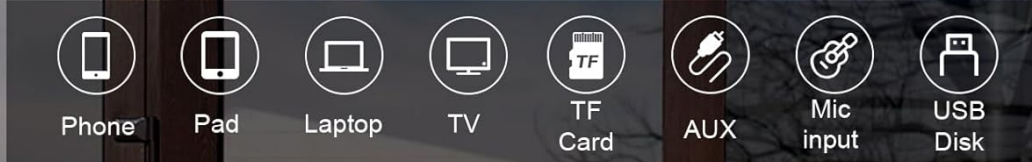


Figure 2: Close-up of the control panel showing the USB-C charging port and charging lamp.


This image provides a detailed view of the speaker's control panel, specifically highlighting the USB-C charging port. The charging lamp, which indicates charging status, is also visible.

2. Microphone Battery Installation

Each wireless microphone requires 2 AA batteries (not included). Unscrew the bottom part of the microphone to insert the batteries, ensuring correct polarity. Once batteries are installed, slide the power switch on the microphone to the 'ON' position.

UP TO **20M** TRANSMISSION RANGE

Bluetooth 5.3 enhances signal stability and improves the efficiency of data transfer.

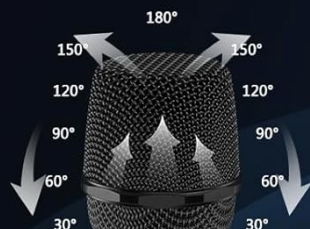

20m

Note: Requires two AA batteries

 **Sound**
Premium sound quality

 **UHF**
Stable UHF signal

 **20 Meters**
Transmission distance

Figure 3: Wireless microphones showing the battery compartment and power switch.

This image illustrates the wireless microphones provided with the karaoke machine. One microphone is shown with its bottom unscrewed, revealing the battery compartment where two AA batteries need to be inserted. The power switch is also visible on the microphone body.

3. Bluetooth Connection

Rotate the 'ON/OFF' knob clockwise to power on the speaker. The speaker will announce "Bluetooth Mode". On your device (smartphone, tablet, etc.), enable Bluetooth and search for "T18-T" in the list of available devices. Select "T18-T" to pair. The speaker will announce "Connected" upon successful pairing.

STUNNING SOUND QUALITY

Frequency range of 50 Hz - 20,000 Hz for rich audio details



DSP Chips



6.5" Full-Range



HiFi Audio



20W Power



Figure 4: The karaoke machine displaying its Bluetooth mode, ready for connection.

This image shows the PPMIC T18-T Karaoke Machine with its display indicating "BLUE" for Bluetooth mode, signifying it is ready for pairing with a compatible device. The colorful LED lights around the speaker cone are also active.

Your browser does not support the video tag.

Video 1: This official seller video demonstrates the unboxing and initial Bluetooth connection process for the T18-T Portable Karaoke Machine, including how to install batteries in the wireless microphones and pair the speaker with a mobile device.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The control panel on top of the speaker provides access to all functions. It includes knobs for Microphone Volume, Microphone Echo, and Master Volume. Numbered buttons (0-9) allow for direct song selection when using USB/TF card modes. Other buttons control mode switching, recording, playback, and microphone priority.

MULTIPLE CONNECTIONS AND DEVICES



Figure 5: Detailed view of the speaker's control panel, highlighting various knobs and buttons for operation.

This image provides a clear, labeled diagram of the PPMIC T18-T's control panel. It points out the Microphone Volume, Microphone Echo, and Master Volume knobs, as well as the USB, TF card slots, and various control buttons for mode selection, recording, playback, and microphone priority.

2. Switching Modes (USB/TF Card/AUX)

Short press the 'MODE/LED' button to cycle through available input modes: Bluetooth, USB, TF Card, and AUX. The display will indicate the current mode.

SIMPLE OPERATION & MULTI-FUNCTION

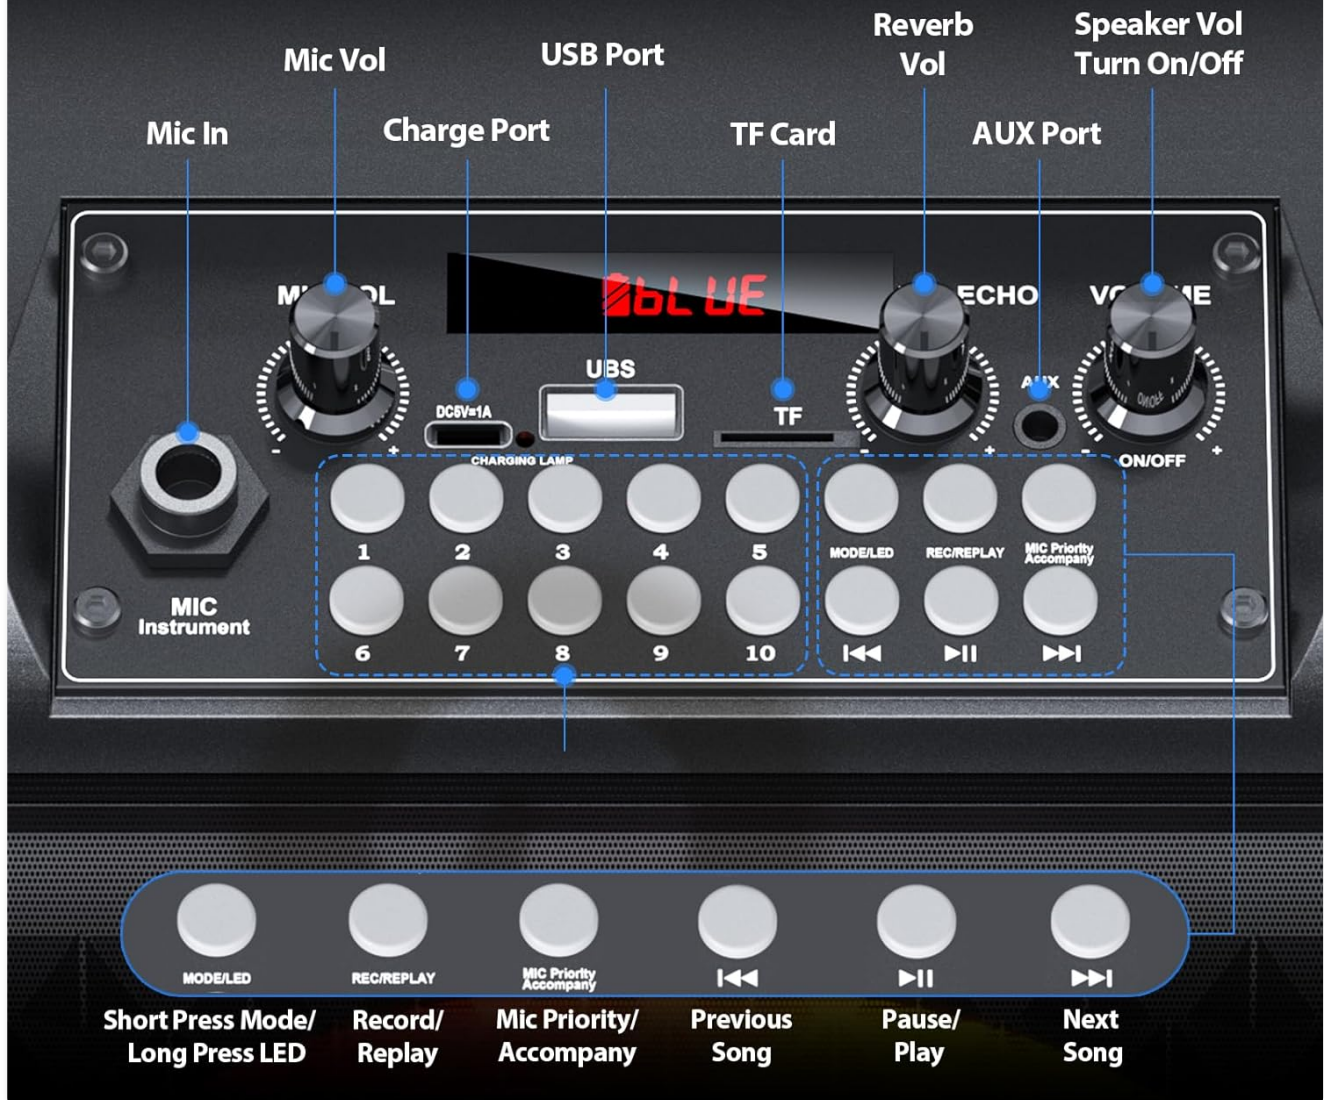


Figure 6: Close-up of the control panel, emphasizing the mode selection button and various input ports.

This image focuses on the control panel, specifically highlighting the 'MODE/LED' button used for switching between different input sources like USB, TF card, and AUX. The corresponding ports are also visible.

Your browser does not support the video tag.

Video 2: This official seller video provides a detailed operation tutorial for the T18-T Karaoke Machine, covering various functions and controls on the panel.

3. LED Light Control

Long press the 'MODE/LED' button to change the color and pattern of the LED lights. Short press to cycle through input modes.

POWERFUL BATTERY LIFE

Easy entertainment all day long



4000 mAh

Lithium Battery

2-4H

Charging Time

10-12H

Playing Time

Figure 7: The speaker showcasing its vibrant, multi-color LED light display.

This image captures the PPMIC T18-T Karaoke Machine with its dynamic LED light show active, displaying a spectrum of colors around the speaker cone, enhancing the party atmosphere.

Your browser does not support the video tag.

Video 3: This official seller video highlights the console functions of the T18-T, including the powerful PA system and LED light controls.

4. Vocal-Removal and Echo Adjustment

Short press the 'Accompany' button to activate Instrumental Mode, which removes vocals from the playing song. Use the 'MIC ECHO' knob to adjust the reverb effect for your vocals, adding depth and atmosphere.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker and microphones. Do not use abrasive cleaners or

solvents.

- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No power / Device won't turn on	Battery is low or depleted. Charge the speaker fully. Ensure the ON/OFF knob is turned clockwise.
No sound from speaker	Volume is too low. Increase the Master Volume knob. Ensure the correct input mode is selected (Bluetooth, USB, TF, AUX). Check if the connected device's volume is also turned up.
Microphones not working	Microphone batteries are dead or incorrectly installed. Replace AA batteries and check polarity. Ensure microphone power switch is ON. Increase Microphone Volume knob.
Bluetooth connection issues	Speaker is not in Bluetooth mode. Short press MODE/LED button until "Bluetooth Mode" is announced. Device is too far from speaker. Ensure devices are within 15 meters. Other Bluetooth devices interfering. Turn off Bluetooth on other nearby devices.
Sound distortion	Volume is too high. Decrease the Master Volume. Ensure audio source is not distorted.

WARRANTY AND SUPPORT

PPMIC is committed to providing high-quality portable sound systems. The company offers a 3-year warranty on its products. For any inquiries or assistance, please contact PPMIC customer support. They provide 7/24 hour customer support and have a US local after-sales center to address your needs.

For further details or to reach support, please visit the official PPMIC store on Amazon or refer to the contact information provided in your product packaging.

Note: Protection plans are available for purchase separately through Amazon for extended coverage.