

## Dacor DDW24G9000APDA

# Dacor Dishwasher 24 Inch, Panel Ready - Instruction Manual

Model: DDW24G9000APDA

## IMPORTANT SAFETY INSTRUCTIONS

---

Read all instructions before using the appliance. To reduce the risk of fire, electric shock, or injury to persons, observe the following:

- Use this appliance only for its intended purpose as described in this manual.
- Do not operate the dishwasher if it is not properly installed.
- Do not touch the heating element during or immediately after use.
- Use only detergents or rinse agents recommended for use in a dishwasher.
- Keep children away from detergent and rinse aid.
- Do not allow children to play in or on the appliance.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Do not tamper with controls.
- Ensure the dishwasher is properly grounded.

## PRODUCT OVERVIEW

---

The Dacor 24-inch Panel Ready Dishwasher is designed for seamless integration into your kitchen cabinetry, offering powerful cleaning performance with quiet operation.



Front view of the Dacor 24-inch Panel Ready Dishwasher with its door closed, showcasing its sleek, panel-ready design.



The dishwasher with its door slightly ajar, revealing the top rack and interior.



Interior view of the dishwasher with the door fully open, showing all racks and the wash arm.

## SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and safety of your Dacor dishwasher. It is recommended that installation be performed by a qualified installer.

### Pre-Installation Checklist:

- Verify water supply (hot water, 120°F/49°C recommended).
- Ensure proper electrical supply (120V, 60Hz, dedicated circuit).

- Confirm drain line connection availability.
- Prepare cabinet opening dimensions: 24 inches wide, 34-35 inches high, 24 inches deep.

### Installation Steps (Summary):

1. Unpack the dishwasher and inspect for any shipping damage.
2. Connect the water inlet hose to the hot water supply.
3. Connect the drain hose to the sink drain or garbage disposal.
4. Make electrical connections according to local codes.
5. Slide the dishwasher into the cabinet opening.
6. Secure the dishwasher to the countertop or side cabinets.
7. Install the custom panel (if applicable) to the dishwasher door.
8. Level the appliance using the adjustable feet.
9. Test for leaks and proper operation.

## OPERATING INSTRUCTIONS

---


### Loading the Dishwasher:

Proper loading ensures optimal cleaning and drying performance.



A side view of the dishwasher interior, showing the lower and middle racks loaded with various dishes and cookware, including pots and pans.



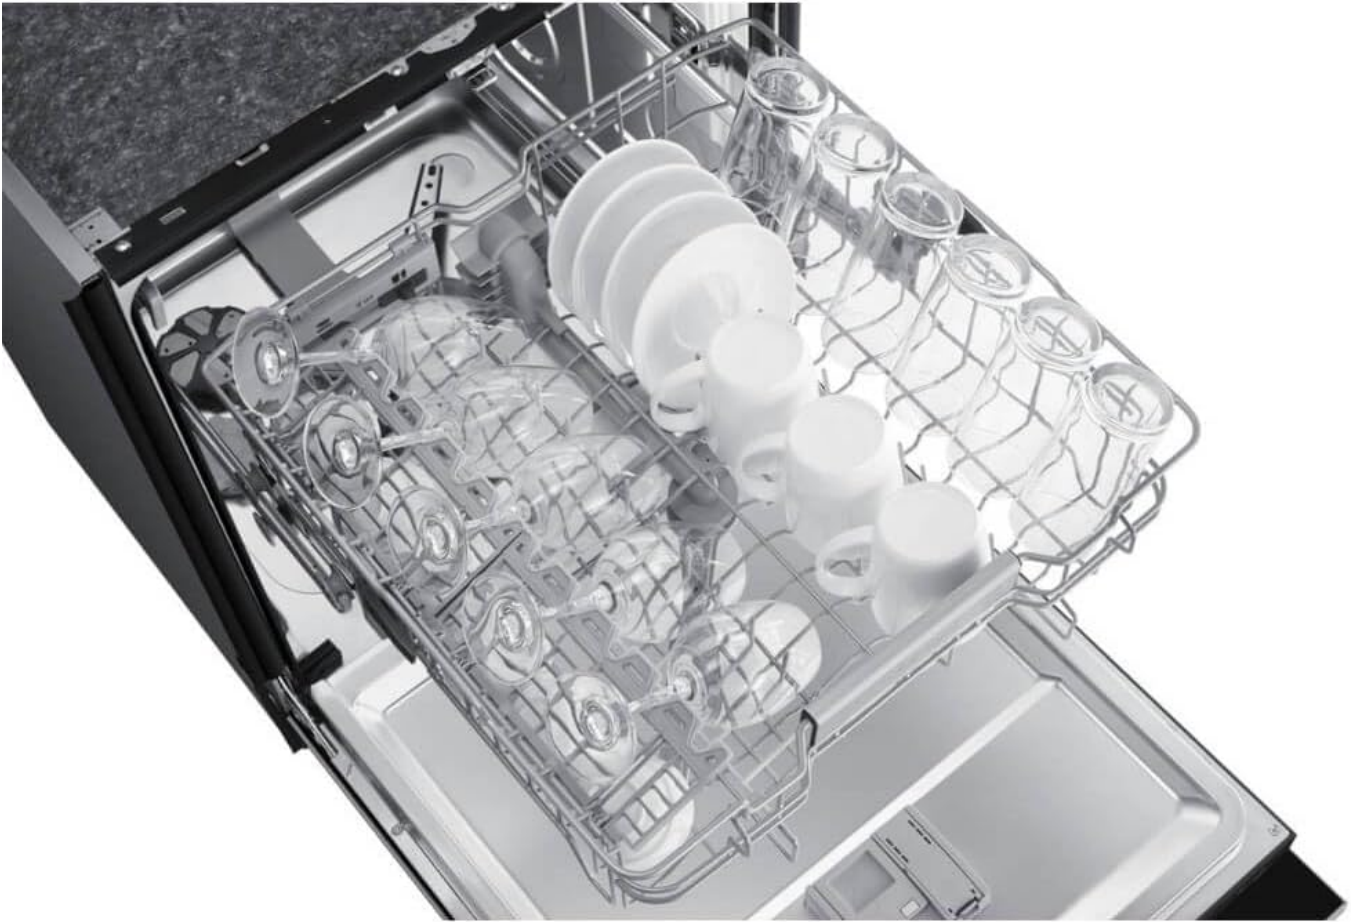

Close-up of the lower rack, demonstrating how to load larger items like pots and pans for effective cleaning.



The upper rack filled with glasses, cups, and smaller plates, illustrating proper placement for delicate items.



A detailed view of the third rack, specifically designed for organizing cutlery and various kitchen utensils.

- Scrape off large food particles.
- Place glasses and cups upside down on the upper rack.
- Place plates, bowls, and larger items on the lower rack.
- Load cutlery in the cutlery basket or third rack with handles down for forks/spoons and handles up for knives.
- Ensure spray arms are not blocked by dishes.

**Adding Detergent and Rinse Aid:**

- Add recommended dishwasher detergent to the dispenser.
- Fill the rinse aid dispenser to the indicated level.

**Selecting a Wash Cycle:**

Your Dacor dishwasher offers several wash cycles to suit different needs:

Cycle	Description	Typical Use
Auto	Automatically detects soil level and adjusts wash time and temperature.	Everyday use for mixed loads.
Heavy	For heavily soiled dishes, pots, and pans.	Baked-on food, large cookware.
Normal	Standard wash for normal soil levels.	Daily dishes.
Express	Quick wash for lightly soiled dishes.	Lightly soiled items, quick turnaround.
Delicate	Gentle wash for fragile items.	Crystal, fine china.

Refer to the control panel on your dishwasher for specific cycle names and options.

### **Starting a Cycle:**

1. Close the dishwasher door firmly.
2. Select your desired wash cycle.
3. Press the Start button.

## **MAINTENANCE AND CARE**

---

Regular maintenance ensures the longevity and efficiency of your dishwasher.

### **Cleaning the Filters:**

The dishwasher has a multi-stage filtration system that requires periodic cleaning.





The interior base of the dishwasher, highlighting the filter assembly and lower spray arm.

1. Turn off the dishwasher and disconnect power.
2. Locate the filter assembly at the bottom of the dishwasher tub.
3. Twist and remove the coarse filter and fine filter.
4. Rinse filters under running water to remove food particles. Use a soft brush if necessary.
5. Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

### **Cleaning the Interior:**

- Wipe down the interior walls and door gasket regularly with a damp cloth.

- Use a dishwasher cleaner product periodically to remove mineral buildup and odors.

### Cleaning the Exterior:

- For stainless steel surfaces, use a soft cloth and a stainless steel cleaner.
- Avoid abrasive cleaners or scouring pads.

### Winterizing (for non-use in cold climates):

- Disconnect power to the dishwasher.
- Turn off water supply.
- Drain water from the water inlet line and pump.
- Add 1 quart of RV antifreeze to the tub and run a short cycle to circulate.

## TROUBLESHOOTING

Before calling for service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Door not closed properly; Power issue; Cycle not selected.	Ensure door is latched; Check circuit breaker; Select a cycle and press Start.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add more detergent; Clean filters.
Dishwasher not draining	Clogged drain hose; Clogged air gap; Food disposer plug.	Check and clear drain hose; Clean air gap; Remove plug from disposer if new installation.
Excessive noise	Dishes rattling; Foreign object in pump; Motor issue.	Rearrange dishes; Inspect pump area for debris; Contact service if motor noise persists.
Water leaks	Improper installation; Damaged door gasket; Loose hose connections.	Check connections; Inspect and replace gasket if damaged; Ensure proper leveling.

If the problem persists after attempting these solutions, please contact Dacor customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Dacor
Model Number	DDW24G9000APDA
Product Dimensions	34 x 25.5 x 26 inches (H x W x D)
Item Weight	104 Pounds
Installation Type	Built-In, Panel Ready
Noise Level	Library Level Quiet
Special Features	StormWash+ with AutoRelease, Connectivity & Convenience

Feature	Detail
UPC	887276819853

## WARRANTY AND SUPPORT

Dacor provides comprehensive support for your appliance. For detailed warranty information, please refer to the warranty card included with your product or visit the official Dacor website.


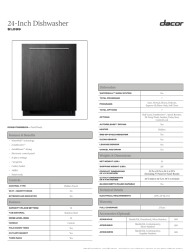 

### Customer Service:

 


For technical assistance, parts, or service inquiries, please contact Dacor Customer Service:

- **Website:** [www.dacor.com/support](http://www.dacor.com/support)
- **Phone:** Refer to your regional Dacor support contact number (usually found on the warranty card or website).

When contacting support, please have your model number (DDW24G9000APDA) and serial number ready.

### Related Documents - DDW24G9000APDA

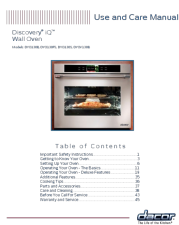	<p><a href="#">Dacor 24" Dishwasher Installation Guide</a></p> <p>This guide provides step-by-step instructions for the installation and mounting of the Dacor 24" dishwasher, including panel installation and adjustments.</p>
	<p><a href="#">Dacor 24-Inch Panel Ready Dishwasher DDW24T999BB/DA - Features, Specs, Dimensions</a></p> <p>Explore the Dacor 24-inch panel-ready dishwasher (model DDW24T999BB/DA). Discover features like WaterWall™ technology, ZoneBooster™, AutoRelease™ drying, 14 place settings, 44dBA quiet operation, and detailed dimensions for installation. Includes technical specifications, warranty, and optional accessories.</p>
	<p><a href="#">Dacor Technical Manual: Appliance Service, Troubleshooting, and Warranty Information</a></p> <p>Comprehensive technical manual for Dacor appliances, including detailed information on product warranties, model and serial number designations, troubleshooting guides, failure codes, service policies, and technical diagrams for ovens, ranges, cooktops, and more.</p>

	<p><a href="#">Dacor Discovery iQ Wall Oven Use and Care Manual</a></p> <p>Comprehensive Use and Care Manual for the Dacor Discovery iQ Wall Oven, detailing safety, operation, features, maintenance, and troubleshooting for models like DYO130B, DYO130FS, DYO130S, and DYOV130B.</p>
	<p><a href="#">Dacor DDWF24S Built-In Dishwasher: Use and Care Manual</a></p> <p>Comprehensive use and care manual for the Dacor DDWF24S built-in dishwasher, covering safety instructions, loading, operation, maintenance, troubleshooting, and warranty information.</p>
	<p><a href="#">Dacor 30-Inch Dishwasher Installation Instructions (Models ED30, ID30)</a></p> <p>Comprehensive installation guide for Dacor 30-inch dishwashers, models ED30 and ID30. Includes safety precautions, product specifications, and step-by-step setup instructions.</p>