

Manuals.plus /

› Apple /

› Apple USB-C to SD Card Reader (Model MW653AM/A) Instruction Manual

## Apple MW653AM/A

# Apple USB-C to SD Card Reader Instruction Manual

Model: MW653AM/A

[Overview](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty and  
Support](#)

## 1. PRODUCT OVERVIEW

The Apple USB-C to SD Card Reader is designed for transferring high-resolution photos and videos from an SD card to your USB-C enabled Mac, iPad, or iPhone. It supports UHS-II speeds for fast data transfer and is backward compatible with other SD cards and adapters. Its design ensures it does not obstruct adjacent ports on your device.

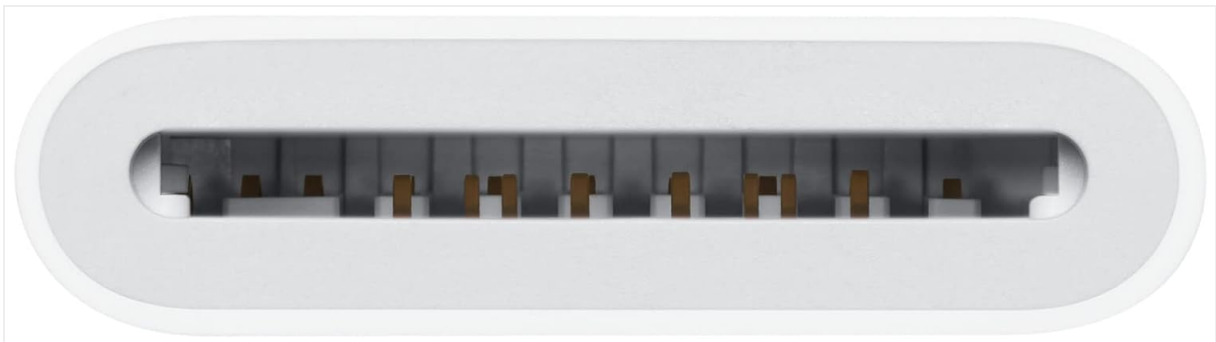


Image 1.1: The Apple USB-C to SD Card Reader. This device facilitates direct data transfer from SD cards to compatible Apple devices.

## 2. SETUP

To begin using your Apple USB-C to SD Card Reader, follow these steps:

1. **Connect the Reader:** Insert the USB-C connector of the card reader into an available USB-C port on your Mac, iPad, or iPhone. Ensure the connection is secure.



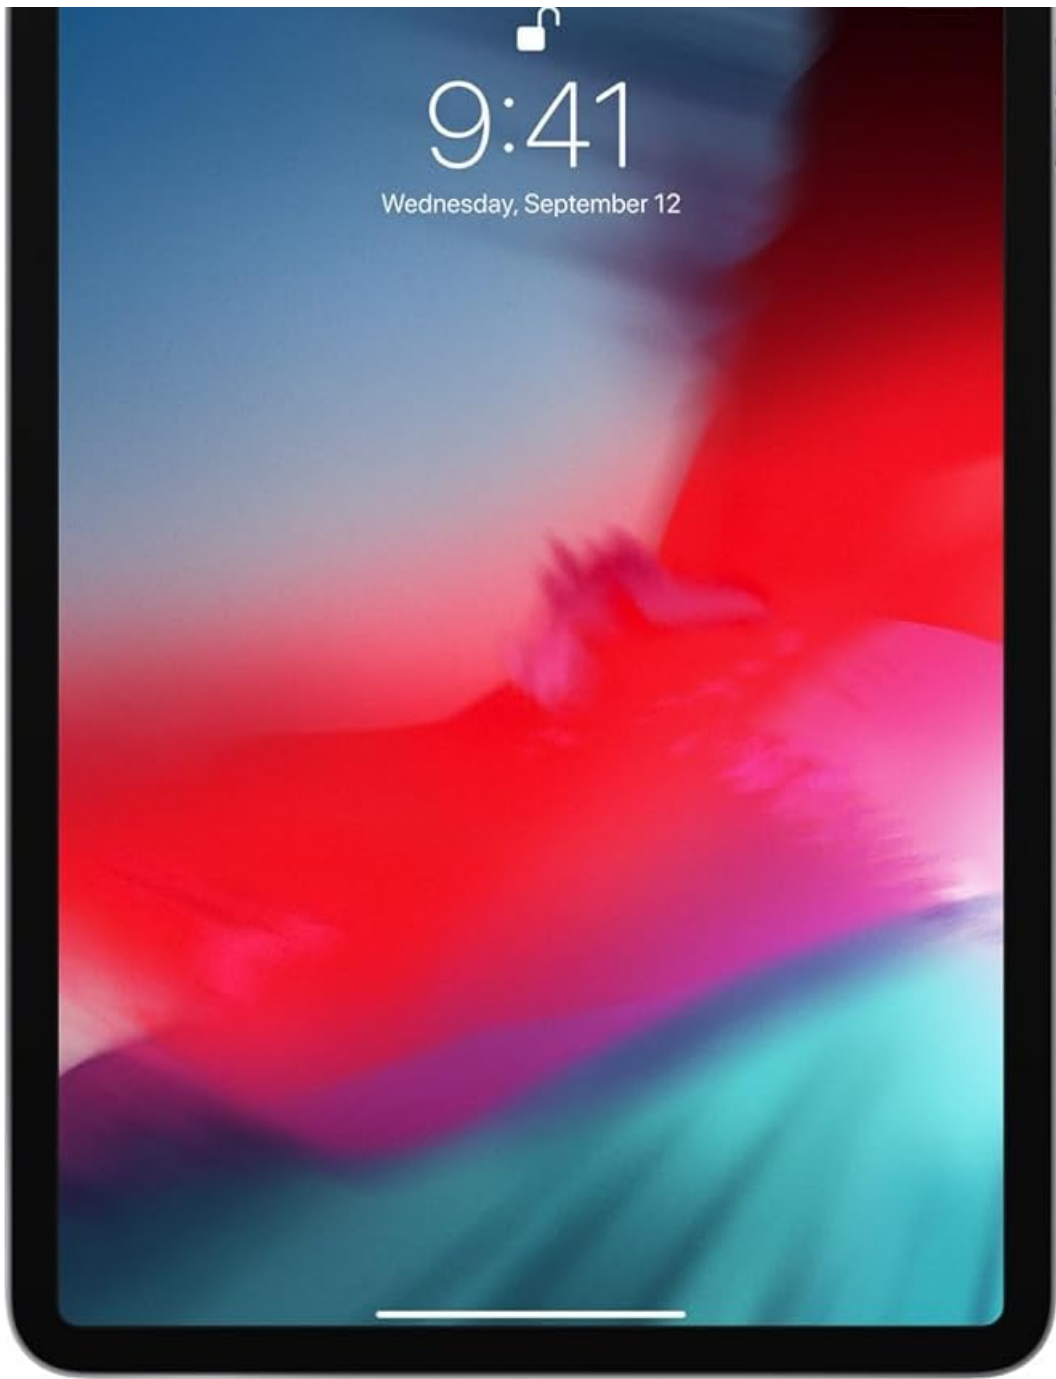




Image 2.1: The USB-C to SD Card Reader connected to an iPad. The reader is designed to integrate seamlessly with your device.



Image 2.2: The USB-C to SD Card Reader connected to a MacBook Air. The compact design ensures it does not block other ports.

2. **Prepare Your SD Card:** Ensure your SD card is clean and free of debris. Note the orientation of the SD card for proper insertion.

### 3. OPERATING INSTRUCTIONS

---

Once the reader is connected, you can proceed with data transfer:

1. **Insert the SD Card:** Carefully insert your SD card into the slot on the card reader. Push the card in firmly until it clicks into place and is fully seated. Refer to the diagram on the reader for correct orientation.



Image 3.1: Close-up view of the SD card slot. Ensure the card is inserted with the correct orientation and fully seated.

## 2. Access Files:

- **On Mac:** The SD card will appear as a removable drive on your desktop or in Finder under 'Locations'. You can then drag and drop files or use photo management applications.
- **On iPad/iPhone:** Open the 'Files' app. The SD card will appear under 'Locations'. You can browse, import, and manage your photos and videos directly from the card.



Image 3.2: The USB-C to SD Card Reader connected to a MacBook Pro, ready for file transfer.

3. **Eject Safely:** Before removing the SD card or the reader, always safely eject the storage device from your operating system to prevent data corruption.

## 4. MAINTENANCE

---

To ensure the longevity and optimal performance of your card reader:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the exterior of the reader. Avoid using abrasive cleaners or solvents. Do not allow moisture to enter any openings.
- **Storage:** Store the card reader in a cool, dry place away from direct sunlight and extreme temperatures. Protect the USB-C connector and SD card slot from dust and physical damage when not in use.
- **Handling:** Avoid bending or twisting the cable. Do not force the SD card or USB-C connector into place.

## 5. TROUBLESHOOTING

---

If you encounter issues with your Apple USB-C to SD Card Reader, consider the following:

- **Card Not Recognized:**
  - Ensure the SD card is fully inserted into the reader. Some cards may require a firm push to seat correctly.
  - Try inserting a different SD card to rule out an issue with the card itself.
  - Ensure your device's operating system is up to date.
  - Try connecting the reader to a different USB-C port or a different compatible device.
- **Slow Transfer Speeds:**
  - While the reader supports UHS-II speeds, actual transfer rates depend on the SD card's speed class and the host device's capabilities. Ensure you are using a high-speed SD card for optimal performance.
  - Avoid running multiple demanding applications during large file transfers.
- **Files Not Appearing:**
  - On Mac, check Finder's 'Locations' sidebar.
  - On iPad/iPhone, ensure you are looking in the 'Files' app under 'Locations'.
  - Verify that the files on the SD card are not corrupted or hidden.
- **Intermittent Disconnection:**
  - Ensure the USB-C connection to your device is stable and not loose.
  - Avoid moving the device or reader during data transfer.

## 6. TECHNICAL SPECIFICATIONS

---

Feature	Detail
Product Dimensions	6.14 x 2.64 x 0.71 inches
Item Weight	1.41 ounces
Manufacturer	Apple
ASIN	B0D7FSCFPM
Item Model Number	MW653AM/A
Media Type	SD Card (UHS-II compatible, backward compatible)
Connectivity Technology	USB Type C
Special Feature	Compact design
Color	White

## 7. WARRANTY AND SUPPORT

---

This Apple USB-C to SD Card Reader is covered by Apple's standard limited warranty. For detailed warranty information, terms, and conditions, please refer to the official Apple website or the documentation included with your original purchase.

For technical assistance, product support, or service inquiries, please visit the official Apple Support website or contact Apple customer service directly. You can find support resources, FAQs, and contact options at [support.apple.com](https://support.apple.com).