

[Manuals.plus](#) /

› [FLEXISPOT](#) /

› FLEXISPOT XC6 Recliner Chair User Manual

FLEXISPOT XC6

FLEXISPOT XC6 Recliner Chair User Manual

Model: XC6

1. INTRODUCTION

Thank you for choosing the FLEXISPOT XC6 Recliner Chair. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new recliner. Please read this manual thoroughly before use and retain it for future reference.

The FLEXISPOT XC6 is designed for comfort and versatility, featuring a 360° swivel, rocking function, reclining backrest, and an integrated footrest. It also includes a convenient storage pouch.



Image 1.1: The FLEXISPOT XC6 Recliner Chair, showcasing its design and presence in a modern living space.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Do not exceed the maximum weight capacity of 150 kg (330 lbs).
- Ensure the recliner is placed on a stable, level surface. Using a mat underneath can enhance stability.
- Operate the tilt and swing functions carefully. Avoid sudden movements.
- Keep children and pets away from moving parts of the recliner, especially during operation. Monitor children closely if they are using the chair.
- Do not stand on the recliner or use it as a step stool.
- Avoid placing fingers or other body parts near the reclining mechanism to prevent pinching.
- Regularly inspect all bolts and fasteners to ensure they are tight. Retighten as necessary.
- Keep the recliner away from open flames, heat sources, and direct sunlight to prevent material

damage.

3. SETUP AND ASSEMBLY

The FLEXISPOT XC6 Recliner Chair requires assembly. Please follow the instructions provided in the separate assembly guide included with your product. Ensure all components are present before beginning assembly.

3.1 Pre-Assembly Checklist

1. Unpack all components and verify against the parts list in the assembly guide.
2. Ensure you have the necessary tools (usually an Allen wrench, often included).
3. Clear a spacious area for assembly to prevent damage to the chair or your surroundings.

3.2 Assembly Tips

- It is recommended to have two people for assembly.
- Do not fully tighten all bolts until the entire chair is assembled to allow for minor adjustments.
- Place the chair on a soft surface (e.g., carpet) during assembly to protect the fabric and floor.

145° Liegeposition

Komfortabel Sitzen Oder Liegen



Image 3.1: Dimensional diagram of the recliner, useful for planning placement and understanding its size during assembly.

4. OPERATING INSTRUCTIONS

4.1 Reclining Function

To recline the chair, locate the manual lever, typically on the side of the chair. Pull the lever to release the footrest and lean back gently to achieve your desired reclining angle, up to 145°. To return to the upright position, push the footrest down with your legs and lean forward, allowing the backrest to return to its original position.

MANUAL RELINER, SIMPLE OPERATION STORAGE BOX GREAT CONVENIENCE



Image 4.1: The manual recliner lever and the convenient storage box located under the seat cushion.

4.2 Swivel and Rocking Function

The FLEXISPOT XC6 features a 360° swivel base, allowing you to rotate freely without moving the entire chair. The chair also has a gentle rocking motion. Ensure the chair is on a stable surface for optimal and safe use of these functions.

360° Drehbar, Uneingeschränkte Bewegung Auf-Ab-Wippen, Besseres Vergnügen



Image 4.2: The recliner showcasing its 360-degree swivel capability and rocking feature.

4.3 Integrated Storage

A convenient storage area is located under the seat cushion. Lift the seat cushion to access this space, ideal for storing remote controls, magazines, or other small items.

5. MAINTENANCE AND CARE

5.1 Cleaning the Fabric

- **Regular Cleaning:** Vacuum the fabric regularly using an upholstery attachment to remove dust and loose debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain. For stubborn stains, use a mild fabric cleaner specifically designed for upholstery. Test the cleaner on an inconspicuous area first.
- **Avoid Harsh Chemicals:** Do not use harsh detergents, bleach, or abrasive cleaners, as these can damage the fabric.

Natürliches Material

Spürbarer Komfort



Image 5.1: Close-up view of the skin-friendly linen cover, highlighting its texture and quality.

5.2 Mechanism Care

- Periodically check all screws and bolts and tighten them if necessary to ensure stability and smooth operation.
- Avoid forcing the reclining mechanism. If it feels stiff, check for obstructions.

5.3 General Care

- Keep the chair away from direct sunlight to prevent fading.
- Avoid placing hot items directly on the fabric.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair does not recline smoothly.	Mechanism obstructed or loose fasteners.	Check for any objects blocking the mechanism. Ensure all assembly bolts are tightened.
Chair feels unstable or wobbly.	Loose connections or uneven floor.	Verify all assembly bolts are securely tightened. Ensure the chair is on a flat, level surface.
Swivel or rocking function is stiff.	Debris in the base mechanism or lack of lubrication.	Inspect the base for any obstructions. If accessible, a small amount of silicone-based lubricant may be applied to moving parts (consult manufacturer if unsure).
Footrest does not retract fully.	Obstruction or mechanism issue.	Check for objects under the footrest. Apply firm, even pressure to retract. If problem persists, contact support.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact FLEXISPOT customer support.

7. SPECIFICATIONS

Feature	Detail
Model Name	XC6
Brand	FLEXISPOT
Color	Grey
Material	Fabric (Linen cover), Foam (Fill), Alloy Steel (Frame)
Product Dimensions (D x W x H)	100D x 98W x 107H Centimetres
Item Weight	45 Kilograms
Maximum Weight Recommendation	150 Kilograms (330 lbs)
Reclining Angle	Up to 145°
Swivel	360°
Assembly Required	Yes
Indoor/Outdoor Usage	Indoor

8. WARRANTY INFORMATION

FLEXISPOT products are manufactured to high-quality standards. For specific warranty details regarding your XC6 Recliner Chair, please refer to the warranty card included with your purchase or visit the official FLEXISPOT website. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need troubleshooting support, please contact FLEXISPOT customer service. Contact information can typically be found on the FLEXISPOT website or on the packaging materials.

For the most up-to-date support information, please visit: www.flexispot.com