

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hiicam](#) /

› [Hiicam Speed 60 Action Camera User Manual](#)

Hiicam SPEED 60

Hiicam Speed 60 Action Camera User Manual

Model: SPEED 60

INTRODUCTION

The Hiicam Speed 60 is a versatile action camera designed to capture high-quality video and photos in various environments, including underwater. Featuring 4K 60FPS video recording, 48MP photo capabilities, dual screens, Electronic Image Stabilization (EIS), and HDR, it is built for adventurers. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance.

WHAT'S IN THE Box

- Speed 60 Action Camera x 1
- Remote Control x 1
- Waterproof Case x 1
- 2150 mAh Battery x 2
- Battery Charger x 1
- User Manual x 1
- Useful Accessories (various mounts and straps)



Image: The Hiicam Speed 60 Action Camera along with its comprehensive set of accessories, including the remote control, waterproof case, two batteries, charger, and various mounting options.

PRODUCT OVERVIEW

The Speed 60 features a robust design with intuitive controls and dual screens for versatile shooting.

Key Features:

- Native Waterproof Design:** The camera itself is waterproof up to 33FT (10M) without a case.
- Waterproof Housing:** With the included housing, the camera can be used up to 131FT (40M) underwater.
- Dual Screens:** A 2.35-inch HDR touch screen on the rear and a 1.4-inch front screen for easy selfie framing.
- High Resolution:** Records 4K 60FPS video and captures 48MP HD photos.
- Advanced Stabilization:** Electronic Image Stabilization (EIS) ensures smooth footage.
- Wide Angle & Zoom:** Features a 170° fish-eye lens and 8X digital zoom.

- **5G Wi-Fi Connectivity:** For quick download and sharing of content.
- **Long Battery Life:** Two 2150mAh batteries provide extended recording time.



Image: The Hiicam Speed 60 Action Camera being used underwater by a snorkeler, demonstrating its waterproof capabilities and ability to capture vibrant scenes with HDR recording.

Waterproof Camera Underwater

170°



Bare camera 33FT



Waterproof housing 131FT

Image: A person kitesurfing with the Hiicam Speed 60 Action Camera, illustrating its use in dynamic water sports and highlighting its waterproof design (bare camera 33FT, with housing 131FT).

SETUP

1. Battery Installation and Charging

The camera comes with two 2150mAh Lithium Ion batteries. Ensure they are fully charged before first use.

- Open the battery compartment latch on the side of the camera.
- Insert a battery, ensuring the contacts align correctly.
- Close the latch securely.
- To charge, use the included USB-C cable with the battery charger. The charger can charge both batteries sequentially.



**2150mAh Battery x 2
Large Capacity**

5H Endurance Total

Image: Two 2150mAh large capacity batteries for the Hiicam Speed 60 Action Camera, designed to provide extended recording time. Users can scan the QR code on the battery for warranty activation.

2. Memory Card Installation

A Micro SD card (not included) is required for recording. Use a high-speed card (U3 or higher) for optimal performance, especially for 4K video.

- Locate the Micro SD card slot, usually next to the battery compartment or under a protective flap.
- Insert the Micro SD card with the contacts facing the correct direction until it clicks into place.
- To remove, gently push the card in until it springs out.

3. Waterproof Case Usage

While the camera is natively waterproof to 33FT, the included waterproof housing extends its depth rating to 131FT (40M) and provides additional protection against impacts.

- Before placing the camera in the housing, ensure the housing's seal is clean and free of debris.
- Place the camera carefully into the housing.

- Close the latch securely, ensuring a tight seal.
- Always perform a dry test of the housing without the camera before deep water use.

OPERATING INSTRUCTIONS

1. Power On/Off

- **Power On:** Press and hold the Power/Mode button (usually on the front or side) for a few seconds until the screen lights up.
- **Power Off:** Press and hold the Power/Mode button again until the camera shuts down.

2. Mode Switching

Press the Power/Mode button repeatedly to cycle through different modes such as Video, Photo, Playback, and Settings.

3. Recording and Capturing

- **Start Recording (Video Mode):** Press the Shutter/OK button (usually on top) once. A red indicator light will flash, and a timer will appear on the screen.
- **Stop Recording:** Press the Shutter/OK button again. The indicator light will stop flashing.
- **Take Photo (Photo Mode):** Press the Shutter/OK button once.

4. Playback

- In Playback mode, use the Up/Down buttons or touch screen gestures to navigate through your recorded videos and photos.
- Press the Shutter/OK button to play a video or view a photo in full screen.

5. Wi-Fi Connectivity

The built-in 5G Wi-Fi allows for easy connection to your smartphone for remote control, viewing, downloading, and sharing content.

- Enable Wi-Fi on the camera via the settings menu.
- Download the official Hiicam app on your smartphone.
- Connect your phone to the camera's Wi-Fi network (SSID and password usually displayed on the camera screen).
- Use the app to control the camera, preview footage, and transfer files.

Download and Share Instantly Via Built-in 5G Wifi



Image: The Hiicam Speed 60 Action Camera wirelessly connected to a smartphone, demonstrating its built-in 5G Wi-Fi capability for instant download and sharing of content.

6. EIS Anti-Shake and HDR

These features enhance video quality, especially in dynamic environments.

- **EIS (Electronic Image Stabilization):** Activate EIS in the camera settings to reduce shakiness and achieve smoother video footage, even during intense activities.
- **HDR (High Dynamic Range):** Enable HDR for improved image quality in scenes with both very bright and very dark areas, ensuring better detail in highlights and shadows.

Anti Shake Stabilization

Smooth and steady footage in motion

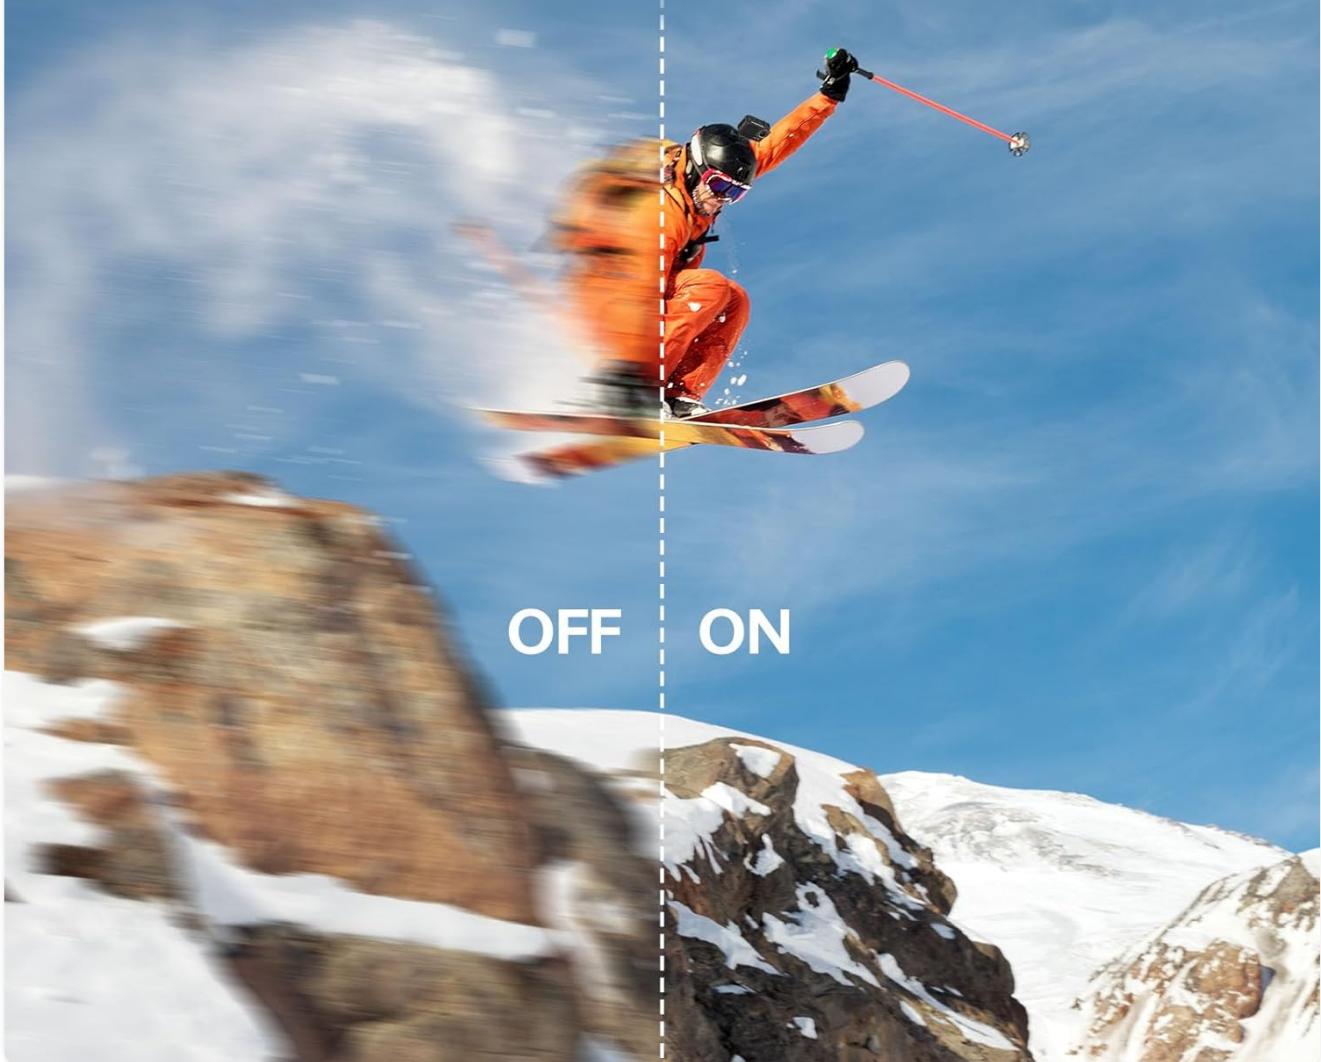


Image: A visual comparison demonstrating the effectiveness of the Hiicam Speed 60's Anti-Shake Stabilization (EIS), showing a blurred image on the left (OFF) and a clear, stable image on the right (ON) during motion.

7. Zoom Function

The camera supports 8X digital zoom.

- While in video or photo mode, use the zoom controls (often on the touch screen or dedicated buttons) to adjust the zoom level.

MAINTENANCE

1. Cleaning

- Use a soft, lint-free cloth to clean the camera body and screens.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- Ensure the waterproof case's O-ring seal is clean and free of sand or debris after each use, especially in saltwater.

2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries if storing for extended periods to prevent leakage.

3. Battery Care

- Charge batteries fully before use.
- Avoid overcharging or completely draining batteries.
- If batteries are not used for a long time, charge them to about 50% every few months.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Camera won't turn on | Low or dead battery; Battery not inserted correctly | Charge battery; Reinsert battery correctly |
| Cannot record video/take photos | No Micro SD card; SD card full or corrupted; SD card speed too low | Insert Micro SD card; Delete files or format card; Use a U3 or higher speed card |
| Footage is shaky | EIS is off; Extreme vibration | Enable EIS in settings; Use a more stable mount |
| Wi-Fi connection issues | Incorrect password; Too far from camera; App issues | Verify password; Move closer to camera; Restart app/camera |
| Camera freezes | Software glitch; SD card issue | Remove and reinsert battery to reset; Try a different SD card |

SPECIFICATIONS

| Feature | Detail |
|---------------------------------|--------------------------------------|
| Model Number | SPEED 60 |
| Video Resolution | Up to 4K 60FPS |
| Photo Resolution | Up to 48MP |
| Waterproof Depth (Bare Machine) | 33FT (10M) |
| Waterproof Depth (With Case) | 131FT (40M) |
| Rear Screen | 2.35-inch HDR Touch Screen |
| Front Screen | 1.4-inch |
| Image Stabilization | EIS (Electronic Image Stabilization) |


| Feature | Detail |
|------------------|---------------------------|
| Zoom | 8X Digital Zoom |
| Lens Angle | 170° Fish-eye |
| Connectivity | 5G Wi-Fi, USB-C |
| Battery Capacity | 2 x 2150mAh Lithium Ion |
| Storage | Micro SD (not included) |
| Dimensions | 1.14 x 2.75 x 1.38 inches |
| Weight | 1.9 pounds |

WARRANTY AND SUPPORT

Hiicam products come with a standard warranty. For specific warranty details and to activate an extended warranty, please refer to the QR code provided on the battery or visit the official Hiicam website. For technical support, troubleshooting assistance, or any inquiries, please contact Hiicam customer service through their official channels. You can also visit the [Hiicam Store on Amazon](#) for more information and product updates.

Related Documents - SPEED 60

| | |
|---|---|
|  <p>SPEED 50 ACTION CAMERA</p> <p>USER MANUAL V20240723</p> | <p>Speed 50 Action Camera User Manual</p> <p>User manual for the Speed 50 Action Camera, covering setup, operation, features, and maintenance.</p> |
|  <p>SPEED 50 ACTION CAMERA</p> <p>USER MANUAL V20240723</p> | <p>Speed 50 Action Camera User Manual</p> <p>Comprehensive user manual for the Speed 50 Action Camera by Hiicam, covering setup, operation, features, maintenance, and app connectivity. Learn how to use your action camera effectively.</p> |
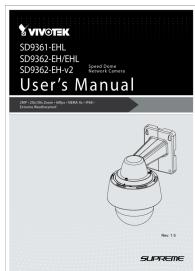
| | |
|--|---|
|  <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p> | <p>Hiicam SPEED 50 Action Camera User Manual</p> <p>Comprehensive user manual for the Hiicam SPEED 50 Action Camera, detailing setup, operation, features, specifications, maintenance, and troubleshooting. Learn how to capture high-quality video and photos.</p> |
|  | <p>Minolta Freedom Action Zoom 60 Instruction Manual</p> <p>Comprehensive instruction manual for the Minolta Freedom Action Zoom 60 camera, covering safety precautions, parts identification, setup, operation, features, and technical specifications.</p> |
|  <p>VIVOTEK SD9361-EHL SD9362-EH/EHL SD9362-EH-v2 Speed Dome Network Camera User's Manual Rev. 1.0 SUPREME</p> | <p>VIVOTEK SD9361/SD9362 Series Speed Dome Network Camera User's Manual</p> <p>Comprehensive user manual for VIVOTEK SD9361-EHL, SD9362-EH/EHL, and SD9362-EH-v2 speed dome network cameras. Learn about installation, configuration, features like 2MP resolution, 20x/30x zoom, 60fps, IP68, NEMA 4x, and extreme weatherproof capabilities for advanced surveillance.</p> |
|  <p>Hunting Camera User Manual</p> | <p>Hawkey Trail Camera User Manual: Features, Settings, and Applications</p> <p>Comprehensive user manual for the Hawkey Trail Camera. Learn about its features, packing list, product structure, quick start guide, advanced settings, technical parameters, and FAQs. This guide covers setup, operation, and troubleshooting for wildlife monitoring and surveillance.</p> |

Documents - Hiicam – SPEED 60



[\[pdf\] Quick Start Guide Specifications Warranty](#)

F03N v4 SPEED60 Video resolutions 4K 60FPS 30FPS 2K 1080P Your action camera is backed by a two year warranty starting from hiicam haiita speed60 2 HiicamFeb 24 2024 . This waterproof to 33FT 10 meters when bare and 131FT 40 installed with case 5 Do not overcharge the Video fromHaiita Speed60Haiita Speed60hiicam 2025 02 Haiita Speed60 |||

[SPEED 60 ACTION CAMERA V20240306 Contents Important Messages -----](#)

----- ... ----- 21 Important Messages Congratulations on your new Haiita **Speed 60** You must be excited to use your new camera, but please spend some time familiarizing yours...

lang:de score:8 filesize: 863.83 K page_count: 25 document date: 2024-04-30