

- Manuals.plus /
- > NBCP /
- > NBCP Wireless Guitar Hero Controller User Manual for PC and PS3 (Model B0D7H3QSVF)

NBCP B0D7H3QSVF

NBCP Wireless Guitar Hero Controller User Manual

Model: B0D7H3QSVF

1. PRODUCT OVERVIEW

The NBCP Wireless Guitar Hero Controller is designed to provide an immersive musical gaming experience on both PC and PlayStation 3 platforms. This controller features a detachable neck, an adjustable strap, and responsive fret buttons for optimal gameplay.



Figure 1: NBCP Wireless Guitar Hero Controller (White Model)

2. PACKAGE CONTENTS

- Wireless Guitar Hero Controller
- USB 2.4G RF Receiver
- Adjustable Guitar Strap

3. SETUP INSTRUCTIONS

3.1 Assembly

1. **Attach the Guitar Neck:** Align the neck of the guitar with the body. Gently slide the neck into the slot until it clicks securely into place. Ensure the connection is firm.
2. **Attach the Guitar Strap:** Locate the strap buttons on the guitar body. Attach one end of the adjustable strap to the button near the base of the guitar and the other end to the button on the upper horn. Adjust the strap length for comfortable playing.

Product Details

Detachable Guitar Neck

Flexible touch-sensitive neck slider, easy to assemble and disassemble, to meet your storage and carrying needs



Adjustable Guitar Strap

Suitable for people of all body types, providing a better gaming experience



Figure 2: Detachable Guitar Neck and Adjustable Strap

3.2 Wireless Connection

The controller uses 2.4G RF wireless technology for connection.

1. **Insert the USB Receiver:** Plug the included USB 2.4G RF receiver into an available USB port on your PC or PlayStation 3 console.
2. **Power On the Guitar:** Turn on the guitar controller. The controller should automatically pair with the USB receiver. An indicator light on the guitar will confirm a successful connection.

2.4G RF Wireless Technology, Fast Response

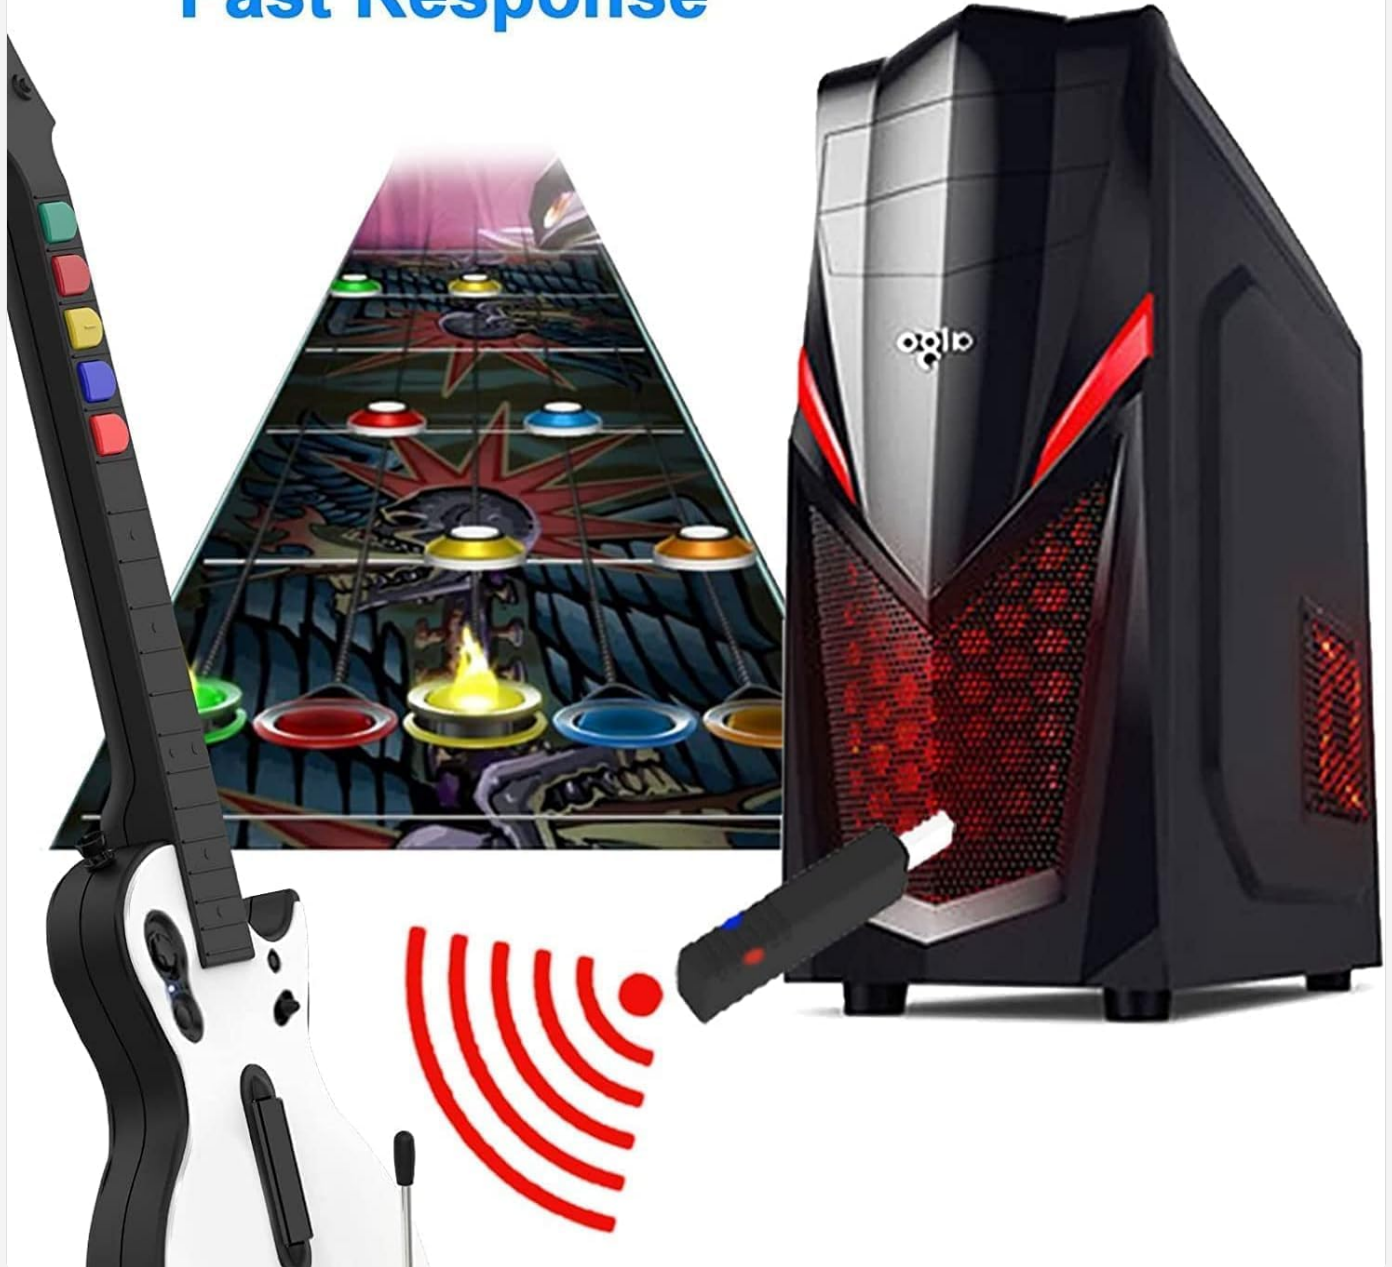 


Figure 3: Wireless Connection via 2.4G RF USB Receiver

4. OPERATING INSTRUCTIONS

4.1 Compatible Games and Platforms

This wireless guitar controller is compatible with the following games and platforms:

- **PC Platform:** Guitar Hero 3, Guitar Hero 3 Legends Of Rock, Guitar Hero World Tour.
- **PS3 Platform:** Guitar Hero 3, Guitar Hero 4, Guitar Hero 5, Rock Band 1, Rock Band 2.

Compatible with PS3 and PC Platforms

Various Guitar Games

PS3/Windows



Figure 4: Compatible Game Titles

4.2 Controller Layout and Functions

Familiarize yourself with the buttons and controls on your guitar controller:

Guitar Hero Controller

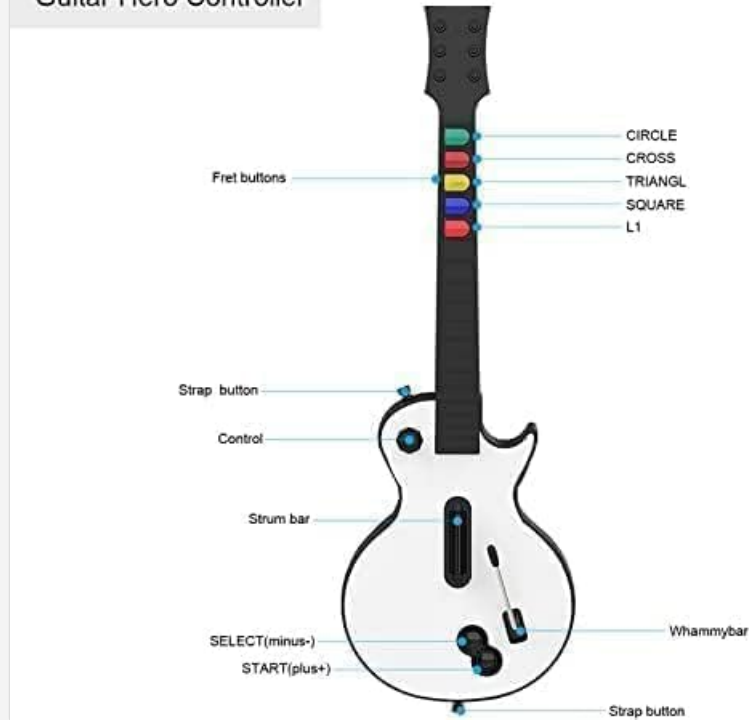 


Figure 5: Guitar Hero Controller Button Layout

- **Fret Buttons:** Located on the neck (Green, Red, Yellow, Blue, Orange). Press these buttons in conjunction with the strum bar to hit notes.
- **Strum Bar:** Located on the body. Strum up or down while holding fret buttons to play notes.
- **Whammy Bar:** Located on the body. Use to bend notes for expressive play.
- **SELECT (minus) / START (plus) Buttons:** For game menu navigation and pausing.
- **Control Stick:** For menu navigation and other in-game actions.



Colorful 5-key design for quick response and better gaming experience

Figure 6: Colorful 5-Key Fret Button Design

4.3 Gameplay Modes

The guitar supports various gameplay modes, including single-player and practice modes. When playing, the colored buttons on the guitar will correspond to rhythmic notes displayed on screen. Incorrect key presses or strums will produce incorrect sounds within the game.



Figure 7: Engaging in Guitar Hero Gameplay

5. MAINTENANCE

To ensure the longevity and optimal performance of your guitar controller, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the surface of the guitar with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Button Contact Points:** If a guitar button becomes unresponsive over prolonged use, it may be due to oxidation of the device's contact points. To resolve this, carefully disassemble the neck (if applicable) and gently wipe the contact points with a small amount of rubbing alcohol on a cotton swab or use a pencil eraser. Ensure the area is completely dry before reassembling.

Sometimes the guitar **BUTTON** doesn't work

Prolonged use or non-use may cause oxidation of the device's contact points and cause disconnection. At this point, you just need to wipe the contact points with alcohol or an eraser, and you can use it normally.

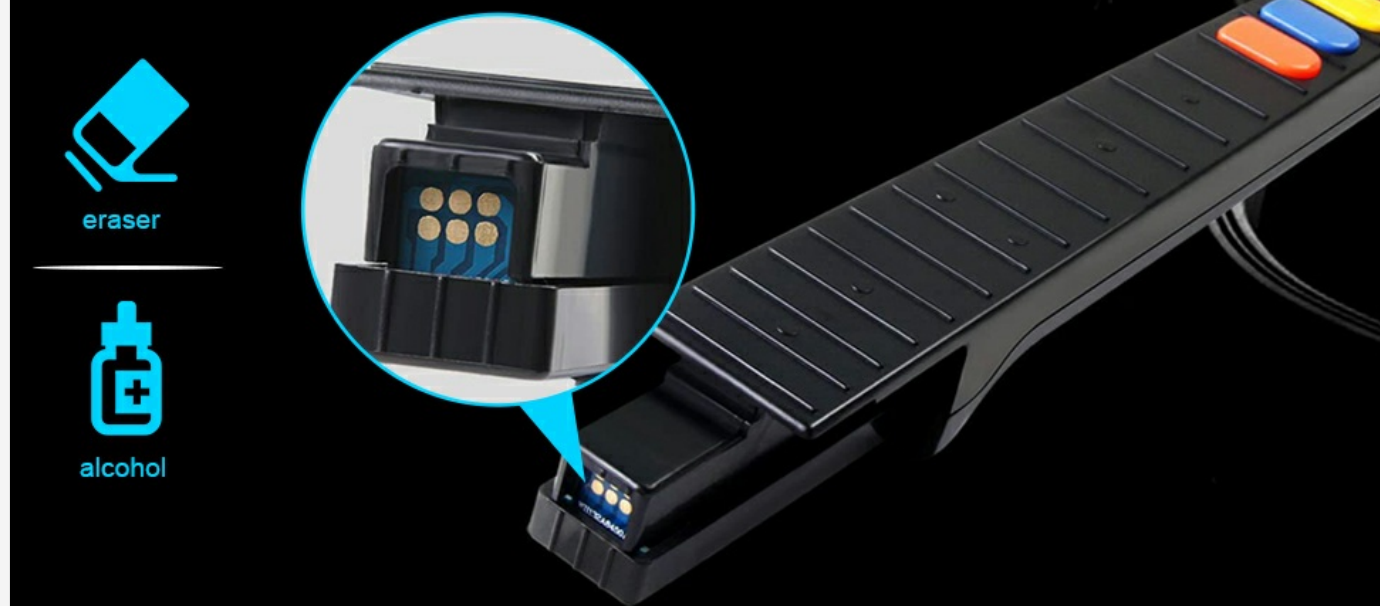 


Figure 8: Cleaning Button Contact Points

- **Storage:** When not in use, store the guitar in a cool, dry place away from direct sunlight and extreme temperatures. The detachable neck allows for easier storage and transport.

6. TROUBLESHOOTING

If you encounter issues with your NBCP Wireless Guitar Hero Controller, please refer to the following common solutions:

- **Controller Not Connecting:**

- Ensure the USB 2.4G RF receiver is securely plugged into a working USB port on your PC or PS3.
- Verify the guitar controller is powered on.
- Try unplugging and re-plugging the USB receiver, then power cycle the guitar controller.
- Confirm that the USB receiver was included in your package. If missing, contact customer support.

- **Buttons Unresponsive:**

- Refer to the Maintenance section (Section 5) for instructions on cleaning button contact points, as oxidation can cause unresponsiveness.
- Ensure the guitar neck is fully and securely attached to the body.

- **PC Specific Issue (Space Bar Clicking):**

- Some PC systems may interpret the guitar's input as a constant space bar press upon connection. It is recommended to configure or program the button mappings within your game (e.g., Clone Hero) **before** plugging in the USB receiver to avoid this behavior.

- **Incorrect Color Received:**

- If you received a different color than ordered, please contact the seller or customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	B0D7H3QSVF
Brand	NBCP
Connectivity	2.4G RF Wireless
Compatible Platforms	PC, PlayStation 3
Parcel Dimensions	44.1 x 34.5 x 8.4 cm
Item Weight	1.38 kg
Manufacturer	NBCP
Country of Origin	China
Release Date	August 14, 2024

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact NBCP customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

© 2024 NBCP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7H3QSVF>

More documents and user manuals: <https://manuals.plus/>