

## MECHEN H1-Pro

# MECHEN H1-Pro Bluetooth MP3 Player WiFi User Manual

Model: H1-Pro

## 1. INTRODUCTION

---

Thank you for choosing the MECHEN H1-Pro Bluetooth MP3 Player with WiFi. This device is designed to provide a versatile and enjoyable audio and video experience. Featuring a 4-inch touchscreen and running on Android 9.0, it supports various applications and connectivity options. This manual provides essential information for setting up, operating, and maintaining your device.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- MECHEN H1-Pro MP3 Player
- USB Cable
- Headphones
- Protective Film
- Protective Case
- User Manual

## Packungsliste

- MECHEN H1 Pro
- USB-Kabel
- Kopfhörer
- Schutzfolie
- Schutzhülle
- Benutzerhandbuch



Image: The MECHEN H1-Pro MP3 Player displayed with its accessories, including a USB cable, headphones, protective film, and a clear protective case.

### 3. DEVICE OVERVIEW

---

Familiarize yourself with the physical components and controls of your MECHEN H1-Pro MP3 Player.

より速く、スムーズに使用できます



Android  
9.0



MTK  
8コア



2GB  
RAM



16GB  
ROM



512GB  
TFカード



4インチタッチスクリーン



Image: Front view of the MECHEN H1-Pro MP3 Player, showcasing its 4-inch touchscreen display.

## 様々なアプリを内蔵

お好みに合わせて、Google playストアでアプリをダウンロードできます。



Image: Side view of the MECHEN H1-Pro MP3 Player, highlighting the power button and volume controls.

# 各種の音楽ファイルに対応



Image: Top and bottom views of the MECHEN H1-Pro MP3 Player, illustrating the USB-C charging port, headphone jack, and Micro SD card slot.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge the device. Connect the provided USB cable to the player's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

### 4.2 Power On/Off

- **To Power On:** Press and hold the Power button on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off menu appears on the screen. Select 'Power Off' to shut down the device.

### 4.3 Connecting to Wi-Fi

To access online features and download apps, connect your device to a Wi-Fi network.

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.

3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.



Image: The MECHEN H1-Pro MP3 Player screen showing Wi-Fi settings and available networks.

#### 4.4 Inserting a Micro SD Card

The device supports Micro SD cards for expanded storage. Locate the Micro SD card slot on the side of the device. Gently insert the card with the gold contacts facing down until it clicks into place.

### 5. OPERATING INSTRUCTIONS

---

#### 5.1 Basic Navigation (Touchscreen)

The MECHEN H1-Pro features a responsive 4-inch touchscreen. Use standard touch gestures:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through lists or switch between screens.
- **Pinch:** To zoom in or out (in supported applications).

#### 5.2 Music Playback

The device supports various audio formats including MP3, WAV, WMA, APE, OGG, and FLAC for high-fidelity music playback.

1. Open the **Music** application.
2. Browse your music library by artist, album, song, or playlist.
3. Tap on a song to begin playback.
4. Use the on-screen controls for play/pause, skip tracks, and volume adjustment.



Image: The MECHEN H1-Pro MP3 Player screen showing a music playback interface with album art and controls.

### 5.3 Video Playback

Enjoy 720P/1080P full-format HD video playback without conversion. Supported formats include RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS, etc.

1. Open the **Video Player** application.
2. Select a video file from your storage.
3. Tap to play. Use on-screen controls for playback options.



Image: The MECHEN H1-Pro MP3 Player screen showing a video playing in full-screen mode.

### 5.4 Bluetooth Connectivity

Connect to Bluetooth headphones, speakers, or other compatible devices.

1. Go to **Settings** > **Connected devices** > **Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth accessory is in pairing mode.
4. Select the accessory from the list of available devices to pair.

**大容量バッテリー**  
長時間外出でも安心です

**2000mAh**

50時間  
音楽

8時間  
動画



Image: The MECHEN H1-Pro MP3 Player shown alongside a pair of wireless headphones, indicating Bluetooth connectivity.

## 5.5 Wi-Fi Connectivity & App Downloads

With Android 9.0 and Wi-Fi, you can download and install various applications from the Google Play Store.

1. Ensure the device is connected to Wi-Fi (see Section 4.3).
2. Open the **Play Store** application.
3. Sign in with your Google account.
4. Search for and download desired applications (e.g., Spotify, Amazon Music, Audible).



Image: The MECHEN H1-Pro MP3 Player screen showing a variety of installed applications, including music streaming services and web browsers.

## 5.6 FM Radio

Listen to your favorite FM radio stations.

1. Connect wired headphones to the 3.5mm audio jack; they act as the antenna.
2. Open the **FM Radio** application.
3. Use the on-screen controls to scan for stations or tune manually.

## 5.7 File Management

Use the built-in file manager to organize your files on internal storage and the Micro SD card.

1. Open the **File Manager** application.
2. Navigate through folders to view, copy, move, or delete files.

## 6. MAINTENANCE

---

### 6.1 Cleaning

Wipe the device with a soft, dry, lint-free cloth. Do not use liquid cleaners or abrasive materials.

### 6.2 Storage

Store the device in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

### 6.3 Battery Care

To maximize battery life, avoid fully discharging the battery frequently. Use the original charging cable for optimal performance.

## 7. TROUBLESHOOTING

---

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a charger for at least 30 minutes. If unresponsive, perform a hard reset by holding the power button for 10-15 seconds.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled. Verify the Wi-Fi password. Restart your router and the MP3 player.
Bluetooth device not pairing.	Ensure Bluetooth is enabled on both devices and the accessory is in pairing mode. Move devices closer together.
Apps are slow or crashing.	Close unnecessary background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear Cache). Restart the device. Too many apps can lead to slowdowns.
No sound from headphones.	Check headphone connection. Ensure volume is not muted or too low. Test with different headphones.

## 8. SPECIFICATIONS

Feature	Detail
Brand	MECHEN
Model Name	H1-Pro (EU-H11)
Operating System	Android 9.0
Processor	MTK 8-core
RAM	2 GB
Internal Storage	16 GB
Expandable Storage	Micro SD (up to 512GB)
Screen Size	4 inches
Screen Technology	LCD
Connectivity	Bluetooth, USB, Wi-Fi
Special Features	FM Radio, Equalizer, Video Playback
Supported Audio Formats	MP3, WAV, WMA, APE, OGG, FLAC
Supported Video Formats	RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS, etc.
Battery Capacity	2000 mAh
Battery Life (Music)	Up to 50 hours

Feature	Detail
Battery Life (Video)	Up to 8 hours
Dimensions (D x W x H)	10.5 x 6.2 x 1.2 cm (4.14 x 2.44 x 0.46 inches)
Item Weight	97.5 grams (3.45 oz)



Image: The MECHEN H1-Pro MP3 Player shown with its physical dimensions and weight specifications.

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your package or visit the official MECHEN website. Keep your purchase receipt as proof of purchase for warranty claims.