

LOUTOC URMT26CND002

LOUTOC Replacement Remote Control for Philips Smart Android/Google TVs

Model: URMT26CND002

INTRODUCTION

This instruction manual provides essential information for the setup, operation, and maintenance of your LOUTOC Replacement Remote Control, model URMT26CND002. This remote is designed as a universal replacement for various Philips Android and Google Smart TV models. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery installation for the LOUTOC remote control.

2. Initial Use

This LOUTOC remote control is pre-programmed and designed to work immediately with compatible Philips Smart TVs. No additional setup or pairing is required. Simply install the batteries, point the remote at your TV, and begin use.



Figure 2: Key features including no setup required and fast response time.

OPERATING INSTRUCTIONS

The LOUTOC remote control features a standard layout for easy navigation and control of your Philips Smart TV. Below is a detailed description of each button's function.



Figure 3: LOUTOC Remote Control Button Layout and Functions.

- **POWER**: Turns the TV on or off. Press for less than 1 second for Quick Start Standby. Hold for 1 second or more for Low Power Standby.
- **GUIDE**: Displays the TV program guide (availability may vary by service provider and region).
- **HOME**: Accesses your apps, Live TV, input devices, settings, and the Google Play Store.
- **OPTIONS**: Provides quick access to TV settings (settings vary depending on active screen).
- **CURSOR (Up, Down, Left, Right) & OK**: Moves to select an item and confirms selections on the menu.
- **BACK**: Returns to the previous screen.
- **CC (Closed Caption)**: Selects closed caption settings.
- **DASHBOARD**: Accesses the Google TV dashboard for user settings, notifications, and kids mode.
- **INPUT**: Selects the input source for connected devices.
- **MUTE**: Toggles the sound on and off.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Selects the next or previous channel.
- **COLOR BUTTONS (Red, Green, Yellow, Blue)**: Works as direct access to user-specified net apps or functions.

Shortcut Buttons

The remote includes dedicated shortcut buttons for popular streaming services:

- **NETFLIX**
- **YouTube**
- **Google Play**
- **Tubi**



Figure 4: Dedicated streaming service shortcut buttons.

COMPATIBILITY

This LOUTOC remote control is compatible with a wide range of Philips Android and Google Smart TV models. It is designed to replace various original Philips remote controls.

Compatible Philips Google TV Models:

- 70PUL7553/F7, 75PUL7552/F7, 65PUL7552/F7, 55PUL7552/F7, 50PUL7552/F7
- 43PUL7672/F7, 43PUL7652/F7, 65PUL7672/F7, 55PUL7672/F7, 50PUL7672/F7
- Generally compatible with Philips Google TV 7000 and 7600 Series.

Compatible Philips Android TV Models:

- 65PFL5766/F7, 55PFL5766/F7, 50PFL5766/F7, 43PFL5766/F7, 50PFL5806/F7

- 75PFL5604/F7, 75PFL5604/F7A, 75PFL5604/F7E, 75PFL5704/F7A, 75PFL5704/F7
- 32PFL5505/F7, 65PFL5604/F7, 55PFL5604/F7, 50PFL5604/F7, 43PFL5604/F7
- 50PFL5604/F7A, 43PFL5766/F6, 50PFL5766/F6, 65PFL5766/F6, 55PFL5766/F6
- 55PFL5704/F7, 65PFL5704/F7, 50PFL5704/F7, 43PFL5704/F7, 65PFL5504/F7
- 65PFL5604/F7A, 55PFL5604/F7A, 55PFL5766/F7E
- Generally compatible with Philips Android TV 5000, 5500, 5700, 5704, and 5800 Series.



Figure 5: Compatibility with Philips Google TV and Android TV series.

SPECIFICATIONS

Feature	Detail
Model Number	URMT26CND002
Dimensions	6 x 1.2 x 0.8 inches (15.24 x 3.05 x 2.03 cm)
Item Weight	1.76 ounces (50 grams)
Batteries Required	2 x AAA batteries (not included)

Transmission Distance	Approximately 6-8 meters (19-26 feet)
Response Time	Within 0.5 seconds
Material	Premium ABS Material
Special Features	Ergonomic, Lightweight, No Programming Required, Pre-Programmed, Universal

TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the TV's infrared receiver.
- Ensure you are within the effective operating range (6-8 meters) of the TV.

- **Specific buttons not working:**

- Verify that the button is clean and not stuck.
- Some functions may be specific to certain TV models or require the TV to be in a particular mode (e.g., input selection).

- **No Voice Control:**

- This remote control does not support voice control functionality.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

WARRANTY AND SUPPORT

LOUTOC offers a 60-day replacement policy for this product. If you encounter any issues or have questions regarding your order, please contact LOUTOC customer support directly. Our team aims to respond within 12 hours during the work week to assist you.

For further assistance, please refer to the contact information provided with your purchase or visit the official LOUTOC store on Amazon: [LOUTOC Store](#)

