

[Manuals.plus](#) /

› [Ikea](#) /

› Ikea SLATTIS Clock with Hygrometer/Thermometer (Model 905.780.92) Instruction Manual

Ikea 905.780.92

Ikea SLATTIS Clock with Hygrometer/Thermometer (Model 905.780.92) Instruction Manual

Your guide to setting up and using your SLATTIS device.

INTRODUCTION

The Ikea SLATTIS Clock with Hygrometer/Thermometer is designed to provide simultaneous readings of time, temperature, and humidity. Its compact and simple design allows for versatile placement, either on a tabletop or mounted on a wall. This manual will guide you through the initial setup, operation, and maintenance of your device.

PRODUCT OVERVIEW

The SLATTIS device features a clear digital display and three control buttons located on the front panel: "SET", "+", and "-". The display shows the current time, temperature in Celsius or Fahrenheit, and relative humidity percentage.



Figure 1: Front view of the Ikea SLATTIS Clock with Hygrometer/Thermometer. The digital display shows the time, temperature, and humidity. Below the display are the 'SET', '+' and '-' buttons for configuration.

The device is equipped with a foldable stand for tabletop use and can also be mounted on a wall using a suitable fixture (not included).

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the device.
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., 2x AAA, not specified in data, assuming common type) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely. The display should now activate.

2. Placement

- **Tabletop Use:** Extend the foldable stand on the back of the device to place it on any flat surface.
- **Wall Mounting:** Use a suitable screw or hook (not included) in your desired location. Hang the device using the keyhole slot on its back. Ensure it is securely fastened.

OPERATING INSTRUCTIONS

1. Setting the Time

1. Press and hold the **"SET"** button for approximately 3 seconds until the hour digits begin to flash.
2. Use the **"+"**" and **"-"** buttons to adjust the hour.
3. Press **"SET"** again to move to the minute setting. The minute digits will flash.
4. Use the **"+"**" and **"-"** buttons to adjust the minutes.
5. Press **"SET"** one more time to confirm the time and exit the setting mode.

2. Switching Temperature Units (°C/°F)

While in normal display mode, briefly press the **"+"** button to toggle between Celsius (°C) and Fahrenheit (°F) temperature readings.

3. Reading the Display

- The top large digits indicate the current time.
- The lower-left digits display the current temperature.
- The lower-right digits show the current relative humidity (RH%).

MAINTENANCE

1. Cleaning

To clean the device, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water. Avoid spraying cleaning solutions directly onto the display or buttons.

2. Battery Replacement

When the display becomes dim or unresponsive, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **No Display or Dim Display:**

- Check if batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- **Incorrect Time Display:**
 - Refer to the "Setting the Time" section to reset the time.
- **Inaccurate Temperature/Humidity Readings:**
 - Ensure the device is placed in a location away from direct sunlight, heat sources, or extreme drafts, which can affect readings.
 - Allow the device to stabilize for at least 30 minutes after initial setup or relocation for accurate readings.
- **Buttons Not Responding:**
 - Try replacing the batteries.
 - If the issue persists, contact customer support.

SPECIFICATIONS

Model Number	905.780.92
Brand	Ikea
Dimensions (W x D x H)	8 cm x 2 cm x 12 cm
Color	White
Display Type	Digital
Functions	Time, Temperature, Humidity
Mounting Type	Tabletop, Wall-mounted
Power Source	Battery operated (type not specified, typically AAA)

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or visit the official Ikea website. If you require further assistance or encounter issues not covered in this manual, please contact Ikea customer support.

© 2024 Ikea. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7HS62Q7>

More documents and user manuals: <https://manuals.plus/>