

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VGR](#) /

› [VGR V-332 Cordless Rechargeable Electric Shaver User Manual](#)

## VGR V-332

# VGR V-332 Cordless Rechargeable Electric Shaver User Manual

Model: V-332 | Brand: VGR

## INTRODUCTION

---

Thank you for choosing the VGR V-332 Electric Shaver. This manual provides essential information for the safe and effective use, maintenance, and care of your new shaver. Please read it thoroughly before first use and keep it for future reference.

## SAFETY INSTRUCTIONS

---

- Do not use the shaver while it is charging.
- Keep the device away from water.
- Always unplug the shaver before cleaning.
- Exercise caution to avoid cuts from the blades.
- Always follow the instructions for proper use and care to ensure safety and optimal performance.

## SETUP

---

### 1. Initial Charging

Before using your VGR V-332 shaver for the first time, ensure it is fully charged. Connect the provided USB charging cable to the shaver and a suitable USB power adapter (not included). The LED display will indicate the charging status and remaining battery percentage. A full charge takes approximately 2 hours and provides up to 150 minutes of operating time.



Image: The VGR V-332 shaver highlighting its battery capacity, charge time, and operating duration on the LED display.

## 2. Attaching/Detaching Shaver Head

The shaver head is detachable for easy cleaning and replacement. To detach, gently pull the head upwards. To attach, align the head with the shaver body and press down until it clicks into place.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Press the power button located on the front of the shaver to turn it on or off. The LED display will illuminate, showing the current power level and RPM.

### 2. Shaving Techniques (Wet & Dry)

The VGR V-332 supports both wet and dry shaving. For a dry shave, ensure your skin is clean and dry. For a wet shave, apply shaving foam or gel to your face and neck. Hold the shaver at a right angle to your skin and move it in short, circular motions against the direction of hair growth. The dual-foil system with 3 shaving elements adapts to facial contours for a close shave.



Image: A man demonstrating the use of the VGR V-332 shaver for facial hair removal.

### **3. Using the Pop-up Trimmer**

To activate the pop-up trimmer, slide the switch located on the side of the shaver upwards. This trimmer is ideal for precise grooming of sideburns, moustaches, and detailing around the beard. After use, push the switch back down to retract the trimmer.



Image: Detailed view of the pop-up trimmer and its applications for various grooming needs.

#### 4. Speed Settings

The shaver features multiple speed settings (6500-7500 RPM) to customize your shaving experience. Use the '+' and '-' buttons on the front panel to adjust the motor speed according to your preference and hair type.



Image: An overview of the VGR V-332 shaver's key features, including its adjustable speed settings.

## MAINTENANCE AND CLEANING

### 1. Daily Cleaning

For optimal performance, clean your shaver after each use. Ensure the shaver is turned off and unplugged. Detach the shaver head and rinse it under running tap water. You can also use the provided cleaning brush to remove any trapped hair from the blades and foils. Allow the head to air dry completely before reattaching or storing.

### 2. Deep Cleaning

Periodically, perform a deeper clean. After rinsing, you may use a mild soap solution to clean the shaver head. Rinse thoroughly and ensure no soap residue remains. Lubricate the blades with a drop of shaver oil (if provided) to maintain their sharpness and smooth operation.



Image: The VGR V-332 shaver displayed with its cleaning accessories, including a brush and oil.

### 3. Blade and Foil Replacement

For continued optimal shaving performance, it is recommended to replace the shaver head (blades and foils) every 12-18 months, depending on usage. Replacement heads can be purchased from authorized VGR retailers.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 2 hours.
Poor shaving performance.	Blades/foils are dull or clogged with hair.	Clean the shaver head thoroughly. Consider replacing the shaver head if it's old.
Shaver pulls hair.	Blades are dull or shaver is not fully charged.	Ensure shaver is fully charged. Replace shaver head if necessary.

Problem	Possible Cause	Solution
LED display not working.	Device malfunction.	Contact customer support.

## SPECIFICATIONS

---

- **Model:** V-332
- **Power Source:** Battery Powered (Lithium-ion)
- **Battery Capacity:** 1200 mAh
- **Charging Time:** Approximately 2 hours
- **Operating Time:** Up to 150 minutes
- **Motor Speed:** 6500-7500 RPM (adjustable)
- **Shaving System:** Dual-foil with 3 shaving elements
- **Features:** Wet & Dry Shave, Detachable Head, Pop-up Trimmer, Portable, LED Digital Display
- **Blade Material:** Stainless Steel
- **Color:** Gold
- **Product Dimensions:** 19.6 x 13 x 7.5 cm
- **Item Weight:** 570 grams
- **Included Components:** Electric Shaver, Beard Trimmer, Extra Replacement Shaver Head, USB Charging Cable, Protective Cover, Cleaning Brush, Travel Bag, User Manual

## WARRANTY INFORMATION

---

This VGR V-332 Electric Shaver comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

---

For any questions, technical assistance, or warranty inquiries regarding your VGR V-332 Electric Shaver, please contact VGR customer support through their official website or the contact information provided in your product packaging. You may also refer to the retailer where you purchased the product for support.