

Elite Gourmet ERC2001BX

Elite Gourmet ERC2001BX 10-Cup Electric Rice Cooker Instruction Manual

Model: ERC2001BX

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance is for household use only.

PARTS AND FEATURES

The Elite Gourmet ERC2001BX Electric Rice Cooker is designed for ease of use and durability. It includes the following components:

- **Main Unit:** The base of the rice cooker with 'COOK' and 'WARM' indicator lights and a one-touch control lever.
- **304 Surgical Grade Stainless Steel Inner Pot:** A durable, non-coated cooking pot with measurement markings.

- **Tempered Glass Lid:** Features a steam vent and a cool-touch handle for safe handling and monitoring.
- **Measuring Cup:** For accurate measurement of rice and water.
- **Rice Spatula:** A plastic spatula for serving cooked rice.

10-Cup Capacity



Image: Elite Gourmet ERC2001BX Electric Rice Cooker with its main unit, stainless steel inner pot, tempered glass lid, measuring cup, and rice spatula.

Classic Design & Multi-Function Performance



Image: Detailed diagram illustrating the various components of the Elite Gourmet rice cooker, including the lid, inner pot, base, and accessories.

BEFORE FIRST USE

Before using your Elite Gourmet ERC2001BX Electric Rice Cooker for the first time, please follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wash the stainless steel inner pot, tempered glass lid, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Ensure all parts are dry before assembly and use.

SETUP

Setting up your rice cooker is simple:

1. Place the main unit on a stable, flat, heat-resistant surface.
2. Insert the clean stainless steel inner pot into the main unit. Ensure it sits properly.
3. Place the tempered glass lid on top of the inner pot.

OPERATING INSTRUCTIONS

The Elite Gourmet ERC2001BX is designed for cooking various types of rice, soups, stews, porridges, grains, and cereals with a simple one-touch operation.

Cooking Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of uncooked rice. The cooker can hold up to 5 cups of uncooked rice, yielding 10 cups of cooked rice.
2. **Rinse Rice:** Rinse the rice thoroughly under cold water until the water runs clear. This helps remove excess starch.
3. **Add Rice to Pot:** Place the rinsed rice into the stainless steel inner pot.
4. **Add Water:** For white rice, a general ratio is 1 cup of uncooked rice to 1.5 cups of water. Adjust water levels according to rice type and personal preference. The inner pot has markings to guide water levels.
5. **Place Lid:** Securely place the tempered glass lid on the inner pot.
6. **Plug In:** Plug the power cord into a standard electrical outlet.
7. **Start Cooking:** Press the 'COOK' lever down. The 'COOK' indicator light will illuminate.
8. **Automatic Keep Warm:** Once the rice is cooked, the cooker will automatically switch to the 'WARM' function, and the 'WARM' indicator light will illuminate. This keeps your rice warm and ready to serve for hours.
9. **Serve:** Use the provided rice spatula to fluff and serve the cooked rice.



Image: The Elite Gourmet rice cooker preparing a meal, highlighting its 10-cup cooked rice capacity.



TEMPERED GLASS LID
with steam vent and
cool-touch handle

**304 STAINLESS-STEEL
COOKING POT**
10 cup cooked rice capacity

**CLASSIC BASE WITH
COOL-TOUCH HANDLES**
and cook & warm indicators

**MEASURING CUP
AND RICE SPATULA**
dishwasher safe & BPA free

Image: Illustration demonstrating the volume expansion from 5 cups of uncooked rice to 10 cups of cooked rice.

Cooking Other Foods

This rice cooker can also be used for preparing soups, stews, porridges, grains, and cereals. Follow recipe-specific instructions for ingredient ratios and cooking times. The automatic 'WARM' function will engage once the liquid has been absorbed or the cooking cycle is complete.

Enjoy Effortless Cooking



Image: The rice cooker showcasing its versatility by illustrating different types of meals it can prepare.

Official Product Videos

Video: An overview of the Elite Gourmet Black Electric Rice Cooker, demonstrating its features and operation for cooking 10 cups of rice.

Video: A user review highlighting key aspects of the Elite Gourmet Stainless Rice Cooker, including its components and ease of use.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your rice cooker.

1. **Always unplug the appliance** and allow it to cool completely before cleaning.
2. **Inner Pot:** The 304 surgical grade stainless steel inner pot should be hand washed with warm, soapy water. Avoid abrasive cleaners or scouring pads that could scratch the surface. Rinse thoroughly and dry completely.
3. **Lid, Measuring Cup, and Spatula:** These accessories can be hand washed with warm, soapy water or placed in the dishwasher (top rack recommended).
4. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the electrical components.

5. **Storage:** Store the clean and dry rice cooker in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too hard/undercooked	Not enough water; cooking cycle interrupted.	Add a small amount of hot water and restart the cook cycle briefly. Ensure the lid is sealed during cooking.
Rice is too soft/mushy	Too much water.	Reduce water slightly for future cooking. Fluff rice immediately after cooking to release steam.
Rice sticks to the bottom	Not enough water; rice not rinsed; left on 'WARM' too long.	Ensure proper water ratio. Rinse rice thoroughly. Avoid leaving rice on 'WARM' for excessive periods.
Cooker does not turn on	Not plugged in; power outage; faulty outlet.	Check power cord connection. Verify power to the outlet. Try a different outlet.

SPECIFICATIONS

Feature	Specification
Brand	Elite Gourmet
Model Name	ERC2001BX
Capacity	10 Cups (cooked rice) / 5 Cups (uncooked rice)
Product Dimensions	9.6"D x 9.6"W x 11.6"H
Power Source	Corded Electric
Wattage	300 watts
Material	Stainless Steel (Inner Pot), Glass (Lid)
Special Features	Automatic Shut Off, Keep Warm Function
Product Care Instructions	Hand Wash (Inner Pot)

WARRANTY AND SUPPORT

Elite Gourmet products are manufactured to the highest quality standards. For specific warranty information, please refer to the warranty card included with your product or visit the official Elite Gourmet website. For technical support or customer service, please contact Elite Gourmet directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question