

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR V-941 Professional Digital Display Turbo Function Rechargeable Cordless Hair Clipper User Manual](#)

VGR V-941

VGR V-941 Professional Hair Clipper User Manual

Model: V-941

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your VGR V-941 Professional Digital Display Turbo Function Rechargeable Cordless Hair Clipper. Please read this manual thoroughly before first use and retain it for future reference.

PRODUCT OVERVIEW

The VGR V-941 is a versatile hair clipper designed for precise grooming. It features a digital display, turbo function, and a rechargeable battery for cordless operation.

Components



Image: VGR V-941 Hair Clipper with included accessories: three guide combs, USB charging cable, lubricating oil, and cleaning brush. The product packaging is also visible.

- Hair Clipper Unit
- 3 Guide Combs (1.5mm, 3mm, 6mm)
- USB Type-C Charging Cable
- Cleaning Brush
- Lubricating Oil
- Protective Cover

Key Features



ON/OFF SWITCH

Easy to operate, convenient and practical

USB CHARGING

USB cable provide you to charging wherever you need.

LONGER WORK TIME

Rechargeable Li-ion battery 5V 2000mAh.

LED DISPLAY

The LED display show the power left status and add oil timely.

Image: Diagram highlighting the ON/OFF switch for easy operation, USB charging capability, extended work time from a 2000mAh Li-ion battery, and an LED display indicating power status.

- **Pro Li Outliner Grooming:** Designed for various hairstyles.
- **Turbo Power Function:** Provides additional power when required.
- **Precise & Sharp Blades:** Self-sharpening stainless steel and ceramic blades for smooth cutting.
- **LED Digital Display:** Shows remaining battery charge and indicates when oiling is needed. Includes over-charge protection.
- **Cordless Operation:** Up to 250 minutes run time on a 3-hour charge.
- **Multiple Cutting Lengths:** 3 attachment combs (1.5mm, 3mm, 6mm) for various trimming ranges (0mm to 6mm).
- **Low Noise:** High-performance motor with reduced operational noise.

SETUP

1. Initial Charging

ADJUSTABLE HAIR CUTTING LENGTHS 4 ATTACHMENT GUIDES (1.5MM, 3MM, 6MM, 3MM)



Image: The VGR V-941 hair clipper connected to a USB charging cable. The LED display shows "POWER LEFT" and a battery icon, indicating the charging status. Text overlays show "3 Hours Charge Time" and "250 Mins Work Time".

1. Before first use, fully charge the clipper for approximately 3 hours.
2. Connect the USB Type-C charging cable to the clipper's charging port.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The LED digital display will show the charging status. A full charge provides up to 250 minutes of cordless operation.

2. Attaching Guide Combs

THE LED DISPLAY SHOW THE POWER LEFT STATUS.



An LED battery charge display that tells you exactly how much charge is left and also comes with over-charge protection.

Image: Three guide combs with lengths 1.5mm, 3mm, and 6mm are displayed alongside the VGR V-941 hair clipper, illustrating how they are attached to the blade for different cutting lengths.

1. Ensure the clipper is turned off.
2. Select the desired guide comb (1.5mm, 3mm, or 6mm).
3. Align the comb with the clipper blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

OPERATING INSTRUCTIONS

1. Basic Operation

1. Ensure the clipper is charged and a guide comb is attached if desired.
2. Press the ON/OFF switch to power on the clipper. The LED display will illuminate.
3. For a close trim (0mm), operate the clipper without any guide comb.
4. Move the clipper against the direction of hair growth for effective cutting.
5. Press the ON/OFF switch again to turn off the clipper after use.

2. Turbo Function

The clipper is equipped with a Turbo function for increased power when cutting thicker or denser hair.

- While the clipper is on, press the Turbo button (if available, or refer to specific button on your model) to activate the enhanced power mode.
- The clipper will operate at a higher speed.
- Press the Turbo button again to return to standard operating mode.

MAINTENANCE

1. Cleaning the Blades

1. Turn off the clipper and disconnect it from the power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to remove loose hairs from the blades.
4. For thorough cleaning, the blades can be rinsed under running water. Ensure the clipper body does not get wet if it is not waterproof. Dry the blades completely before reattaching or storing.

2. Oiling the Blades

Regular oiling ensures optimal performance and extends blade life. The LED display may indicate when oiling is needed.

1. After cleaning, apply a few drops of the provided lubricating oil onto the blades.
2. Turn on the clipper for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.

Problem	Possible Cause	Solution
Clipper pulls hair or cuts poorly.	Blades are dull or clogged with hair. Blades need oiling.	Clean the blades thoroughly. Apply lubricating oil to the blades.
Clipper makes unusual noise.	Blades are not properly aligned or need oiling.	Check blade alignment. Apply lubricating oil. If problem persists, contact support.
LED display not working.	Unit malfunction.	Ensure unit is charged. If problem persists, contact support.

SPECIFICATIONS

Feature	Detail
Model Number	V-941
Blade Material	Stainless Steel & Ceramic
Battery Type	Lithium Ion (2000 mAh)
Charging Time	Approximately 3 hours
Operating Time	Up to 250 minutes
Cutting Lengths	0mm (without comb), 1.5mm, 3mm, 6mm (with guide combs)
Power Source	Battery Powered (USB Charging)
Product Dimensions	20 x 9.7 x 6.7 cm
Item Weight	460 g
Country of Origin	China

WARRANTY AND SUPPORT

The VGR V-941 Hair Clipper comes with a 12-month quality warranty. For any issues or support, please contact customer service.

Contact Information: Refer to your purchase documentation or the official VGR website for specific contact details.



[VGR V-085 Professional Hair Trimmer Manual and Safety Instructions](#)

This document provides comprehensive safety instructions, components list, usage guidelines, cleaning and maintenance procedures, and technical specifications for the VGR V-085 Professional Hair Trimmer.



[VGR V-282 Professional Hair Clipper User Manual and Specifications](#)

Comprehensive user manual for the VGR V-282 Voyager Professional Hair Clipper. Includes detailed information on components, safety instructions, usage, charging, maintenance, technical features, and disposal guidelines.



[VGR V-085 Professional Hair Trimmer User Manual & Safety Instructions](#)

This document provides comprehensive safety instructions, component descriptions, usage guidelines, charging, cleaning, and maintenance information for the VGR V-085 Professional Hair Trimmer.



[VGR V-990 Cordless Hair Trimmer User Guide](#)

Comprehensive guide to using the VGR V-990 professional cordless hair trimmer, featuring 8000RPM, barber-grade performance, and easy hair cutting for men.



[VGR V-906 Professional Hair Trimmer User Manual](#)

Comprehensive user manual for the VGR V-906 electric hair trimmer, detailing features, operation, charging, maintenance, and troubleshooting for professional and home grooming.



[VGR V-9821 Professional Hair Trimmer User Manual](#)

Comprehensive user guide for the VGR V-9821 Professional Hair Trimmer, covering components, safety instructions, usage, USB charging, cleaning, maintenance, and technical specifications.