

Oneach AMZ-T1189

Oneach Cordless LED Mushroom Table Lamp User Manual

Model: AMZ-T1189

INTRODUCTION

Thank you for purchasing the Oneach Cordless LED Mushroom Table Lamp. This manual provides essential information for the safe and efficient operation of your new lamp. Please read it thoroughly before use and retain it for future reference.



Figure 1: Oneach Cordless LED Mushroom Table Lamps (2-Pack)

PRODUCT FEATURES

- **Portable Cordless Design:** Lightweight and rechargeable, allowing for flexible placement without the need for electrical outlets. Ideal for various indoor and outdoor settings.
- **Long-Lasting Battery:** Equipped with a built-in 3600mAh rechargeable battery, providing up to 48 hours of illumination at the lowest brightness setting and 9-10 hours at the highest.
- **Opal Glass Shade:** Features a seamless, glossy white opal glass shade that provides a warm, diffused, and glare-free light for eye protection.
- **Touch Control & Stepless Dimming:** Easily switch between 3 color temperatures (warm, neutral, white light) with a short touch. Long touch to infinitely adjust brightness.
- **Universal Type-C Charging:** Conveniently recharges via a Type-C port. Includes a USB A to USB C charging cable. (Note: USB C-C cables are not supported).

STEPLESS DIMMING TABLE LAMP

Cold Light

Warm Light

Neutral Light



Figure 2: Stepless Dimming and Color Temperature Control

PACKAGE CONTENTS

Please check the package contents upon receipt to ensure all items are present:

- Oneach Cordless LED Mushroom Table Lamp(s) (Quantity as per purchase, e.g., 2 for 2-Pack)
- USB A to USB C Charging Cable
- User Manual



Figure 3: Package Contents and Product Dimensions

SETUP

1. **Unpacking:** Carefully remove the lamp and all accessories from the packaging.
2. **Initial Charge:** Before first use, fully charge the lamp. Connect the provided USB A to USB C charging cable to the lamp's Type-C port and a compatible USB power adapter (not included). The charging indicator light (if present) will show charging status. A full charge typically takes 5-6 hours.
3. **Placement:** Place the lamp on a stable, flat surface. Its cordless design allows for versatile placement in bedrooms, living rooms, dining rooms, or any desired location.

PORTABLE CORDLESS LAMP

Bring it to wherever you desire



Charging Time: 5-6 Hours



Service Time

Minimum Lumen: 46-48 Hours

Neutral Light: 9-10 Hours

Figure 4: Portable Design and Battery Life

OPERATING INSTRUCTIONS

The Oneach Cordless LED Mushroom Table Lamp features intuitive touch controls:

- **Power On/Off:** Lightly tap the touch sensor located on the lamp base to turn the lamp on or off.
- **Change Color Temperature:** With the lamp on, short touch the sensor to cycle through the three available color temperatures: Warm Light, Neutral Light, and Cold Light.
- **Adjust Brightness (Stepless Dimming):** With the lamp on, press and hold the touch sensor. The brightness will gradually increase or decrease. Release your finger when the desired brightness level is reached.



Figure 5: Lamp in a Desk Setting

MAINTENANCE

To ensure the longevity and optimal performance of your lamp, follow these maintenance guidelines:

- **Cleaning:** Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or glass shade.
- **Battery Care:** To preserve battery life, avoid fully discharging the lamp frequently. Recharge the lamp when the light becomes dim. If storing the lamp for an extended period, charge it fully every 3 months.
- **Storage:** Store the lamp in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted. Touch sensor not activated correctly.	Charge the lamp fully using the provided USB cable. Ensure you are touching the sensor firmly and directly.
Lamp light is dim or flickers.	Low battery. Incorrect brightness setting.	Recharge the lamp. Press and hold the touch sensor to increase brightness.
Cannot change color temperature.	Incorrect touch action.	Ensure you are performing a short tap on the touch sensor to cycle through modes.
Lamp does not charge.	Cable or adapter issue. USB C-C cable used.	Try a different USB A to USB C cable or power adapter. Only use USB A to USB C cables for charging. USB C-C cables are not supported.

SPECIFICATIONS

Feature	Detail
Brand	Oneach
Model Number	AMZ-T1189
Product Dimensions	5.9"D x 5.9"W x 9"H
Item Weight	1.3 Pounds
Lamp Type	Table Lamp
Shade Material	Glass
Shade Color	White
Light Source Type	LED
Power Source	Battery Powered
Battery Type	Lithium Polymer (3600mAh)
Charging Port	Type-C USB
Control Method	Touch
Special Feature	Cordless, Dimmable, 3 Color Temperatures
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Oneach Home directly through their official channels or the

retailer from whom you purchased the product. Please have your model number (AMZ-T1189) and purchase details ready when contacting support.

For additional information and product updates, you may visit the[Oneach Store on Amazon](#).

