

Redchef REDCHEF HANDLE

Redchef Removable Cookware Handle Instruction Manual

Model: REDCHEF HANDLE

INTRODUCTION

The Redchef Removable Cookware Handle is designed to enhance your cooking experience by providing a versatile and space-saving solution for your pots and pans. This universal handle is compatible with various cookware types that feature vertical edges, allowing for easy transition between stove, oven, and refrigerator, and optimizing storage space. Its robust construction ensures durability and reliable performance.

SAFETY INFORMATION

- Always ensure the handle is securely attached to the cookware before lifting or moving.
- Do not leave the handle attached to cookware during oven use unless the cookware manufacturer explicitly states it is safe for oven temperatures.
- Keep the handle out of reach of children.
- Avoid exposing the handle to direct flame for extended periods, as this may cause damage.
- Verify the handle's stability and engagement before transferring hot or heavy cookware.

PRODUCT OVERVIEW

The Redchef Removable Cookware Handle features a durable design crafted from robust stainless steel and silicone, capable of supporting up to 10kg. Its ergonomic shape provides a comfortable and

secure grip, while the striped rubber enhances slip resistance. The handle is designed with three adjustable models to accommodate varying pan body thicknesses, ensuring a snug and stable fit for a wide range of cookware. This design promotes optimal stack storage, saving up to 75% more space in your kitchen.



Image: The Redchef Removable Cookware Handle, showcasing its design and color.

SETUP

Attaching the Handle

1. Align the clamping mechanism of the handle with the vertical edge of your cookware.
2. Slide the handle onto the cookware edge until it is firmly seated.
3. Press the locking button on the handle to secure it in place. Ensure the handle is fully engaged and stable before use.

Simple Operation



Image: Visual guide for attaching the handle: 'Slide to open' and 'Press to lock'.

Detaching the Handle

1. Locate the release mechanism (button or slider) on the handle.
2. Slide or press the release mechanism to disengage the lock.
3. Gently pull the handle away from the cookware.

Adjusting for Pan Thickness

The Redchef Removable Handle features three adjustable models (gears) to accommodate different pan body thicknesses. To adjust, ensure the handle is detached from any cookware. The internal mechanism can be set to Level 1, Level 2, or Level 3 to provide the most secure fit for your specific pot or pan.

Adjustable Model

Adapts to different thickness of pan body



Image: Illustration of the handle's adjustable models (Level 1, Level 2, Level 3) for varying pan thicknesses.

Your browser does not support the video tag.

Video: This video demonstrates the different adjustable gears of the Redchef Removable Handle, showing how it adapts to various cookware thicknesses for a secure fit.

OPERATING INSTRUCTIONS

The detachable design of the Redchef handle offers significant flexibility in your kitchen:

- **Stovetop Cooking:** Attach the handle securely for cooking on gas, electric, or induction stovetops.
- **Oven Use:** Detach the handle to place your cookware directly into the oven for baking or finishing dishes. This allows for seamless transition from stovetop to oven.
- **Refrigerator Storage:** Remove the handle to store cookware in the refrigerator, saving valuable space.
- **Serving:** Reattach the handle to safely transport and serve food from the cookware to the table.

Multi-functional Use

From Stove, to Oven, into Fridge



Image: Demonstrates the multi-functional use of the handle, transitioning from stove to oven and fridge.

Durable and Stable

Holds Up to 10kg



Image: The handle's durability, holding a 10kg weight in a pan.

MAINTENANCE AND CARE

- **Cleaning:** Wash the handle with mild soap and warm water. Rinse thoroughly to remove all soap residue.
- **Drying:** Dry the handle completely after washing to prevent water spots or corrosion.
- **Dishwasher Safe:** The Redchef Removable Handle is dishwasher safe for convenient cleaning.
- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the silicone and stainless steel components.
- **Storage:** Store the handle in a dry place when not in use. Its removable design allows for compact storage alongside your stackable cookware.

Easy Storage

Saving Your Space 70%



Image: Easy storage of cookware with the handle detached, saving space.

TROUBLESHOOTING

- **Handle feels loose or wobbly:**

Ensure the handle is correctly aligned with the cookware edge and the locking mechanism is fully engaged. Try adjusting the handle to a different model setting (Level 1, 2, or 3) to match your pan's thickness more precisely. Inspect the clamping area for any food debris or obstructions that might prevent a secure fit.

- **Difficulty attaching or detaching the handle:**

When detaching, ensure the release mechanism is fully disengaged. When attaching, apply firm, even pressure until you hear or feel the lock click into place. Do not force the handle. If it's still difficult, check for any damage to the handle or the cookware edge.

- **Handle appears discolored or damaged:**

Avoid exposing the handle to excessive heat or direct flame. While designed for heat resistance, extreme temperatures can cause damage. Ensure proper cleaning and storage as outlined in the Maintenance section.

SPECIFICATIONS

Feature	Detail
Brand	Redchef
Model Number	REDCHEF HANDLE
Material	Silicone, Stainless Steel
Color	Green
Exterior Finish	Silicone
Special Features	Detachable Handle, Ergonomic Handle, Lightweight, Scratch Resistant
Item Weight	0.4 Pounds (6.4 ounces)
Handle Material	Silicone
Hand Orientation	Ambidextrous
Projection Distance	1.18 Inches
Handle Attachment Mechanism	Clamp
Package Dimensions	7.99 x 1.77 x 1.54 inches



Removable Handle

Image: Detailed dimensions of the Redchef Removable Handle.

Style A/B Random

Appearance difference only, no difference in function

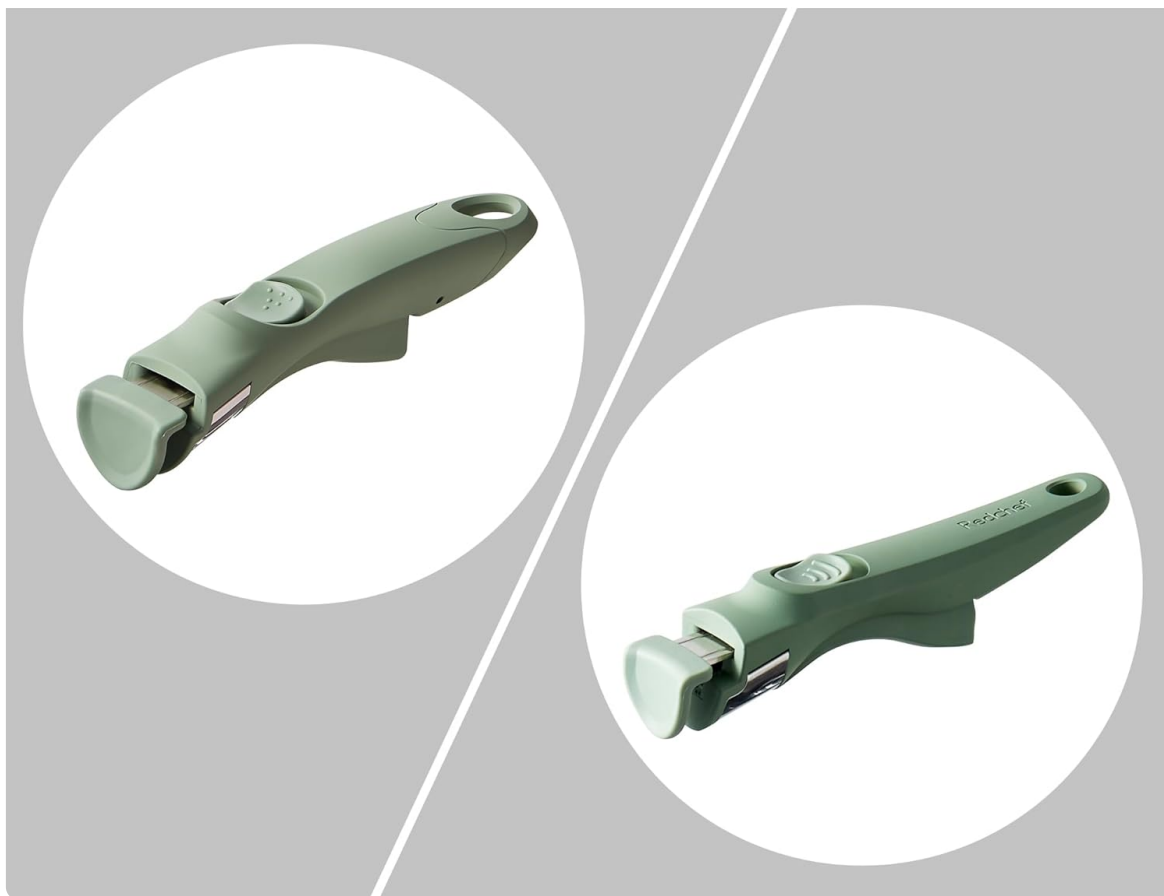


Image: Two possible styles of the handle (Style A/B), noting that their appearance may vary but functionality remains consistent.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the original product packaging or visit the official Redchef website. You can also contact Redchef customer service directly for assistance with any product-related inquiries.