

ARTPOWER B0D7M4LTMY

ARTPOWER Console Table User Manual

Model: B0D7M4LTMY

1. INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your ARTPOWER Console Table. This versatile furniture piece is designed to enhance your living space with its retro aesthetic and practical storage solutions.

The console table features two spacious drawers, two door cabinets, and an open bottom shelf, offering ample space for various items. Its sturdy construction and classic design make it suitable for living rooms, hallways, foyers, or as a sofa table.

2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Always keep the table away from heat sources.
- Never place excessively heavy objects on the top surface to prevent tipping.
- Exercise caution with fingers when opening and closing drawers and cabinet doors to avoid pinch injuries.
- Follow all assembly instructions carefully and use appropriate tools to prevent injury.
- Ensure the anti-tip fittings are properly installed to secure the table to the wall, especially in households with children or pets.
- Keep small parts and hardware away from children and pets during assembly.

3. SETUP AND ASSEMBLY

The ARTPOWER Console Table requires assembly. It is recommended that two adults assemble this product to ensure stability and ease of construction. All necessary hardware and clear instructions are included.

3.1 Unpacking and Inspection

- Carefully unpack all components from the packaging.
- Verify that all parts and hardware listed in the instruction manual are present. Refer to the parts list provided in your package.
- Inspect all pieces for any damage. If any parts are damaged or missing, do not proceed with assembly. Contact customer support immediately.

3.2 Assembly Steps

1. Lay out all components on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches.
2. Follow the step-by-step diagrams and instructions provided in the included assembly manual. Each part is typically labeled for easy identification.
3. Begin by attaching the main frame components, ensuring all connections are secure but do not overtighten screws until the entire unit is aligned.
4. Install the drawers and cabinet doors according to the instructions. Ensure smooth operation of drawers and proper alignment of cabinet doors.
5. Attach the bottom shelf and legs. The adjustable feet on the bottom of the table corners should be adjusted to ensure the table is level and stable on uneven floors.
6. Secure the anti-tip fittings to the back of the table and to a wall stud using appropriate wall anchors (not always included, check manual). This step is crucial for safety.
7. Once fully assembled, gently move the table to its desired location.

MULTIPLE STORAGE SPACE



Image: Fully assembled ARTPOWER Console Table in a living room. This image demonstrates the table's appearance and how it can be styled with various items.



Image: Dimensional diagram of the console table. This diagram provides key measurements for the table, including its overall length, depth, height, and the internal dimensions of the drawers, aiding in planning its placement and use.

4. OPERATING INSTRUCTIONS

The ARTPOWER Console Table is designed for functional storage and display in various home environments.

4.1 Storage Features

- **Top Surface:** Use the spacious tabletop for displaying decorative items, lamps, photo frames, or for holding everyday essentials like keys and mail.
- **Drawers:** The two drawers are ideal for storing smaller items such as remote controls, stationery, or personal accessories, keeping them organized and out of sight.
- **Cabinet Doors:** The two cabinet compartments provide enclosed storage for larger items, such as books, dinnerware, or media devices.
- **Bottom Shelf:** The open bottom shelf is perfect for displaying storage baskets, taller decorative items, or even neatly stacked books.



Image: Overview of storage features. This image highlights the various storage options available on the console table, including the tabletop, drawers, cabinets, and bottom shelf, demonstrating their utility.

2 DRAWERS AND 2 STORAGE CABINETS

- Easily store cutlery
- Customized storage space
- Modern and farmhouse decor combination



Image: Detailed view of drawers and cabinets. This image provides a closer look at the drawers and cabinet interiors, illustrating how they can be used to store various household items like cutlery and dishes.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your ARTPOWER Console Table.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth to prevent staining or water damage.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Heat and Moisture:** Do not place hot items directly on the surface. Use coasters or protective pads under hot or wet objects. Maintain a stable humidity level in the room to prevent wood warping.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure the table remains stable and secure. Do not overtighten.

6. TROUBLESHOOTING

If you encounter any issues with your console table, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Table is wobbly or unstable.	Uneven floor; loose fasteners; improper assembly.	Adjust the leveling feet on the bottom of the legs. Check and tighten all assembly screws. Ensure anti-tip fittings are securely installed.
Drawers do not slide smoothly.	Misaligned drawer slides; obstruction in the track; overtightened screws.	Ensure drawer slides are correctly installed and aligned. Check for any debris in the tracks. Loosen screws slightly if they are overtightened.
Cabinet doors do not close properly or are misaligned.	Misaligned hinges; loose hinge screws.	Adjust the hinges according to the assembly manual. Tighten hinge screws.
Missing or damaged parts upon arrival.	Packaging error or transit damage.	Do not assemble. Contact ARTPOWER customer support with your purchase details and a list of missing/damaged parts.

7. SPECIFICATIONS

Feature	Detail
Brand	ARTPOWER
Model Number (ASIN)	B0D7M4LTMY
Color	White
Product Dimensions (D x W x H)	14"D x 42"W x 34"H
Material	Engineered Wood (Top), Wood (Frame), Metal (Handle)
Mounting Type	Freestanding
Number of Drawers	2
Number of Cabinets	2
Number of Shelves	2 (including bottom open shelf)
Assembly Required	Yes

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product packaging or contact ARTPOWER customer support directly. Keep your purchase receipt as proof of purchase. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact ARTPOWER customer service. Contact details are typically found on the product packaging or the brand's official website.

Please note: Specific warranty terms and customer support contact methods may vary. Refer to the official

ARTPOWER website or your purchase documentation for the most current information.

© 2025 ARTPOWER. All rights reserved.