

[Manuals.plus](#) /

› [Oneach](#) /

› Oneach 9" Cordless Table Lamp User Manual

Oneach AMZ-T1189

Oneach 9" Cordless Table Lamp

USER MANUAL

1. Product Overview

The Oneach 9" Cordless Table Lamp is a portable and rechargeable lighting solution designed for versatile use in various indoor and outdoor settings. It features a built-in 3600mAh battery, offering extended illumination without the need for constant power outlets. The lamp provides three distinct color temperatures (warm, neutral, cool white) and seven vibrant RGB color modes, allowing for customizable ambiance. Its compact design, touch control interface, and Type-C charging port ensure ease of use and convenience.



Image: The Oneach Cordless Table Lamp showcasing its elegant design and dynamic RGB lighting capabilities.

2. Safety Instructions

- Do not expose the lamp to extreme temperatures or direct sunlight.
- Avoid contact with water or other liquids to prevent electric shock or damage. The lamp is water resistant, not waterproof.
- Do not disassemble, repair, or modify the lamp yourself. Contact qualified personnel for service.
- Use only the provided charging cable or a compatible USB A to USB C cable for charging. Do not use USB C-C cables.
- Keep out of reach of children and pets.
- Ensure the lamp is placed on a stable, flat surface to prevent tipping.

3. Package Contents

Verify that all items are present in the package:

- Oneach 9" Cordless Table Lamp (1 unit)
- USB A to USB C Charging Cable (1 unit)
- User Manual (this document)



Image: The Oneach Cordless Table Lamp, its packaging, charging cable, and user manual.

4. Setup

1. **Unpack the Lamp:** Carefully remove the lamp and all accessories from the packaging.
2. **Initial Charge:** Before first use, fully charge the lamp. Connect the USB A end of the charging cable to a compatible USB power adapter (not included) or a computer USB port, and the USB C end to the charging port on the lamp's base. The charging indicator light will show charging status (refer to lamp for specific indicator behavior). A full charge takes approximately 5-6 hours.

3. **Placement:** Place the lamp on a stable surface in your desired location. Its cordless design allows for flexible placement anywhere in your home, patio, or even during camping.



Image: Detail of the lamp's base, highlighting the touch control button and the Type-C charging port.

5. Operating Instructions

The Oneach Cordless Table Lamp features intuitive touch control for all its functions.

- **Power On/Off:** Lightly touch the control button on the lamp's base to turn the lamp on or off.
- **Adjust Color Temperature:** When the lamp is on in white light mode, short touch the control button to cycle through 3 color temperatures: Warm Light (3000K), Neutral Light (4000K), and Cool White Light (6000K).
- **Activate RGB Colors:** Long press the control button to switch from white light mode to RGB color mode. Short touch to cycle through 7 static RGB colors. Long press again to activate the RGB color cycling mode.
- **Memory Function:** The lamp will remember the last selected color temperature or RGB color mode when turned off and will resume that setting when turned back on.
- **Battery Life:** A fully charged 3600mAh battery provides approximately 36-38 hours of illumination in customized RGB 7 Color Light mode, and 9-10 hours in neutral light setting.



Image: Visual representation of the lamp's adjustable color temperatures (3000K-6000K), 7 RGB color options, and memory function.



Image: The Oneach lamp showcasing its range of vibrant RGB colors, suitable for different moods and occasions.

6. Maintenance

- **Cleaning:** Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the lamp frequently. Recharge the lamp regularly, even if not in active use, especially if storing for extended periods.
- **Storage:** Store the lamp in a cool, dry place when not in use.

7. Troubleshooting

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp fully using the provided USB cable.

Problem	Possible Cause	Solution
Lamp does not charge.	Incorrect charging cable or faulty power adapter.	Ensure you are using a USB A to USB C cable. Try a different USB power adapter or port.
Light color or mode does not change.	Incorrect touch operation.	Refer to 'Operating Instructions' for correct short touch and long press actions to change modes.
Lamp flickers or dims unexpectedly.	Low battery level.	Recharge the lamp.

8. Specifications

Feature	Detail
Model Number	AMZ-T1189
Dimensions	5.9"D x 5.9"W x 9"H
Item Weight	1.3 Pounds
Power Source	Battery Powered
Battery Type	2 Lithium Polymer batteries (included)
Battery Capacity	3600mAh
Charging Port	Type-C USB
Charging Time	Approx. 5-6 hours
Service Time (RGB Mode)	Up to 36-38 hours
Service Time (Neutral Light)	9-10 hours
Light Source Type	LED
Color Temperatures	3 (Warm, Neutral, Cool White)
RGB Colors	7 static colors + cycling mode
Control Method	Touch
Shade Material	Glass
Base Material	Metal
Indoor/Outdoor Usage	Indoor, Outdoor (Water Resistant)



Image: Key dimensions of the Oneach Cordless Table Lamp.

9. Warranty and Support

This product comes with a standard manufacturer's warranty. Please refer to the product packaging or the seller's information for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Oneach customer service through the retailer's platform or visit the official Oneach website for contact details.

Manufacturer: Oneach Home

Date First Available: September 5, 2024

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question