

HOTT C229

HOTT C229 Portable Bluetooth 5.3 CD Player Instruction Manual

Model: C229

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your HOTT C229 Portable Bluetooth 5.3 CD Player. Please read this manual thoroughly before using the device and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid disassembling the unit. Repairs should only be performed by qualified personnel.
- Keep the device away from strong magnetic fields.
- Ensure proper ventilation to prevent overheating.
- Use only the provided charging cable and adapter.
- Do not look directly at the laser head to avoid eye damage.

3. PACKAGE CONTENTS

- HOTT C229 Desktop CD Player
- Remote Control (2x AAA batteries not included)
- USB-C Charging Cable
- AUX Cable
- User Manual

4. PRODUCT OVERVIEW

The HOTT C229 is a versatile desktop CD player featuring a transparent magnetic CD tray, touch-sensitive controls, and dynamic RGB lighting. It supports multiple audio sources including CD, Bluetooth, AUX, U Disk, and Micro SD.



Figure 1: Front view of the HOTT C229 CD Player highlighting its features including RGB Lighting, Remote Control, AUX Input, MicroSD Recording, LED Display, Bluetooth 5.3, USB-C Charging Port, Hi-Fi Audio, and Auto Shutdown Timer.

Controls and Ports

- **Front Panel:** Power Button/Volume Knob, Play/Pause/Stop, Next Track, Previous Track, Mode, Lighting Modes, Playback Modes/Transcription.
- **Rear Panel:** MicroSD Slot, 3.5mm Headphone Jack, USB Port, USB-C Charging Port, Charging Indicator.



Figure 2: Detailed view of the HOTT C229's controls and ports on both the front and rear panels.

5. SETUP

5.1 Charging the Device

The HOTT C229 features a built-in 4000mAh rechargeable battery. Connect the provided USB-C charging cable to the charging port on the rear panel and plug the other end into a compatible USB power adapter (not included). The charging indicator will illuminate during charging and turn off when fully charged. A full charge takes approximately 3 hours and provides 10-12 hours of playback.

BUILT-IN 4000MAH RECHARGEABLE BATTERY

 3H Charging Time

 10H Playing Time



Figure 3: The HOTT C229 CD Player connected to a power source for charging.

5.2 Inserting a CD

1. Gently open the transparent magnetic CD tray cover.
2. Place the CD onto the spindle with the label side facing you.
3. Close the CD tray cover securely.

Your browser does not support the video tag.

Video 1: Demonstrates inserting a CD into the HOTT C229 CD Player and its various functions, including Bluetooth connectivity, recording to TF card, and remote control operation.

6. OPERATING INSTRUCTIONS

6.1 Basic Playback

1. **Power On/Off:** Rotate the volume knob clockwise to turn on, counter-clockwise to turn off.
2. **Volume Control:** Rotate the volume knob to adjust the volume.

3. **Play/Pause:** Press the Play/Pause button.
4. **Next/Previous Track:** Press the Next or Previous track buttons.
5. **Mode Selection:** Press the 'M' (Mode) button to switch between CD, Bluetooth, AUX, U Disk, and Micro SD modes.

6.2 Bluetooth Connectivity

The HOTT C229 supports Bluetooth 5.3 for both receiving and transmitting audio.

- **Bluetooth Receive Mode:** In Bluetooth mode, the device will automatically enter pairing mode. Search for 'HOTT C229' on your smartphone or tablet and connect.
- **Bluetooth Transmit Mode:** To connect to Bluetooth headphones or speakers, ensure the external device is in pairing mode. The CD player will automatically search and connect to the nearest device with the strongest signal.
- **Bluetooth Reset:** If Bluetooth fails to connect, disconnect previously connected devices. Press and hold the Next Track button on the CD player to reset its Bluetooth connection.

BLUETOOTH 5.3

Enjoy Wireless Music



Receive



Launch



Figure 4: The HOTT C229 CD Player showing its Bluetooth receive and transmit capabilities.

6.3 RGB Night Light

The device features dynamic RGB lighting around the CD tray. Press the 'Light' button on the front panel or remote control to cycle through different color themes or turn the lights off.



Figure 5: The HOTT C229 CD Player showcasing its colorful RGB lighting options.

6.4 Sleep Timer

Set a sleep timer for 30, 60, or 90 minutes using the remote control. The device will automatically power off after the selected duration.

BEDTIME TIMER

Drift Off to Sleep with the Timer CD Player



Figure 6: The HOTT C229 CD Player illustrating its sleep timer function.

6.5 CD to Micro SD Recording

You can transcribe music from your CDs directly to a Micro SD card. Insert a Micro SD card (1GB-128GB supported) into the MicroSD slot on the rear panel. In CD mode, press the 'Transcription' button to begin recording.

CONVERT CDS TO MICROSD CARDS

Supports microSD Playback & Records CDs Directly



Figure 7: The HOTT C229 CD Player demonstrating its ability to record CD audio to a MicroSD card.

6.6 Remote Control

The included remote control allows convenient operation from up to 20 feet away. It requires 2x AAA batteries (not included).

HI-FI SOUND EASY REMOTE CONTROL



Figure 8: The HOTT C229 CD Player and its remote control for convenient operation.

7. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- Keep the CD tray free from dust and debris.
- Handle CDs by their edges to avoid scratches and fingerprints.
- Store the device in a cool, dry place when not in use.

8. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the device is charged or connected to a power source. Check the power cable connection.

Problem	Possible Solution
CD skipping or not playing.	Clean the CD for smudges or scratches. Ensure the CD is inserted correctly. The disc may stop revolving intermittently to avoid skipping and prolong its life.
No sound.	Check the volume level. Ensure the correct mode (CD, Bluetooth, AUX, etc.) is selected. If using external speakers, check their connection and power.
Bluetooth connection issues.	Disconnect any previously connected devices. Reset the CD player's Bluetooth by pressing and holding the Next Track button. Ensure the device you are trying to connect to is in pairing mode.
Remote control not working.	Check and replace the AAA batteries in the remote control. Ensure there are no obstructions between the remote and the CD player.

9. SPECIFICATIONS

- **Model:** C229
- **Product Dimensions:** 5.66 x 3.78 x 7.28 inches
- **Item Weight:** 1.79 pounds
- **Connectivity Technology:** Bluetooth 5.3
- **Speaker Type:** Stereo
- **Battery:** 4000mAh rechargeable (included)
- **Charging Time:** Approximately 3 hours
- **Playing Time:** 10-12 hours
- **Supported Disc Formats:** CD/MP3/CD-R/CD-RW
- **Supported Music Formats:** CD-DA/MP3/WMA
- **Micro SD/U Disk Support:** 1GB-128GB

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official HOTT website. Your satisfaction is our priority.