

[Manuals.plus](#) /

› [BOB AND BRAD](#) /

› BOB AND BRAD 721 Pro Foot Massager Machine Instruction Manual

BOB AND BRAD 721

BOB AND BRAD 721 Pro Foot Massager Machine Instruction Manual

Model: 721 Pro

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the BOB AND BRAD 721 Pro Foot Massager Machine. Keep this manual for future reference.

- Always consult your physician before using any new massage device, especially if you have pre-existing medical conditions.
- Do not use the massager while sleeping.
- Exercise caution when using the heat therapy function, especially if you have sensitive skin or circulatory issues. Monitor skin for any adverse reactions.
- Keep the device away from water or damp environments.
- Unplug the massager from the power outlet when not in use and before cleaning.
- Do not allow children to operate the massager without adult supervision.
- Avoid using the massager for longer than the recommended session duration (15 minutes).

2. PRODUCT OVERVIEW

The BOB AND BRAD 721 Pro Foot Massager is designed to provide a comprehensive foot massage experience with shiatsu kneading, air compression, and heat functions. It accommodates foot sizes up to Men's US size 14.

BOB AND BRAD Foot Massager

FSA/HSA Eligible



Kneading
L/M/H



Heat
L/M/H



Compression
L/M/H



Air Mode
L/M/H



Auto Shut-off
20 minutes



Max Foot Size
US 14 M



Image: The BOB AND BRAD 721 Pro Foot Massager, highlighting its full foot coverage and suitability for US size 14 feet, compared to other massagers.

Components:

- Main Massager Unit
- Remote Control
- Power Adapter
- Removable Foot Sleeves (pre-installed)

3. SETUP

1. **Placement:** Place the foot massager on a flat, stable surface in a comfortable seating area. Ensure there is enough space around the unit for proper ventilation.
2. **Power Connection:** Connect the power adapter to the massager's power input port, then plug the adapter into a standard electrical outlet.
3. **Foot Insertion:** Sit comfortably and gently place your feet into the foot openings of the massager. Ensure your feet are fully inserted and positioned correctly for optimal massage coverage. The massager is designed to fit up to Men's US size 14.



3-Air Compression Intensities

Help release tight muscles and stress,
eliminate muscle spasms.

Image: The foot massager with its dimensions (15.7 inches length, 15 inches width, 9.3 inches height) and the remote control, illustrating its

4. OPERATING INSTRUCTIONS

The massager can be operated using the control panel on the unit or the included remote control.

4.1 Power On/Off

- Press the **Power button** on the control panel or remote to turn the massager on.
- Press the **Power button** again to turn the massager off. The device has a 15-minute automatic timer for safety and to prevent overuse.

4.2 Massage Intensity (Kneading)

Adjust the intensity of the shiatsu kneading massage:

- Press the **Knead Intensity button** to cycle through Low, Medium, and High settings.

Who Need **BOB AND BRAD** Foot Massager?



Promote blood flow



Ease foot discomfort



Reduce foot fatigue



Soothe tired feet

Image: A diagram illustrating the full-foot coverage massage, targeting arches, heels, and toes with shiatsu, kneading, and rolling actions.



The Therapists' Massager for Real Relief



Image: Internal view of the massager illustrating the 3-Shiatsu deep kneading mechanism with rotation balls and rolling sticks.

4.3 Air Compression

Control the air compression intensity and mode:

- Press the **Air Pressure button** to select Low, Medium, or High air compression intensity.
- Press the **Air Mode button** to choose between different air compression patterns.



1

Detachable
Foot Sleeve



2

Easy-to-washable



3

**Waterproof
Materials**

Image: Internal view of the massager demonstrating the 3-air compression intensity system, designed to relieve tight muscles.

4.4 Heat Function

Activate and adjust the soothing heat therapy:

- Press the **Heat button** to cycle through the three temperature settings: 131°F, 140°F, and 156°F.
- The heat function can be turned off by cycling through the settings until it is deactivated.

Why Choose Foot Massager?




Office
Worker



Sports
Enthusiast



Trouble
Sleeping

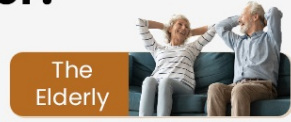

The
Elderly



Standing
All Day



Wearing
High Heels

Image: A person using the foot massager, with an overlay showing thermal imaging and the three heat levels: Low (131°F), Medium (140°F), and High (156°F).

4.5 Remote Control

The remote control allows for convenient adjustment of all settings without bending down.

Professional Foot Massager



BOB AND BRAD



Fits up to US **size 14**.



Really target to
arches, heels & toes.



Larger and higher space
design, move feet freely.



Others



Only fits size 12.



Cannot
target to the toes.



Small space,
tough to move feet.

Image: The BOB AND BRAD 721 Pro Foot Massager shown with its accompanying remote control, illustrating ease of use.

4.6 Automatic Timer

The massager is equipped with an automatic shut-off timer to prevent overheating and ensure safe usage. After the session duration, the device will power off automatically.



Image: A graphic indicating an auto shut-off timer feature. *Note: Product specifications state a 15-minute auto-timer. Please adhere to the 15-minute recommended session duration.*

5. MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your foot massager.

5.1 Cleaning the Foot Sleeves

1. **Remove Sleeves:** Unzip and remove the detachable foot sleeves from the massager unit.
2. **Wash:** The foot sleeves are easy to wash. Hand wash them with mild soap and water, or machine wash on a gentle cycle.
3. **Dry:** Air dry the foot sleeves completely before reattaching them to the massager.
4. **Reattach:** Once dry, carefully reattach the foot sleeves to the massager unit, ensuring they are properly secured.

Larger Space & Easy to Use

The higher and wider space design allows the feet up to **US size 14**.



Image: Close-up view showing the detachable foot sleeves being removed and washed, emphasizing the ease of cleaning.

5.2 Cleaning the Main Unit

- Wipe the exterior of the massager unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Ensure the unit is unplugged before cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your BOB AND BRAD 721 Pro Foot Massager, please refer to the following common solutions:

Problem	Possible Cause	Solution
Massager does not turn on.	Not plugged in; power outlet issue; power button not pressed.	Ensure the power adapter is securely plugged into both the massager and a working electrical outlet. Press the power button firmly.
No heat or insufficient heat.	Heat function not activated; low heat setting selected.	Press the Heat button to activate and cycle through the heat settings (131°F, 140°F, 156°F). Allow a few minutes for the heat to build up.
Massage intensity is too weak or too strong.	Incorrect intensity setting selected.	Adjust the Knead Intensity and Air Pressure settings using the respective buttons on the control panel or remote.
Remote control not working.	Batteries depleted; obstruction between remote and unit.	Replace the remote control batteries. Ensure there is no obstruction between the remote and the massager's sensor.
Unusual noise during operation.	Foreign object inside; internal malfunction.	Turn off and unplug the massager. Check for any foreign objects in the footwells. If the noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact BOB AND BRAD customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	721
Product Dimensions	15.3 x 15.7 x 9.3 inches (L x W x H)
Item Weight	8.16 Pounds (3.7 Kilograms)
Power Source	Corded Electric
Material	Plastic
Max Foot Size	Men's US size 14
Heat Settings	3 levels (131°F, 140°F, 156°F)
Massage Intensity	3 levels (Low, Medium, High) for kneading and air compression
Automatic Timer	15 minutes

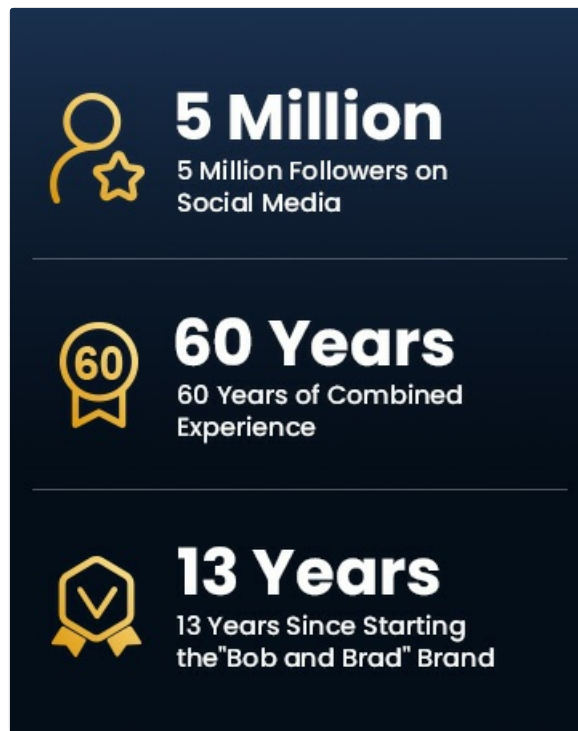


Image: A visual representation of the foot massager's dimensions and its compatibility with foot sizes up to US size 14.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The BOB AND BRAD 721 Pro Foot Massager comes with a **2-Year Warranty**. This warranty covers manufacturing defects and ensures the product is built to last.



Image: A badge indicating the 2-Year Warranty provided with the product.

8.2 Customer Support

For any questions, concerns, or warranty claims, please contact BOB AND BRAD US Customer Support. Our team is available to provide assistance.

- **Contact Information:** Refer to the contact details provided on the product packaging or the official BOB AND BRAD website.

9. PRODUCT VIDEO

Watch this official product video for a visual guide on using the BOB AND BRAD 721 Pro Foot Massager.

Your browser does not support the video tag.

Video: An official demonstration of the BOB AND BRAD 721 Pro Foot Massager's features and operation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7M6PF8S>

More documents and user manuals: <https://manuals.plus/>