

[Manuals.plus](#) /

› [Weilisi](#) /

› Weilisi 84-inch Adjustable Tablet Tripod Stand Instruction Manual

## Weilisi 84-inch Adjustable Tablet Tripod Stand

# Weilisi 84-inch Adjustable Tablet Tripod Stand

## INSTRUCTION MANUAL

### Introduction

Thank you for choosing the Weilisi 84-inch Adjustable Tablet Tripod Stand. This heavy-duty stand is designed to securely hold tablets and phones ranging from 4.5 to 13 inches, offering versatile positioning for various activities such as video recording, online meetings, reading, and more. Please read this manual carefully to ensure proper assembly, operation, and maintenance of your tripod stand.

### Package Contents

Please verify that all items listed below are included in your package:

- Metal Tripod Base
- Tripod Extension Stick
- Flexible Gooseneck Tube
- Phone Clip (2.55-3.85 inches)
- Tablet Holder (4.3-10 inches)
- Wireless Remote Control
- Drawstring Storage Bag

### Setup Instructions

1. **Assemble the Tripod Base:** Unfold the legs of the metal tripod base until they are fully extended and stable.
2. **Attach the Extension Stick:** Screw the tripod extension stick onto the top of the tripod base. Ensure it is tightened securely.
3. **Adjust Height:** Loosen the flip locks on the extension stick sections. Extend the stick to your desired height (up to 84 inches / 7 feet). Secure each section by closing the flip locks firmly.
4. **Install the Gooseneck:** Screw the flexible gooseneck tube onto the top of the extended tripod stick.
5. **Attach Device Holder:** Choose either the phone clip or the tablet holder based on your device. Screw the chosen

holder onto the end of the gooseneck tube.



Image: The Weilisi tripod stand demonstrating its adjustable height feature, with a person using it while playing a guitar.

## Fit for Different Shooting Angle

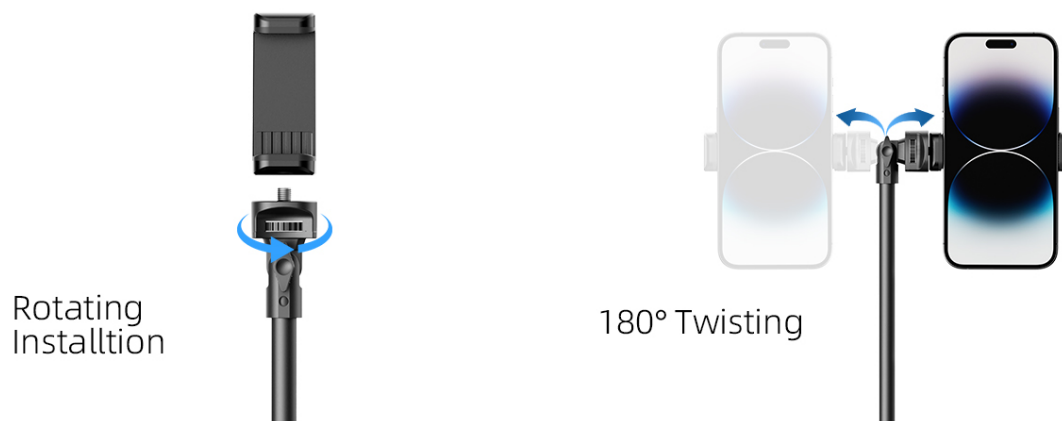


Image: A visual representation of the tripod stand's height range (17.4 to 84 inches) and its sturdy, heavy-duty construction.

## Operating Instructions

- 1. Attaching Your Device:** Gently pull apart the jaws of the phone clip (for devices 2.55-3.85 inches wide) or tablet holder (for devices 4.3-10 inches wide). Insert your device and release the jaws to secure it. The silicone pads provide protection and grip.
- 2. Adjusting the Gooseneck:** Bend the flexible gooseneck to position your device at any desired angle or height. The reinforced gooseneck maintains its position without sagging.
- 3. Angle Adjustment:** The device holder features a 360° rotatable cloud shoe and a 180° tilt-adjustable head joint, allowing for precise positioning in both portrait and landscape orientations, as well as overhead shooting.
- 4. Using the Wireless Remote:**
  - Ensure the CR2032 battery is installed in the remote.
  - Turn on the remote.
  - On your phone or tablet, go to Bluetooth settings and pair with the remote (usually named 'AB Shutter3' or similar).
  - Once paired, use the remote to trigger your device's camera shutter for photos or to start/stop video recording

from up to 33 feet (10 meters) away.

5. **Selfie Stick Mode:** The tripod extension stick can be detached from the base and used as a handheld selfie stick. Attach your phone to the clip and use the wireless remote for convenient photo taking.

## Wireless Remote

With 33FT distance control




Image: The tripod stand configured for overhead shooting, ideal for recording cooking tutorials or crafting.

## Hands Free

for watching recipes



Image: The tripod stand positioned for stable, low-angle video recording, suitable for sports or fitness activities.

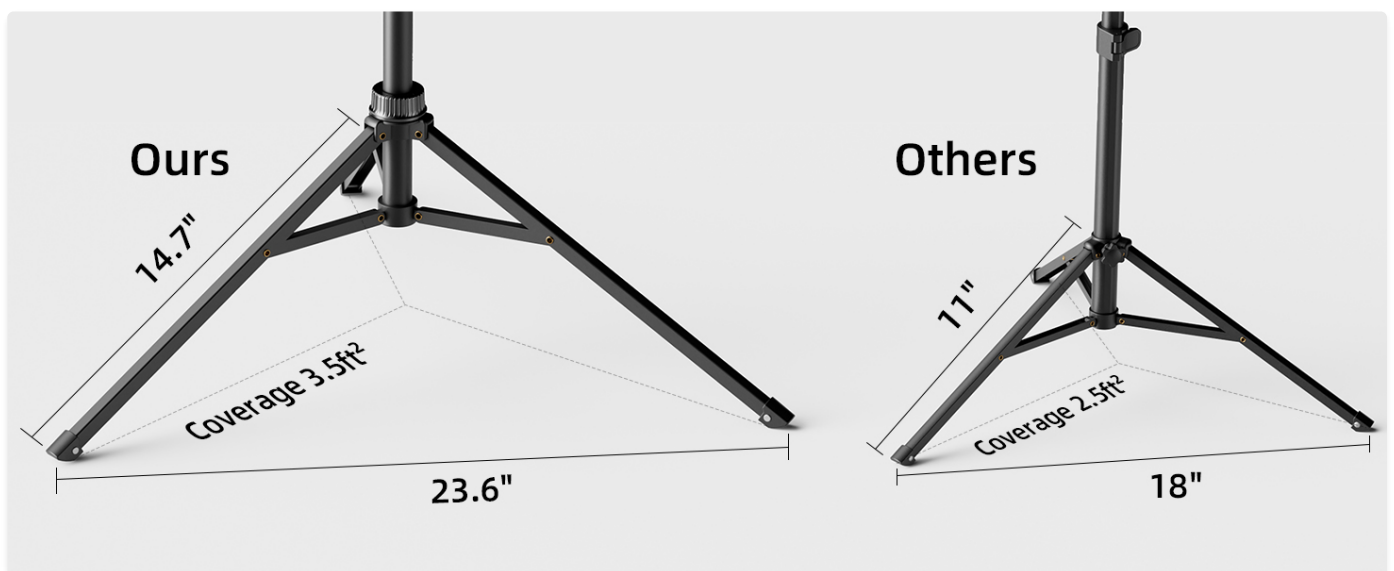

## Stable Tripod Structure

With tripod structure and anti-slip rubber pad for stable performance



Image: The tripod stand converted into a selfie stick, demonstrating its portability and remote control functionality.

## Maintenance

- **Cleaning:** Wipe the tripod stand with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, collapse the tripod stand and store it in the provided drawstring bag to protect it from dust and scratches. Store in a cool, dry place.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Do not overtighten.

## Troubleshooting

- **Tripod is unstable:** Ensure the tripod legs are fully extended and spread wide. Check that all flip locks on the extension stick are securely closed. Avoid placing heavy devices on the gooseneck at extreme angles that could unbalance the stand.
- **Gooseneck sags:** The gooseneck is reinforced for stability. If sagging occurs, ensure your device is within the recommended weight limit and that the gooseneck is not overextended or bent at an impossible angle. Re-adjust the gooseneck to a more balanced position.
- **Wireless remote not connecting:**
  - Check if the remote's battery (CR2032) needs replacement.
  - Ensure Bluetooth is enabled on your device.
  - Try unpairing and re-pairing the remote in your device's Bluetooth settings.
  - Ensure the remote is within the 33ft/10m operating range.
- **Device not fitting in holder:** Verify your device's dimensions. The phone clip supports 2.55-3.85 inches, and the tablet holder supports 4.3-10 inches. Do not force devices into the holders.

## Specifications

|                    |                                         |
|--------------------|-----------------------------------------|
| Product Dimensions | 2.4 x 2.41 x 84 inches (fully extended) |
| Item Weight        | 2.23 pounds                             |

|                             |                                                                    |
|-----------------------------|--------------------------------------------------------------------|
| Adjustable Height           | 17.4 inches to 84 inches (7 feet)                                  |
| Phone Clip Compatibility    | 2.55 - 3.85 inches wide (e.g., iPhone, Android phones)             |
| Tablet Holder Compatibility | 4.3 - 10 inches wide (e.g., iPad Pro 12.9", Kindle, other tablets) |
| Gooseneck Length            | 16.9 inches                                                        |
| Remote Control Range        | Up to 33 feet (10 meters)                                          |
| Remote Battery              | 1 CR2032 battery (included)                                        |

# Flexible Gooseneck Tube

For your 360°adjustment



Image: Illustration of the universal phone clip compatibility, showing various phone models and accessories like fill lights and microphones.

## Warranty and Support

Weilisi products are manufactured with quality and reliability in mind. For any questions, concerns, or warranty claims, please refer to the contact information provided with your purchase or visit the official Weilisi website for customer support. Please retain your proof of purchase for warranty validation.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0D7M6YFLS>

More documents and user manuals: <https://manuals.plus/>