

DownyPaws DPWFP6FSS

DownyPaws Wireless Cat Water Fountain (Model: DPWFP6FSS) - User Manual

Model: DPWFP6FSS | Brand: DownyPaws

1. PRODUCT OVERVIEW

The DownyPaws Wireless Cat Water Fountain (Model: DPWFP6FSS) is a battery-operated, stainless steel pet water dispenser designed to provide fresh, filtered water for cats and small to medium-sized dogs. Its cordless design allows for flexible placement throughout your home, ensuring your pets have access to water wherever they are. Key features include:

- **Wireless and Portable Design:** Offers ultimate convenience for placement in any room without power cord limitations.
- **Dual Water Modes:** Features a motion-sensing mode that dispenses water when a pet approaches, and a time mode that releases water every 15 minutes for 20 seconds.
- **Long-lasting Battery:** Equipped with a 4,000mAh rechargeable battery, providing up to a week of operation on a single charge with a 3-liter water tank. The detachable design simplifies charging.
- **Food-Grade Stainless Steel:** Constructed from durable, easy-to-clean, and dishwasher-safe stainless steel for pet health.
- **Quiet Operation:** Engineered with multiple noise reduction designs, including a super-quiet pump and optimized water flow, to minimize sound.
- **5-Level Filtration System:** Ensures water purity by removing odors, heavy metals, hair, and impurities through activated carbon, ion exchange resin, medical stone, non-woven fabric, and a high-density sponge.



Figure 1: Main view of the DownyPaws Wireless Cat Water Fountain.

2. SETUP INSTRUCTIONS

Follow these steps to set up your DownyPaws Wireless Cat Water Fountain:

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure you have the stainless steel water tank, pump unit with battery, filter, sponge, USB Type-C cable, and cleaning brush.
2. **Clean Components:** Wash the stainless steel water tank and tray thoroughly with soap and water. Rinse well. The stainless steel parts are dishwasher safe. **Note: Do not immerse the battery unit in water or place plastic parts in the dishwasher.**
3. **Install Filter:** Insert the filter and sponge into their designated slots within the pump assembly. Ensure they are seated correctly.
4. **Assemble Pump Unit:** Place the assembled pump unit into the water tank. Ensure it is securely positioned.
5. **Fill Water Tank:** Fill the stainless steel water tank with clean water up to the maximum fill line. The fountain has a 3-liter capacity.
6. **Charge Battery:** Before first use, fully charge the detachable battery unit using the provided USB Type-C cable. The battery indicator will show charging status.
7. **Place Fountain:** Position the assembled and filled fountain in your desired location. Its wireless design allows for

flexible placement.

Upgraded

“Water Bowl and Trays”

Food grade stainless steel water bowl
and tray for your pet's health



Figure 2: The food-grade stainless steel water bowl and tray for pet health.

3. OPERATING INSTRUCTIONS

The DownyPaws Wireless Cat Water Fountain offers two operating modes:

- **Motion-Sensing Mode:** In this mode, the fountain automatically dispenses water when your pet approaches within its detection range. This encourages pets to drink more by simulating a fresh water source.
- **Time Mode:** In this mode, the fountain dispenses water for 20 seconds at 15-minute intervals. This ensures a regular supply of fresh water, reminding pets to stay hydrated throughout the day.

Refer to the controls on the pump unit to switch between modes. The battery level indicator will help you monitor the charge status.

Two Water Modes

Sensor Mode and Timer Mode, tailored to meet their unique needs

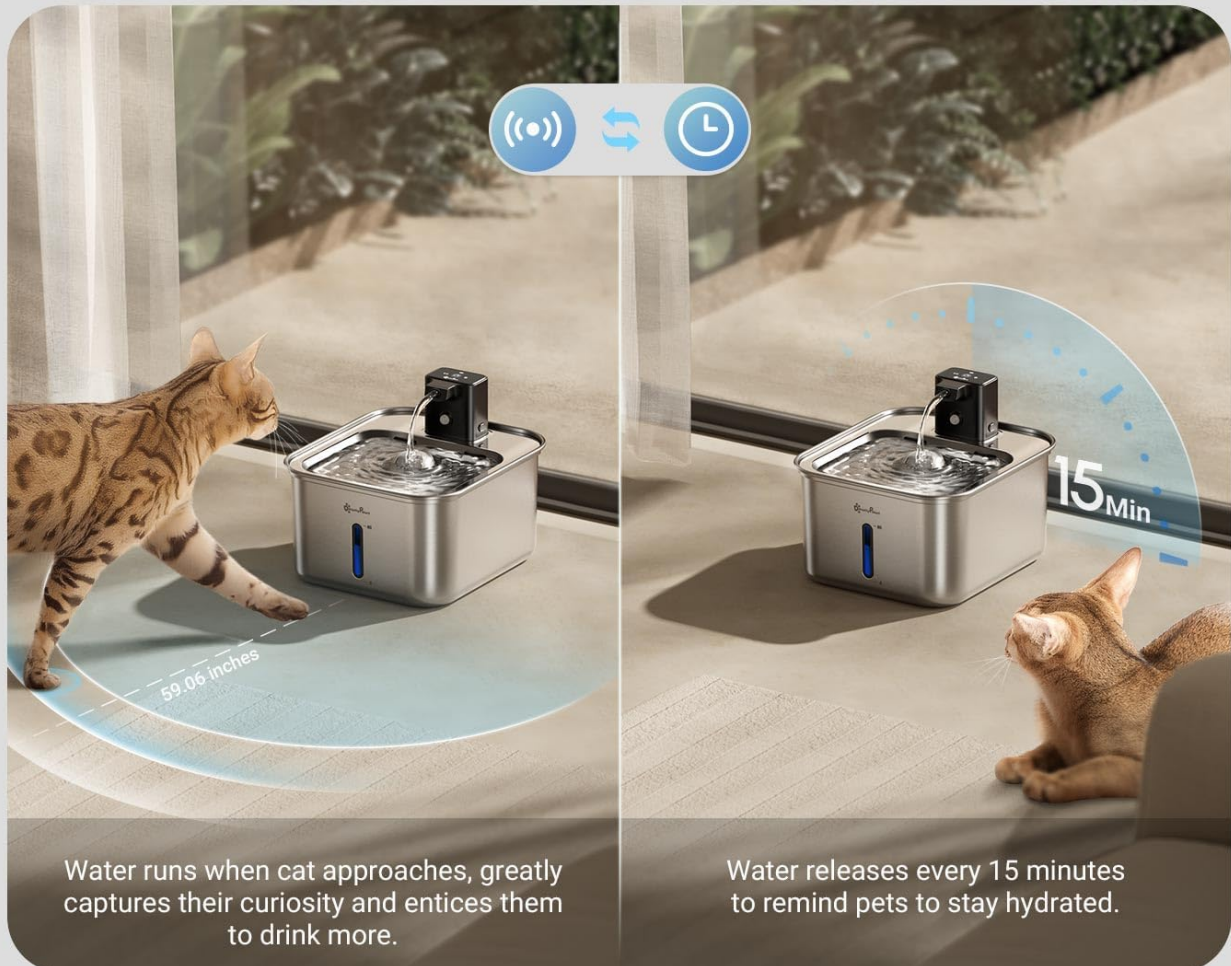


Figure 3: Illustration of the motion-sensing and time-based water dispensing modes.

Detachable Battery, Convenient Charging

Holds up to 30 Days on a single charge



Note: Battery life is caculated based on 1 cat household in Sensor Mode.

Figure 4: The detachable battery unit being charged via USB Type-C.

4. MAINTENANCE

Regular maintenance ensures the longevity and hygienic operation of your pet water fountain.

4.1. Cleaning

- **Daily:** Check water level and refill as needed.
- **Weekly:** Disassemble the fountain (approximately 10 seconds for disassembly). Wash the stainless steel water tank and tray with mild soap and water. The stainless steel components are dishwasher safe.
- **Monthly:** Clean the pump thoroughly. Remove any hair or debris that may have accumulated around the impeller. Use the provided cleaning brush for hard-to-reach areas.
- **Important:** The battery unit should never be immersed in water. Plastic parts of the pump assembly should be hand-washed and not placed in a dishwasher.

Easy Maintenance

10s disassembly and a dishwasher-safe tank make cleaning a breeze



Note: The battery unit should not be immersed in water, and plastic parts should not be placed in the dishwasher.

Figure 5: The stainless steel tank and tray are dishwasher safe for easy cleaning.

4.2. Filter Replacement

The 5-level filtration system requires regular filter replacement to maintain water quality. It is recommended to replace the filter and sponge every 2-4 weeks, depending on the number of pets and water hardness.

- Remove the old filter and sponge from the pump assembly.
- Rinse the new filter and sponge under running water before installation.
- Insert the new filter and sponge into their respective slots.
- Replacement filters can be purchased by searching for "B0CJDQSD89".

Every Sip Purified

4-layer filtration removes hair, odors, heavy metals and more

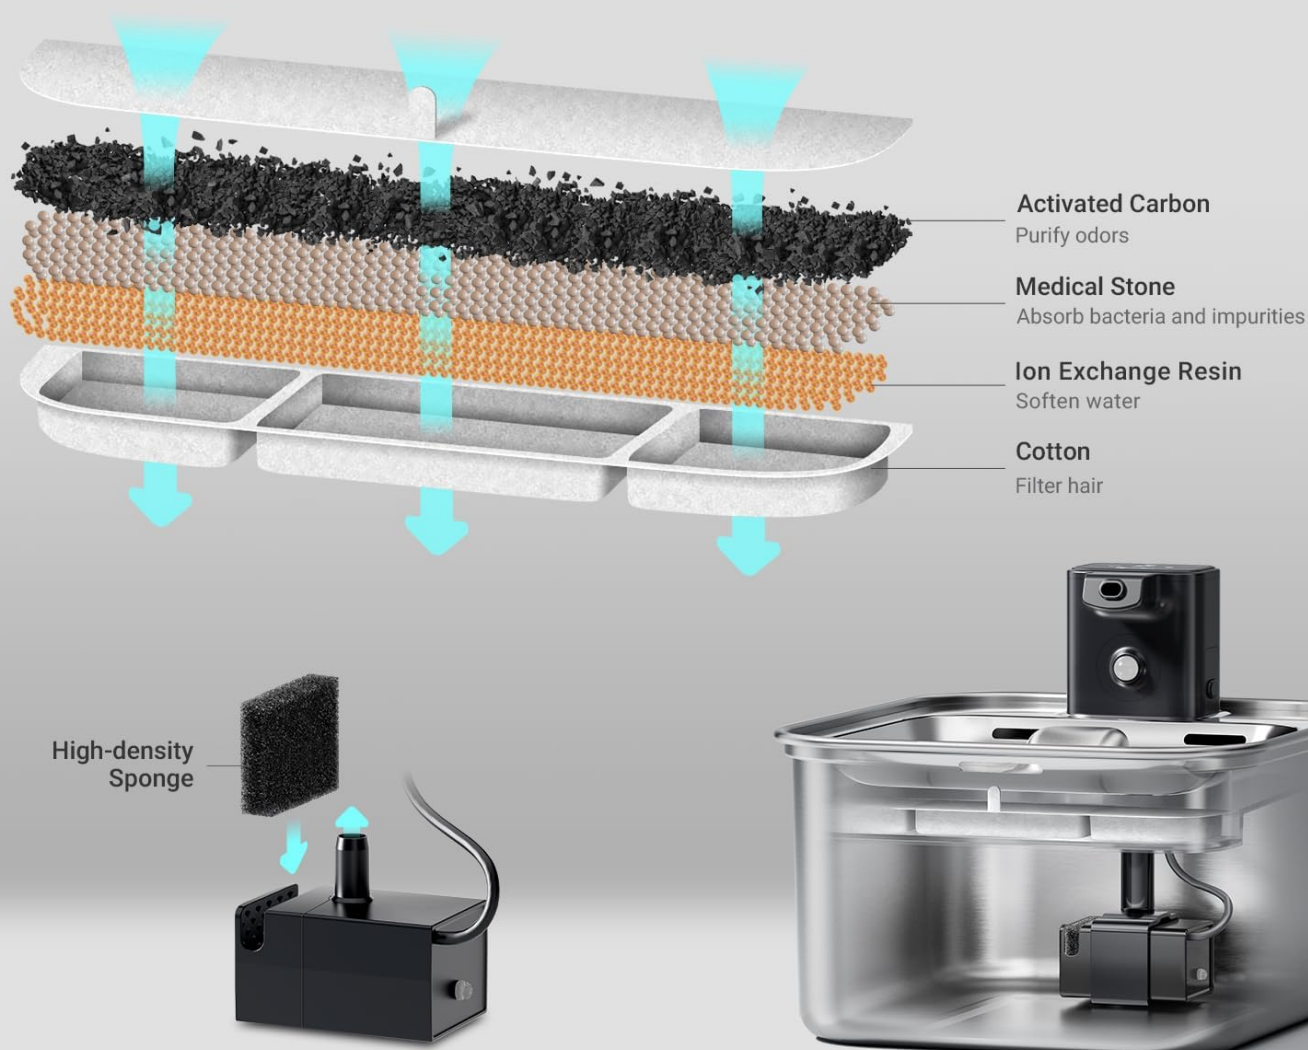


Figure 6: Diagram illustrating the 5-layer filtration system components.

5. TROUBLESHOOTING

If you encounter issues with your DownyPaws Wireless Cat Water Fountain, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fountain not dispensing water.	◦ Low battery. ◦ Water level too low. ◦ Pump clogged with debris (hair, food particles). ◦ Filter is clogged. ◦ Motion sensor obstructed or dirty (in motion-sensing mode).	◦ Recharge the battery unit. ◦ Refill the water tank to the appropriate level. ◦ Disassemble and clean the pump, especially the impeller. ◦ Replace the filter and sponge. ◦ Clean the motion sensor area and ensure no obstructions.
Water flow is weak or inconsistent.	◦ Low water level. ◦ Clogged pump or filter. ◦ Battery charge is low.	◦ Add more water. ◦ Clean the pump and replace the filter. ◦ Recharge the battery.
Excessive noise from the fountain.	◦ Low water level. ◦ Pump not properly seated or vibrating. ◦ Debris in the pump.	◦ Ensure water is above the minimum level. ◦ Check that the pump is securely placed and not touching the tank sides. ◦ Clean the pump thoroughly.
Battery not holding charge or charging slowly.	◦ Faulty charging cable or adapter. ◦ Battery degradation over time.	◦ Try a different USB Type-C cable and power adapter. ◦ Contact customer support for a replacement battery if within warranty.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	DPWFP6FSS
Capacity	3 Liters (101 oz)
Material	Food-Grade Stainless Steel
Product Dimensions (L x W x H)	22.3L x 19.8W x 17H Centimetres
Power Source	Battery Powered (4,000mAh Lithium Ion battery included)
Battery Life	Up to 30 days (based on 1 cat household in motion-sensing mode)
Filtration System	5-level (Activated Carbon, Ion Exchange Resin, Medical Stone, Non-woven Fabric, High-density Sponge)
Special Features	Two Water Modes (Motion Detector, Timer), Cordless Design, Quiet Operation
Included Components	1 x Fountain Unit, 1 x Cleaning Brush, 1 x Filter & Sponge, 1 x Manual, 1 x USB Type-C Cable
Target Species	Cat, Dog (Small to Medium)
Manufacturer	DownyPaws
Country of Origin	China



Figure 7: Product dimensions of the DownyPaws Wireless Cat Water Fountain.

7. WARRANTY AND SUPPORT

The DownyPaws Wireless Cat Water Fountain (Model: DPWFP6FSS) comes with a **1-year warranty** from the date of purchase.

This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

For warranty claims, technical support, or any questions regarding your product, please contact DownyPaws customer service. Refer to the contact information provided with your purchase or visit the official DownyPaws website for support details.

When contacting support, please have your product model number (DPWFP6FSS) and proof of purchase readily available.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7M9FQJW>

More documents and user manuals: **<https://manuals.plus/>**